


PARTS LIST

REPLACEMENT PARTS - MODEL TBE515
4-CYCLE GAS EDGER

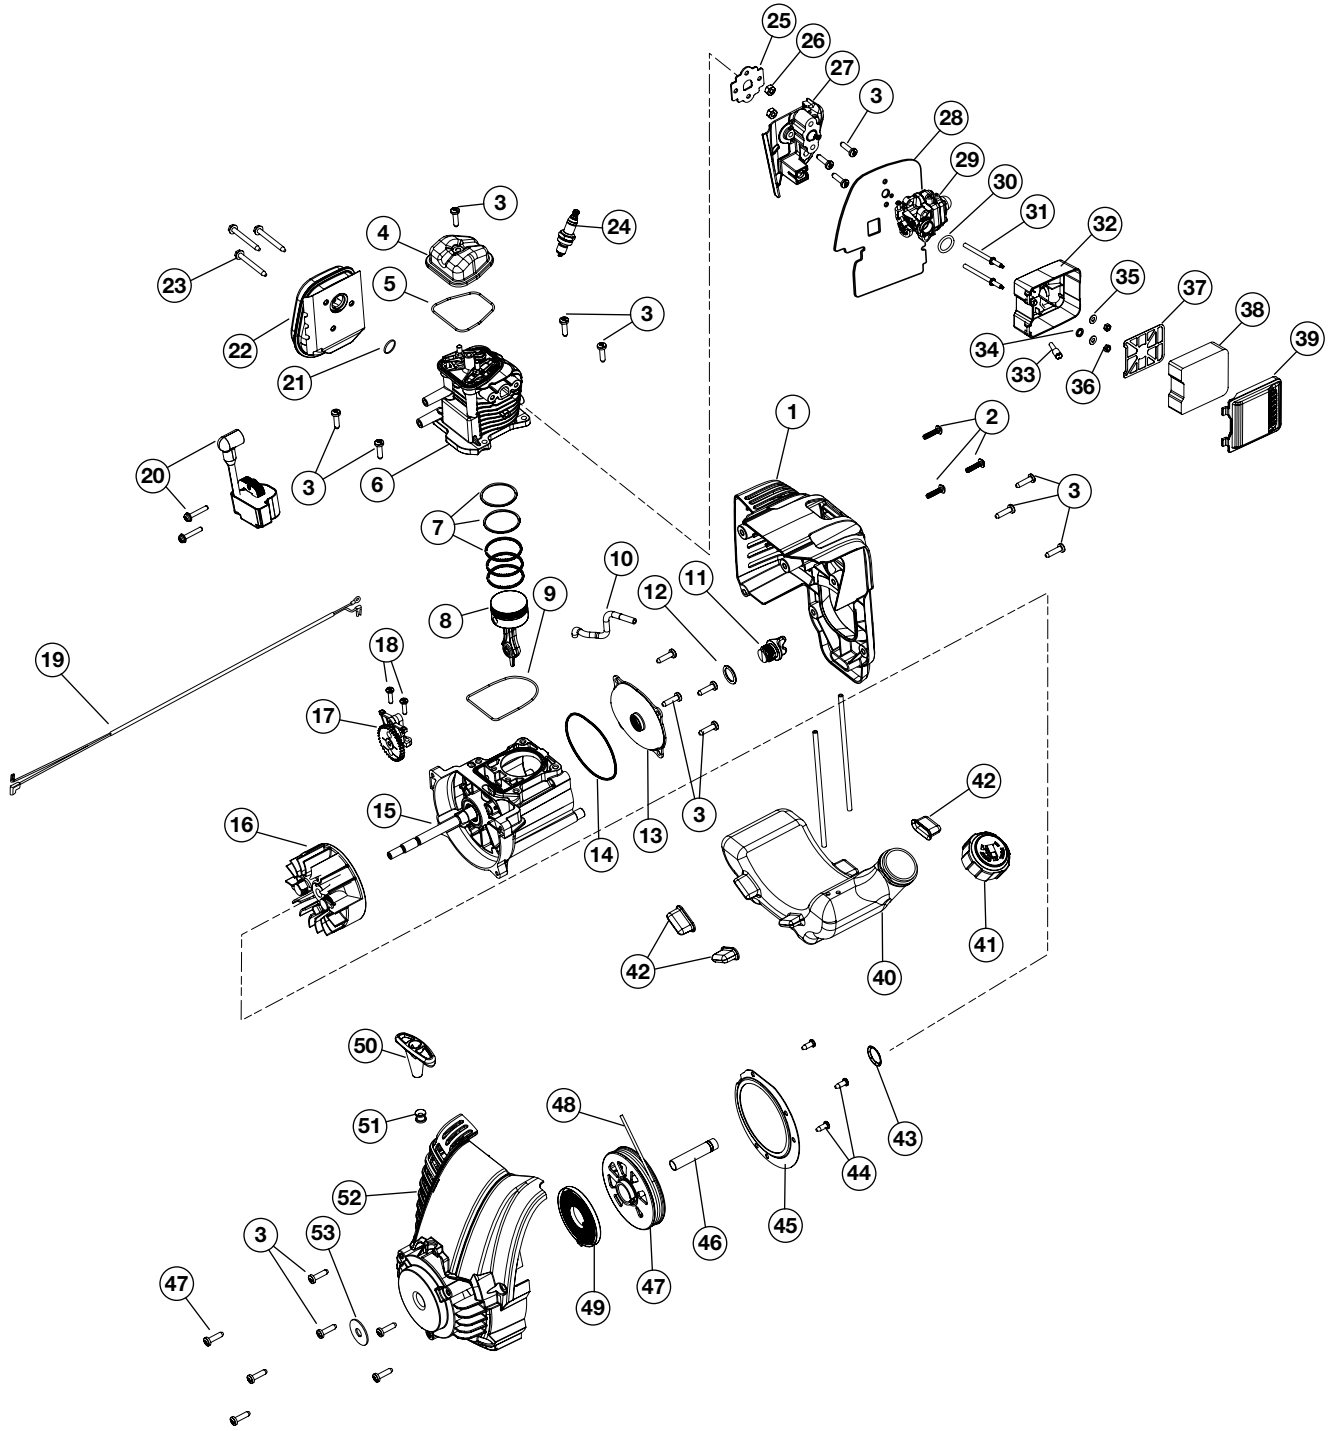

PARTS LIST

**REPLACEMENT PARTS - MODEL TBE515
4-CYCLE GAS EDGER**

Item	Part No.	Description	Item	Part No.	Description
1	753-05206	Engine Cover Assembly (includes 2 & 3)	30	753-04030	O-Ring
2	753-04595	Cover Screw	31	753-05507	Air Filter Mounting Screw
3	753-05377	Screw	32	753-05505	Air Cleaner Cover Assembly (includes 33, 34 & 37-39)
4	753-05209	Rocker Cover	33	791-182097	Breather Tube
5	753-05210	Rocker Cover O-Ring	34	791-181000	Grommet Washer
6	753-05228	Cylinder Assembly (includes 3, 5 & 9)	35	791-182409	Washer
7	753-05229	Piston Ring Assembly	36	753-04993	Nut
8	753-05230	Piston Assembly (includes 7)	37	753-182657	Air Filter Plate
9	753-05232	Cylinder O-Ring	38	753-05506	Air Filter
10	791-182379	Breather Hose	39	791-182659	Air Filter Cover
11	753-05236	Oil Plug (includes 12)	40	753-05256	Fuel Tank Assembly w/Fuel Lines (includes 41)
12	791-182290	Oil Plug O-Ring	41	753-1229	Fuel Cap
13	753-05237	Crankcase Cover	42	753-05259	Fuel Tank Pads
14	753-05238	Crankcase Cover O-ring	43	753-05260	Push Nut
15	753-05503	Crankcase Assembly (includes 9, 10, 14 & 16)	44	753-1202	Pressure Plate Screw
16	753-05240	Flywheel Assembly	45	753-05074	Pressure Plate (includes 44)
17	753-05241	Cam Bracket Assembly (includes 18)	46	753-05078	Spacer
18	753-05242	Cam Bracket Screw	47	753-05435	Starter Assembly (includes 48)
19	753-05504	Lead Wires	48	753-05509	Rope
20	753-05243	Module Assembly	49	753-04286	Recoil Spring
21	753-05244	Muffler Gasket	50	791-181079	Handle
22	753-05245	Muffler Assembly (includes 21 & 23)	51	791-611061	Rope Guide
23	753-05246	Muffler Screw	52	753-05262	Starter Housing Assembly (includes 3 & 43-51)
24	753-05255	Spark Plug	53	791-182396	Washer
25	753-05247	Insulator Gasket	54	753-04595	Screw
26	753-05248	Nut	*	753-05297	Spark Arrestor Assembly
27	753-05249	Insulator (includes 28)	*	753-05511	Shortblock Assembly (includes 3-12, 14, 15, 17 & 24)
28	753-05366	Carburetor Gasket			
29	753-05251	Carburetor w/Primer			

PARTS LIST

**REPLACEMENT PARTS - MODEL TBE515
4-CYCLE GAS EDGER**

Item	Part No.	Description
1	753-05563	Handle Assembly (includes 2-7)
2	753-05517	Throttle Trigger
3	753-05518	Throttle Trigger Spring
4	753-05515	Blade Lockout Lever
5	753-05522	Switch Assembly
6	753-05523	Upper Handle Screw & Nut Assembly
7	753-05514	Throttle Lever Assembly
8	753-05524	Starter Rope Guide Assembly
9	753-05558	Middle Handle Assembly (includes 10)
10	753-05526	Middle Handle Screw & Nut Assembly
11	753-05557	Lower Handle
12	753-05528	Lower Handle Screw & Nut Assembly
13	753-05561	Clutch Cable
14	753-05539	Edger Frame
15	753-05525	Lock Nut
16	753-05530	Wheel
17	753-05529	Wheel Bolt
18	753-05556	Spacer
19	753-05538	Spacer Screw
20	753-05531	Height Adjustment Lever Assembly
21	753-05532	Washer
22	753-05534	Shoulder Screw
23	753-05535	Nut
24	753-05533	Washer
25	753-05536	Pivot Arm

Item	Part No.	Description
26	753-05537	Height Adjustment Spacer
27	753-05538	Spindle Plate Screw
28	753-05559	Spindle Spacer
29	753-05528	Screw
30	753-05553	Belt Retainer
31	753-05540	Idler Pulley Assembly
32	753-05541	Shoulder Screw
33	753-05560	Belt
34	753-05554	Screw
35	753-05555	Washer
36	753-05542	Pulley
37	753-05543	Blade Spindle
38	753-05544	Spindle Plate
39	753-05550	Bearing
40	753-05545	Bearing Cup
41	753-05546	Washer
42	753-05547	Blade Guard
43	753-05548	Screw
44	753-05562	Edger Blade
45	753-05549	Nut
46	753-05551	Screw
47	753-05552	Belt Cover