


PARTS LIST - GRASS CATCHER

Index No.	Part No.	Description	Index No.	Part No.	Description
1	012500	Bracket - Mounting RH	23	176453	Strap - rubber w/metal hook
2	012492	Bracket - Mounting LH	24	020560	Hook - hold-down
3	382143	Bolt - Hex 5/16-18 x 1 (Grade 8)	25	382119	Nut - push
4	616342	Nut - Hex 5/16-18 Center lock	26	114272	Tube - discharge, upper
5	382135	Washer - Flat 5/16	27	020339	Latch - upper tube
6	020347	Frame - bag support	28	715052	Bolt - Hex 1/4-20 x 3/4
7	489013	Pin - clevis	29	616375	Nut - Hex 1/4-20 ctr. lock
8	616227	Hairpin Cotter	30	114645	Chute - lower, 43 inch deck
9	020362	Rod - support	087361		*Chute - lower, 46 inch deck
10	114298	Cover - grass catcher	31	098558	Lever - chute latch 43 inch deck
11	450858	Screw - tapflat 1/4-20 x 3/4	34	088054	Lever - chute latch 46 inch deck
12	382085	Screw - tapflat 1/4-20 x 1 1/2	35	159483	Screw - tap 5/16-18 x 1/2
13	382093	Spacer	36	110130	Tip - latch lever
14	382101	Spacer	37	715292	Bolt - hex 1/4-20 x 1
15	114314	Screen - Vent	38	159814	Bolt-eye 5/16-18 x 2
16	114306	Baffle - grass deflector	39	150136	Nut - hex Keps 5/16-18
17	159491	Screw - slotted 1/4-20 x 5/8	40	161166	Bag - grass collector, w/frame
18	460923	Washer - flat 1/4	41	005751	Decal - DANGER
19	715037	Nut - hex Keps 1/4-20	42	187328	Decal - Full Indicator
20	114322	Lid - grass catcher	43	159509	Washer
21	020867	Rod - pivot			
22	382127	Pin - cotter			

*This chute is not included in kit. It is shipped with Model 720 riding mower.

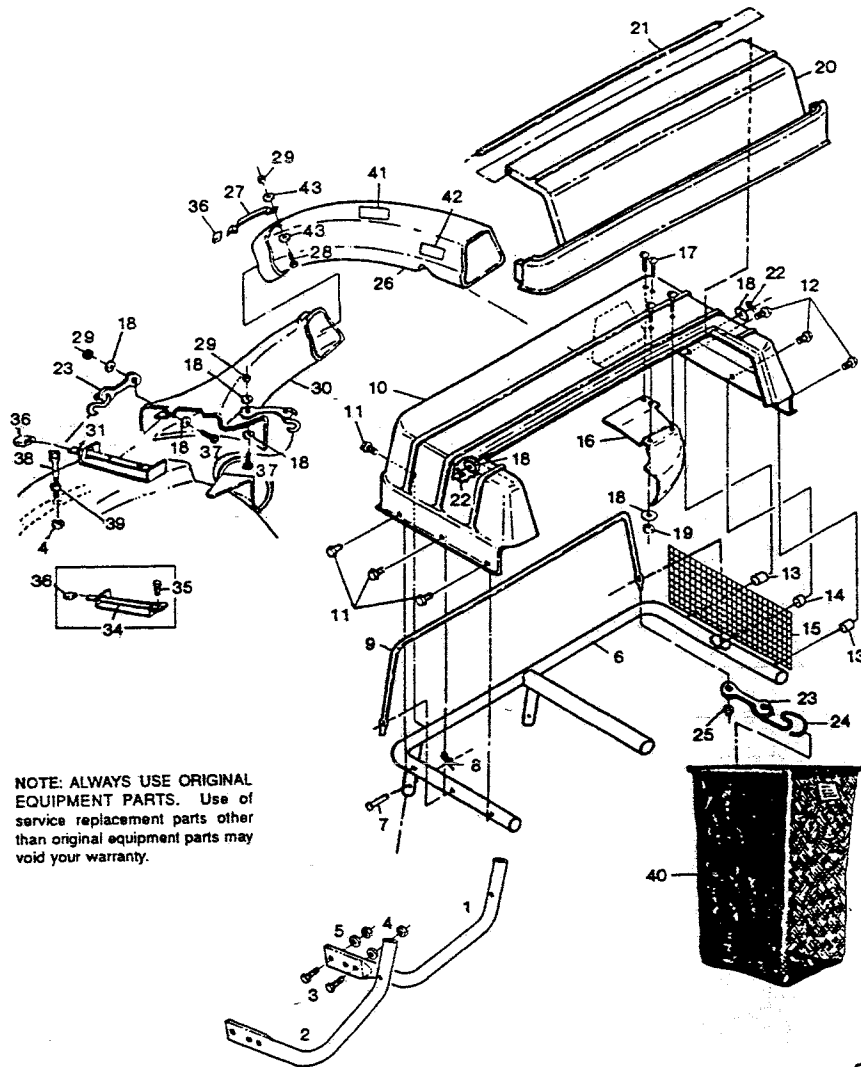

NOTE: ALWAYS USE ORIGINAL EQUIPMENT PARTS. Use of service replacement parts other than original equipment parts may void your warranty.

S/N 230086
O/M 188342