


Ref #	Part Number	Qty	Description
1	753-05246		Muffler Screws
2	753-05900		Muffler Assembly
3	753-05244		Muffler Gasket
4	791-181025		Screw
5	753-05901		Rocker Cover
6	753-05902		O-Ring
7	791-181003		Screw
8	753-05903		Throttle Cable
9	753-05673		Insulator Gasket
10	753-05248		Nut
11	753-05904		Insulator
12	753-05905		Carburetor Gasket
13	753-05908		Carburetor
14	791-181751		Carburetor O-Ring
15	753-05253		Screw
16	753-04223		Air Cleaner Assembly
17	791-181757		Air Filter
18	753-05687		Nut
19	753-05906		Flywheel Assembly
20	753-05907		Module
21	753-05400		Oil Plug
22	753-05909		Oil Fill Tube
23	753-05377		Screw
24	753-05910		O-Ring
25	753-05784		Spark Plug
26	753-05911		Lead Wire
	753-05912		Shortblock Assembly
	753-05966		Valve

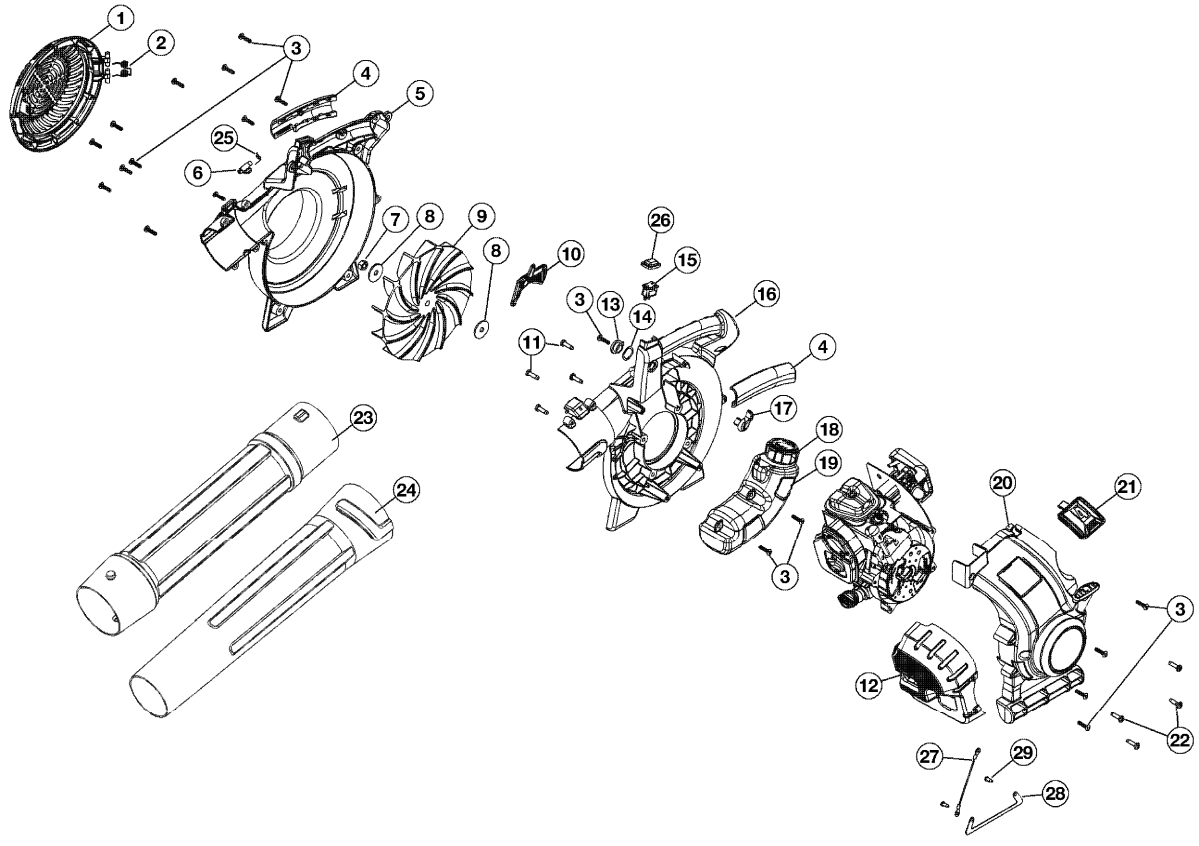

Ref #	Part Number	Qty	Description
1	753-05917		Intake Cover
2	753-05918		Spring
3	753-04595		Screw
4	753-05919		Handle Grips
5	753-05920		Impeller Housing
6	753-05926		Latch Tube
7	753-05927		Nut
8	753-05928		Washer
9	753-05929		Impeller
10	753-05930		Throttle Trigger
11	791-181003		Screw
12	753-05931		Muffler Cover
13	753-05924		Inner Trigger Lock
14	753-05925		Wavey Washer
15	791-182405		Switch
16	753-05921		Impeller Housing
17	753-05932		Outer Trigger Lock
18	753-05289		Fuel Cap
19	753-05933		Fuel Tank Assembly
20	753-05941		Engine Cover Assembly
21	753-05935		Spark Plug Cover
22	753-05377		Screw
23	753-05936		Upper Tube
24	753-05937		Lower Tube
25	753-05939		Latch Spring
26	753-05942		Switch Cover
27	753-05964		Wire Ground
28	753-05965		Strap Ground
29	753-01202		Screw