


Ref #	Part Number	Qty	Description
1	753-05669		Muffler Assembly (Incl. Ref No. 2)
2	753-05670		Muffler Gasket
3	710-04604		Screw
4	753-05671		Rocker Cover
5	753-05672		Rocker Cover O-Ring
6	794-00043		Spark Plug
7	753-05673		Insulator Gasket
8	712-04099		Nut
9	753-05674		Insulator
10	791-181003		Screw
11	753-05675		Carburetor Gasket
12	753-05676		Carburetor
13	791-181751		Carburetor O-Ring
14	710-04517		Screw
15	753-05711		Air Cleaner Assembly (Incl. Ref No. 16)
16	753-05677		Air Filter
17	753-05970		Throttle Cable
18	753-05681		Cylinder Gasket
19	753-05635		Pawl Assembly
20	753-05400		Oil Plug
21	753-05682		Oil Fill Tube (Incl. Ref No. 3)
22	712-04137		Nut
23	753-05688		Flywheel Assembly
24	753-06003		Module Assembly
25	753-05690		Lead Wire
	753-05974		Short Block Assembly
	753-05297		Spark Arrestor

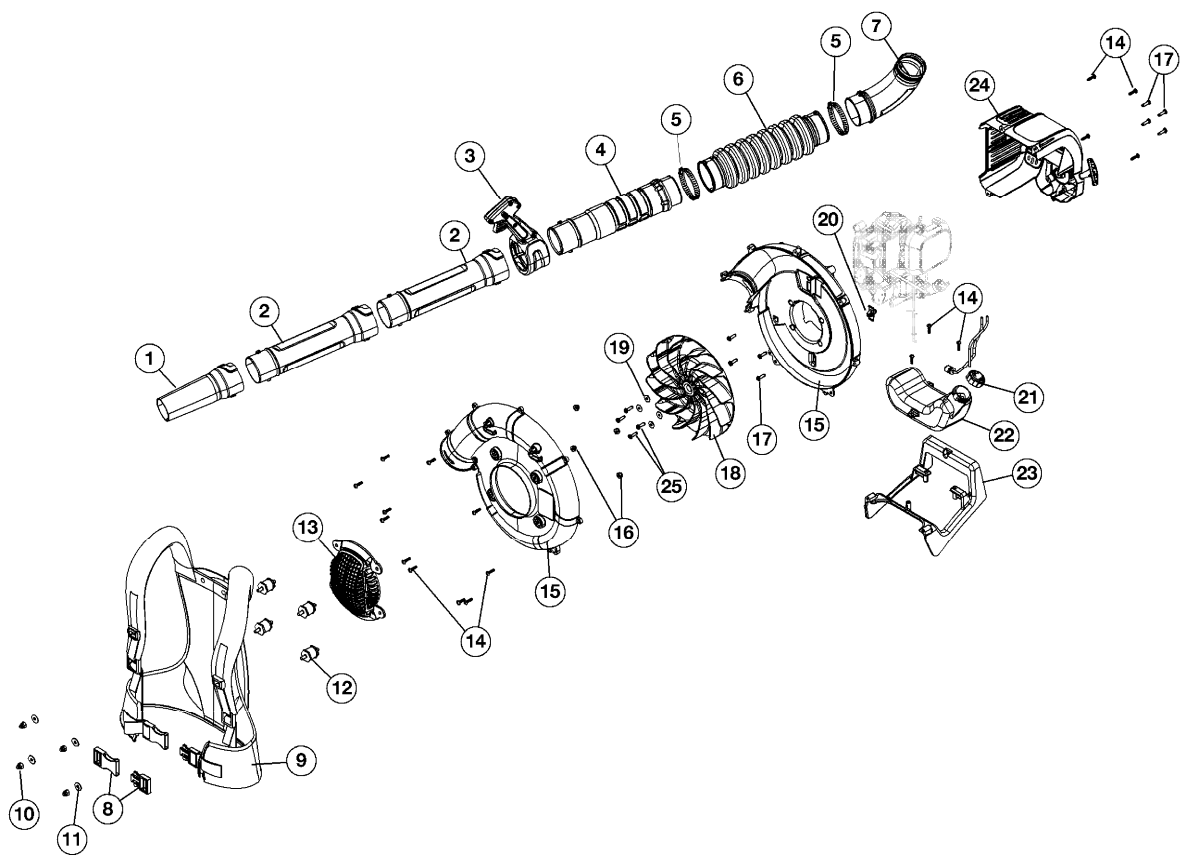

Ref #	Part Number	Qty	Description
1	753-06000		Nozzle
2	753-05971		Lower Blower Tube
3	753-05975		Throttle Grip Assembly
4	753-05991		Upper Blower Tube
5	726-04080		Clamp
6	753-05641		Flex Tube
7	753-05990		Elbow Tube
8	731-06191		Harness Clip
9	753-05656		Harness (Incl. Ref No. 8)
10	912-0442		Nut
11	750-04929		Spacer
12	753-05648		Isolator Mount
13	753-05786		Intake Cover
14	710-04194		Screw
15	753-05658		Impeller Housing Assembly
16	791-180050		Nut
17	791-181003		Screw
18	753-05989		Impeller (Incl. Ref No. 17)
19	791-182409		Washer
20	731-06074		Throttle Retaining Clip
21	753-05289		Fuel Cap
22	753-05662		Fuel Tank Assembly (Incl. Ref No. 21)
23	753-05663		Stand
24	753-05660		Engine Cover Assembly
25	791-182348		Screw