


Ref #	Part Number	Qty	Description
1	753-04927		Throttle Housing Assembly (Includes 2-3)
2	791-610314		Throttle Trigger Spring
3	791-180975		Throttle Trigger
4	753-04901		Throttle Cable
5	791-153064		D-Handle (includes 6)
6	791-181587		D-Handle Hardware Assembly
7	753-04330		Drive Shaft Housing Assembly
8	753-05211		Flexible Drive Shaft
9	791-180547		Guard Mounting Screw Assembly
10	791-180548		Guard Assembly (includes 11)
11	791-180553		Blade Assembly
12	791-145569		Anti-Rotation Screw
13	753-05185		Gearbox Assembly (includes 14-18)
14	791-153619		Outer Spool and Eyelet Assembly (includes 15)
15	791-610660		Retainer (10 pack)
16	791-610317B		Spring
17	753-1155		Inner Reel
18	791-153066B		Bump Head Knob Assembly
	791-153577		Spool and Line (25 ft.) Assembly (Optional Accessory)

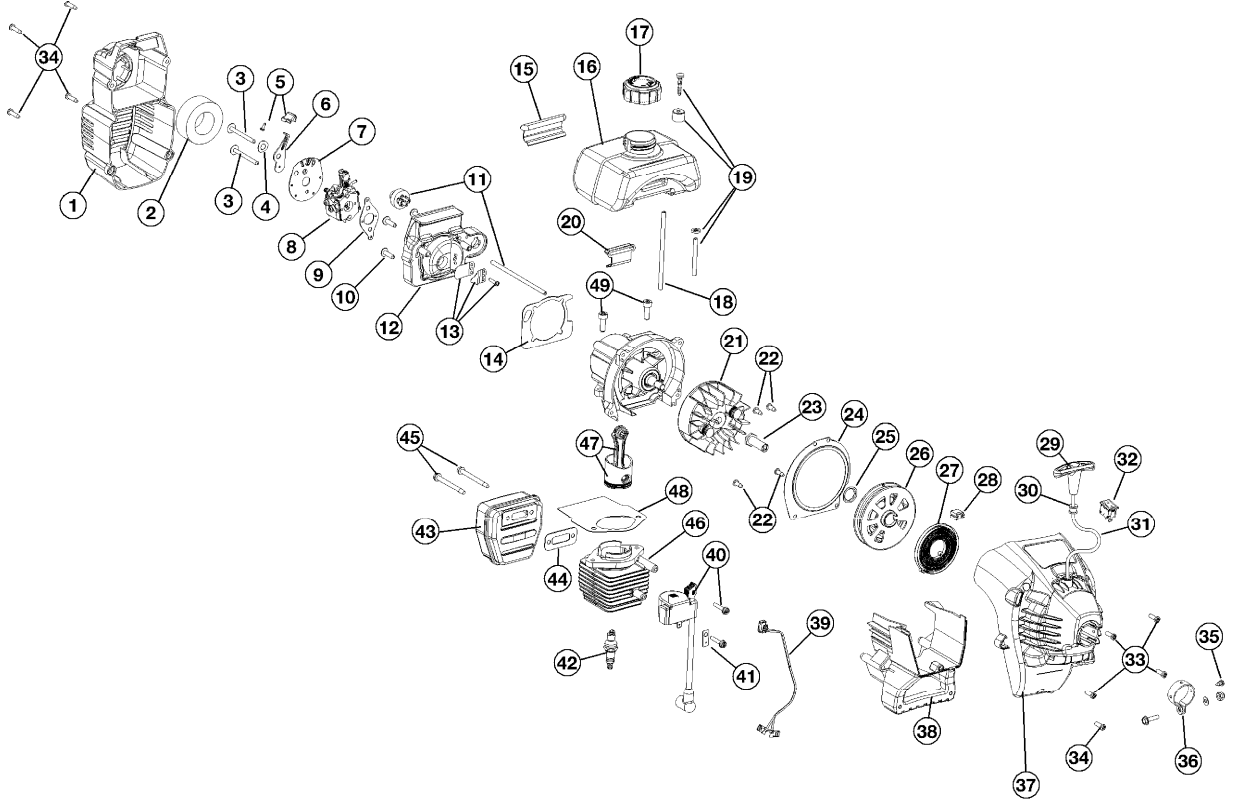

Ref #	Part Number	Qty	Description
1	753-04511		Air Cleaner Cover Assembly (includes 2 & 34)
2	791-180350B		Air Cleaner Filter
3	791-180351		Carburetor Mounting Screws
4	791-180226		Wavey Washer
5	791-182202		Choke Knob & Screw
6	753-04418		Choke Lever Assembly (includes 5)
7	753-04419		Choke Lever & Plate (includes 6)
8	753-04408		Carburetor Assembly (includes 9 & 19)
9	791-610675		Carburetor Gasket
10	791-181860		Carb Mount Screw
11	791-683974B		Primer and Hose Assembly
12	753-1196		Carburetor Mount Assembly (Includes 10, 13 & 14)
13	791-684451		Reed Assembly
14	753-1208		Carburetor Mount Gasket
15	791-612134		Rear Mounting Pad
16	753-04285		Fuel Tank Assembly (includes 17-19)
17	791-182612		Fuel Cap Assembly
18	791-181086		Fuel Return Line
19	791-682039		Fuel Line Assembly
20	791-145308		Front Mounting Pad
21	791-182736		Flywheel Assembly
22	753-1202		Plate Screw
23	791-610303		Square Nut Drive
24	753-04928		Pressure Plate (includes 22 & 28)
25	753-04288		Palnut
26	753-04823		Recoil Pulley Assembly (includes 25 & 31)
27	753-04286		Recoil Spring
28	753-04824		Eyelet Retainer
29	791-181079		Pull Handle
30	791-611061		Rope Guide
31	791-613103		Rope
32	791-182405		Switch Assembly (includes 39)
33	791-181862		Housing Screw
34	791-181345		Cover Screw
35	753-04466		Anti Rotation Screw
36	753-05056		Clamp Assembly (includes 35)
37	753-05422		Starter Housing Assembly (includes 22 & 24-36)
38	753-05091		Shroud Extension and Stand (includes 34)
39	753-04290		Wire Lead
40	753-04324		Module Assembly
41	791-611063		Ground Tab
42	791-610311B		Spark Plug
43	753-05169		Muffler Assembly (Includes 44, 45 & Spark Arrestor)
44	753-04619		Exhaust Gasket
45	753-04620		Muffler Mounting Bolt Assembly
46	753-04814		Cylinder Assembly (includes 48 & 49)
47	753-04367		Piston & Rod Assembly
48	753-04182		Cylinder Gasket
49	791-182723		Cylinder Bolt
	753-1209		Piston Ring
	753-04826		Short Block Assembly (Includes Crankcase, 10, 42 & 46-49)