



Ref #	Part Number	Qty	Description
1	753-06243		Rear Cover Assembly
2	791-181862		Starter Screw
3	753-06244		Starter Assembly
4	753-06245		Rear Engine Cover
5	791-181345		Cover Screw
6	753-06104		Adapter
7	753-06091		Pawl Assembly
8	753-06246		Flywheel Assembly
9	753-06247		Washer
10	753-06248		Spacer
11	753-05860		Clutch Assembly
12	753-06249		Clutch Cover Assembly
13	791-182519		Anti Rotation Screw
14	753-04003		Clamp Screw
15	791-180217		Clamp Nut
16	753-06182		Muffler Assembly
17	753-04619		Muffler Gasket
18	753-06250		Fuel Tank Assembly
19	791-181930		Tank Screw
20	753-05057		Fuel Cap
21	791-182366		U-Shaped Nut
22	753-05877		Lead Wires
23	753-06251		Throttle Cable
24	753-05420		Module Assembly
25	753-06252		Cylinder Gasket
26	710-04715		Cylinder Bolt
27	753-06193		Spark Plug
28	753-06189		Insulator Assembly
29	753-06184		Insulator O-Ring
30	753-06185		Carburetor O-Ring
31	753-06190		Carburetor
32	753-06253		Carburetor Gasket
33	753-06191		Aircleaner Assembly
34	753-06085		Aircleaner Filter
	753-06254		Short Block Assembly
	49M2027P953		Electric Starter
	49MESCBP953		Power Start Bit
	737-04041		Oil-2 cycle 3.20 oz Bottle

Ref #	Part Number	Qty	Description
1	753-04234		Throttle Housing Assembly
2	791-182405		Switch
3	753-04119		Throttle Trigger
4	791-182690		Throttle Trigger Spring
5	753-04344		Upper Shaft Housing Assembly
6	753-05461		D-Handle
7	791-181587		D-Handle Hardware Assembly
8	753-1190		Split Boom Coupler
9	791-182057		Anti Rotation Screw
10	791-181617		Bolt
11	791-181618B		Adjustment Knob
12	712-04018A		Knob Retainer Nut
13	753-04508		Lower Shaft Housing Assembly
14	753-04282		Shield Mounting Hardware
15	753-04283		Shield Assembly
16	791-180553		Blade Assembly
17	753-04284		Outer Spool Assembly
18	791-610660		Retainer
19	791-610317B		Spring
20	753-1155		Inner Reel
21	791-153066B		Bump Head Knob Assembly
	953-1156		Reel & Line Assembly
	753-05778		Fixed Line Insert
	791-180920		.095 Replacement Line