


| Ref # | Part Number | Qty | Description                     |
|-------|-------------|-----|---------------------------------|
| 1     | 753-06134   |     | Engine Cover Assembly           |
| 2     | 710-04194   |     | Cover Screw                     |
| 3     | 791-181003  |     | Screw                           |
| 4     | 753-05209   |     | Rocker Cover                    |
| 5     | 721-04132   |     | Rocker Cover O-Ring             |
| 6     | 753-06223   |     | Cylinder Assembly               |
| 7     | 753-05229   |     | Piston Ring Assembly            |
| 8     | 753-05973   |     | Piston Assembly                 |
| 9     | 753-05232   |     | Cylinder O-Ring                 |
| 10    | 791-182379  |     | Breather Hose                   |
| 11    | 753-05408   |     | Oil Plug                        |
| 12    | 791-182290  |     | Oil Plug O-Ring                 |
| 13    | 753-06111   |     | Crankcase Cover                 |
| 14    | 753-05238   |     | Crankcase Cover O-ring          |
| 15    | 753-06224   |     | Crankcase Assembly              |
| 16    | 753-06221   |     | Flywheel Assembly               |
| 17    | 753-05241   |     | Cam Bracket Assembly            |
| 18    | 710-04584   |     | Cam Bracket Screw               |
| 19    | 753-05264   |     | Lead Wires                      |
| 20    | 753-05243   |     | Module Assembly                 |
| 21    | 753-05244   |     | Muffler Gasket                  |
| 22    | 753-05245   |     | Muffler Assembly                |
| 23    | 710-04487   |     | Muffler Screw                   |
| 24    | 753-05255   |     | Spark Plug                      |
| 25    | 753-05247   |     | Insulator Gasket                |
| 26    | 712-04099   |     | Nut                             |
| 27    | 753-05249   |     | Insulator                       |
| 28    | 753-05366   |     | Carburetor Gasket               |
| 29    | 753-06220   |     | Carburetor                      |
| 30    | 791-181751  |     | O-Ring                          |
| 31    | 753-05252   |     | Air Cleaner Cover Assembly      |
| 32    | 753-05254   |     | Air Filter                      |
| 33    | 710-04517   |     | Screw                           |
| 34    | 753-05256   |     | Fuel Tank Assembly w/Fuel Lines |
| 35    | 753-1229    |     | Fuel Cap                        |
| 36    | 753-05259   |     | Fuel Tank Pads                  |
| 37    | 753-04288   |     | Palnut                          |
| 38    | 753-1202    |     | Pressure Plate Screw            |
| 39    | 753-05074   |     | Pressure Plate                  |
| 40    | 750-04434   |     | Spacer                          |
| 41    | 753-06222   |     | Starter Assembly                |
| 42    | 753-05840   |     | Rope                            |
| 43    | 753-04286   |     | Recoil Spring                   |
| 44    | 631-04164A  |     | Handle                          |
| 45    | 791-611061  |     | Rope Guide                      |
| 46    | 753-06226   |     | Starter Housing Assembly        |
| 47    | 9162-1      |     | Washer                          |
| 48    | 753-1238    |     | Clutch & Clutch Washer          |
| 49    | 791-153592  |     | Clutch Drum                     |
| 50    | 753-05263   |     | Clutch Cover                    |
| 51    | 791-182519  |     | Anti-Rotation Screw             |
| 52    | 753-04003   |     | Clamp Screw                     |
| 53    | 791-180217  |     | Nut                             |
|       | 753-05297   |     | Spark Arrestor Assembly         |
|       | 753-06225   |     | Shortblock Assembly             |

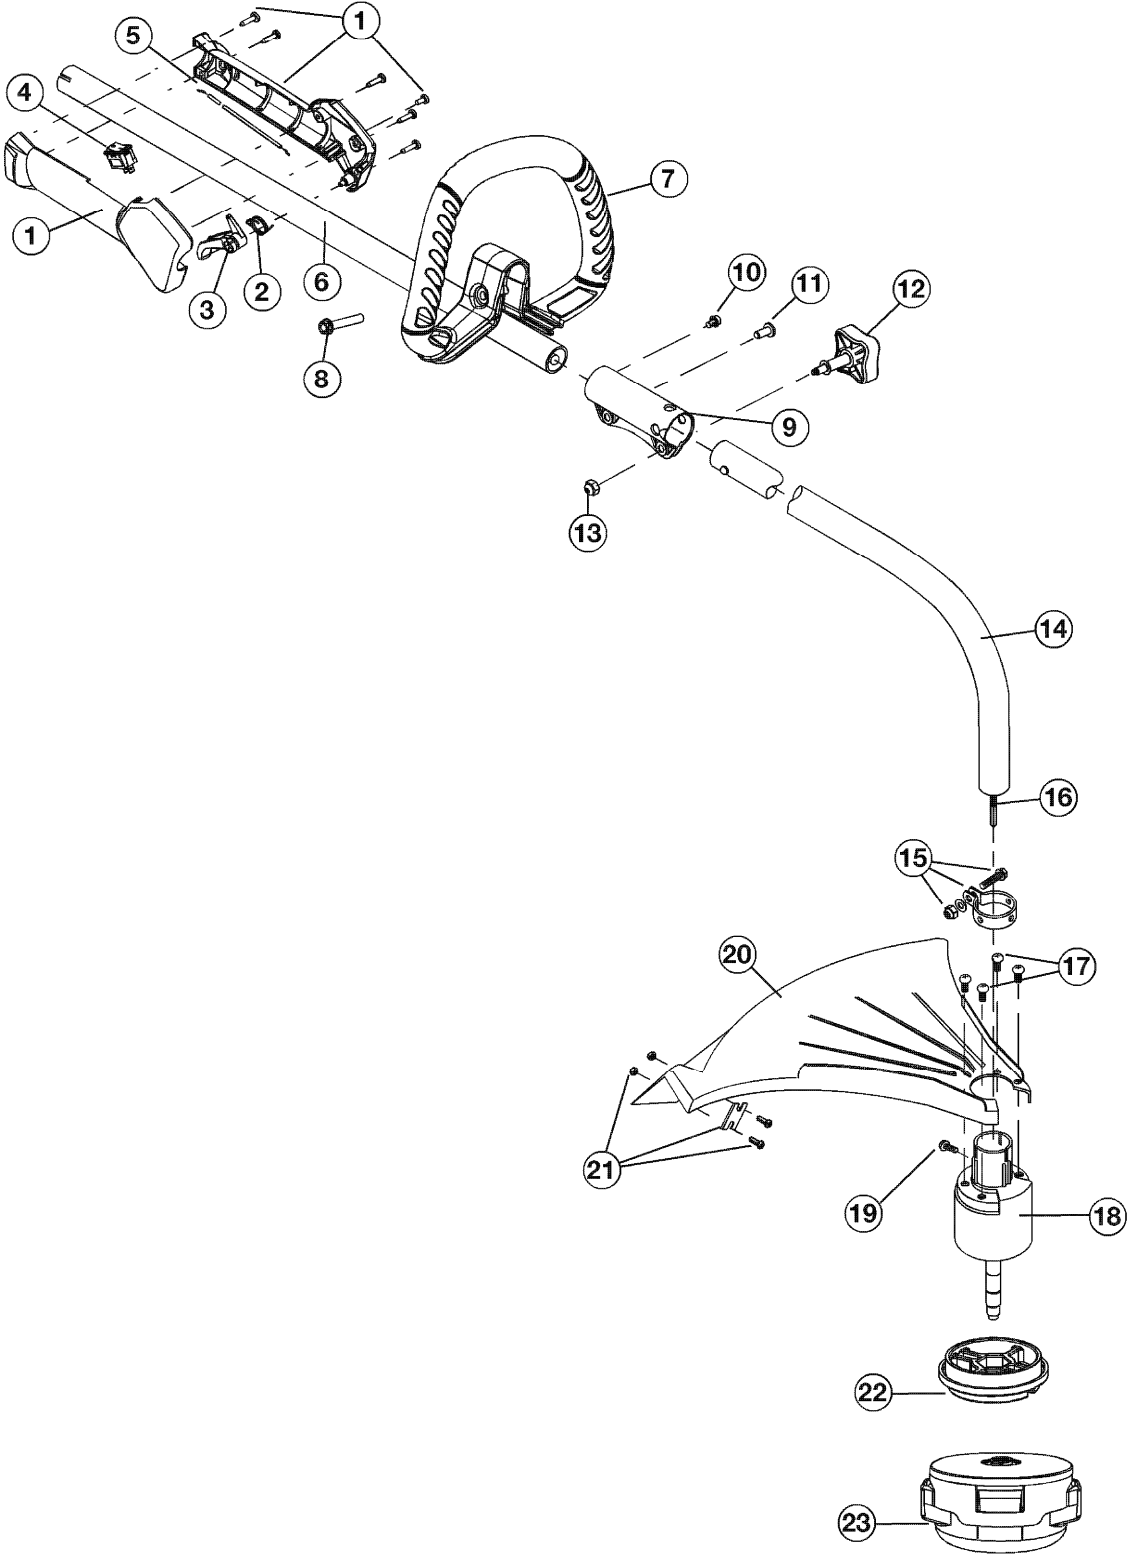

| Ref # | Part Number | Qty | Description                        |
|-------|-------------|-----|------------------------------------|
| 1     | 753-04234   |     | Throttle Housing Assembly          |
| 2     | 791-182690  |     | Throttle Trigger Spring            |
| 3     | 753-04119   |     | Throttle Trigger                   |
| 4     | 791-182405  |     | Switch                             |
| 5     | 753-05270   |     | Throttle Cable Assembly            |
| 6     | 753-04236   |     | Upper Drive Shaft Housing Assembly |
| 7     | 753-06039   |     | D-Handle Assembly                  |
| 8     | 753-06040   |     | Bolt                               |
| 9     | 753-1190    |     | Split boom Coupler                 |
| 10    | 791-182057  |     | Screw                              |
| 11    | 791-181617  |     | Bolt                               |
| 12    | 791-181618B |     | Adjustment Knob                    |
| 13    | 712-04018A  |     | Knob Retaining Nut                 |
| 14    | 791-182387  |     | Lower Drive Shaft Housing Assembly |
| 15    | 791-153597  |     | Lower Clamp Assembly               |
| 16    | 791-181852  |     | Lower Flexible Drive Shaft         |
| 17    | 791-181858  |     | Shield Mounting Screw              |
| 18    | 753-05050   |     | Bushing Housing Assembly           |
| 19    | 791-145569  |     | Anti-Rotation Screw                |
| 20    | 791-181659  |     | Shield Assembly                    |
| 21    | 753-06048   |     | Blade Assembly                     |
| 22    | 753-05034   |     | Adapter                            |
| 23    | 753-06130   |     | Spool Assembly                     |