


Ref #	Part Number	Qty	Description
1	753-06134		Engine Cover Assembly
2	710-04194		Cover Screw
3	791-181003		Screw
4	753-05209		Rocker Cover
5	721-04132		Rocker Cover O-Ring
6	753-06223		Cylinder Assembly
7	753-05229		Piston Ring Assembly
8	753-05973		Piston Assembly
9	753-05232		Cylinder O-Ring
10	791-182379		Breather Hose
11	753-05408		Oil Plug
12	791-182290		Oil Plug O-Ring
13	753-06111		Crankcase Cover
14	753-05238		Crankcase Cover O-ring
15	753-06224		Crankcase Assembly
16	753-06221		Flywheel Assembly
17	753-05241		Cam Bracket Assembly
18	710-04584		Cam Bracket Screw
19	753-05264		Lead Wires
20	753-05243		Module Assembly
21	753-05244		Muffler Gasket
22	753-05245		Muffler Assembly
23	710-04487		Muffler Screw
24	794-00043		Spark Plug
25	753-05247		Insulator Gasket
26	712-04099		Nut
27	753-05249		Insulator
28	753-05366		Carburetor Gasket
29	753-06220		Carburetor
30	791-181751		O-Ring
31	753-05252		Air Cleaner Cover Assembly
32	753-05254		Air Filter
33	710-04517		Screw
34	753-05256		Fuel Tank Assembly w/Fuel Lines
35	753-1229		Fuel Cap
36	753-05259		Fuel Tank Pads
37	753-04288		Palnut
38	753-1202		Pressure Plate Screw
39	753-05074		Pressure Plate
40	750-04434		Spacer
41	753-06222		Starter Assembly
42	753-05840		Rope
43	753-04286		Recoil Spring
44	631-04164A		Handle
45	791-611061		Rope Guide
46	753-06226		Starter Housing Assembly
47	9162-1		Washer
48	753-1238		Clutch & Clutch Washer
49	791-153592		Clutch Drum
50	753-05263		Clutch Cover
51	791-182519		Anti-Rotation Screw
52	753-04003		Clamp Screw
53	791-180217		Nut
	753-05297		Spark Arrestor Assembly
	753-06225		Shortblock Assembly

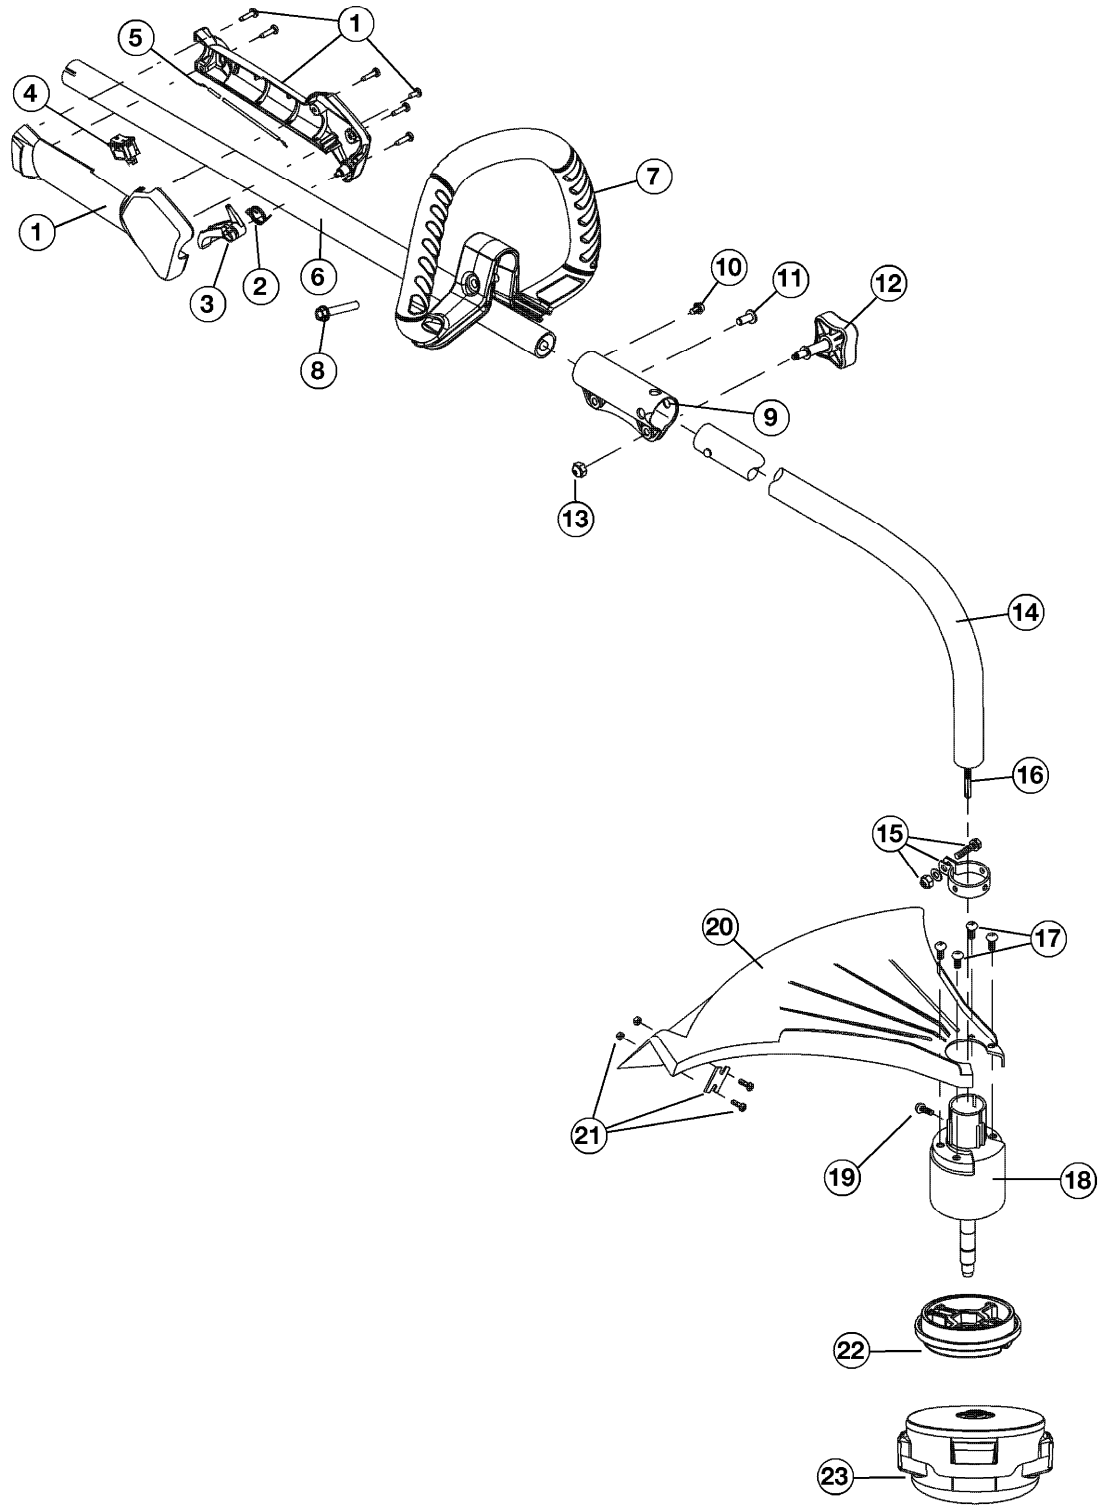

Ref #	Part Number	Qty	Description
1	753-04234		Throttle Housing Assembly
2	791-182690		Throttle Trigger Spring
3	753-04119		Throttle Trigger
4	791-182405		Switch
5	753-05270		Throttle Cable Assembly
6	753-04236		Upper Drive Shaft Housing Assembly
7	753-06039		D-Handle Assembly
8	753-06040		Bolt
9	753-1190		Split boom Coupler
10	791-182057		Screw
11	791-181617		Bolt
12	791-181618B		Adjustment Knob
13	712-04018A		Knob Retaining Nut
14	791-182387		Lower Drive Shaft Housing Assembly
15	791-153597		Lower Clamp Assembly
16	791-181852		Lower Flexible Drive Shaft
17	791-181858		Shield Mounting Screw
18	753-05050		Bushing Housing Assembly
19	791-145569		Anti-Rotation Screw
20	791-181659		Shield Assembly
21	753-06048		Blade Assembly
22	753-05034		Adapter
23	753-06130		Spool Assembly