


Model 6065

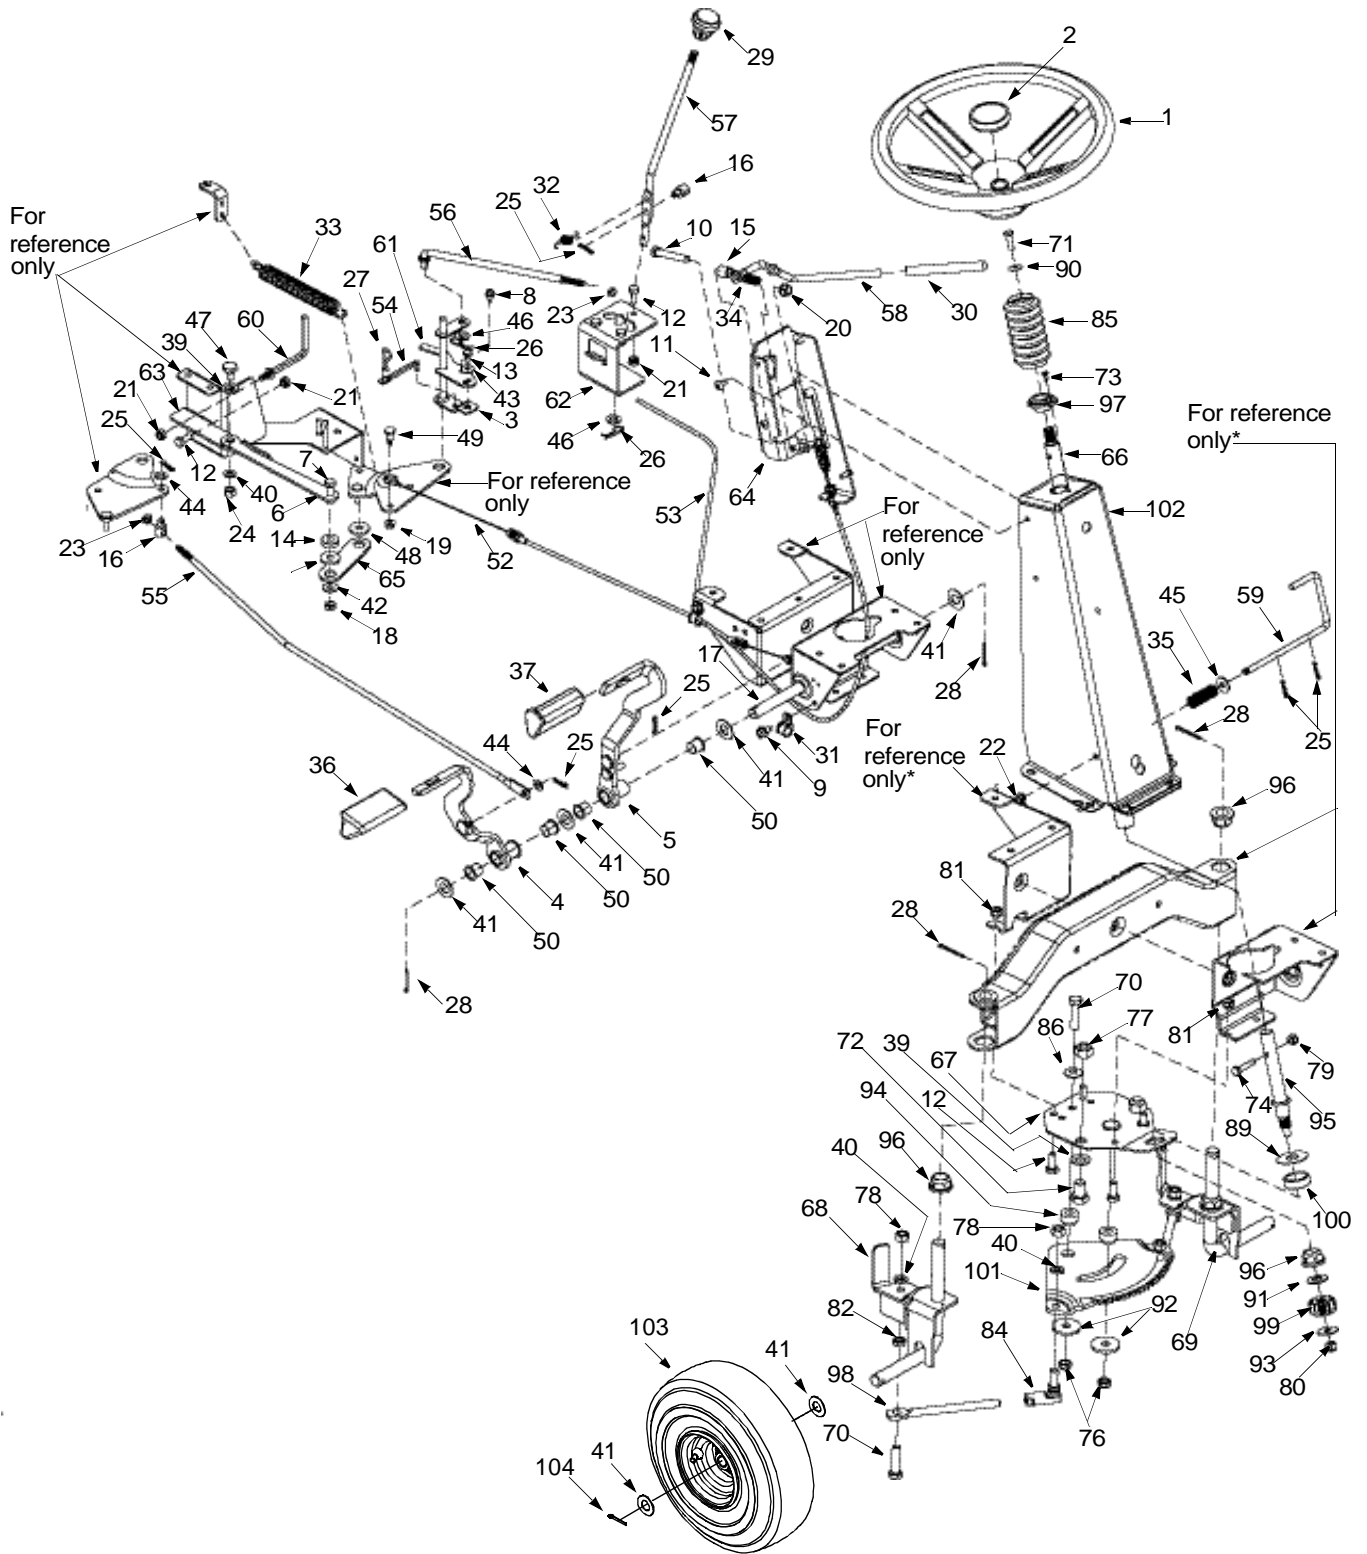


* For clarity of viewing, these parts have been referred to more than once in this illustration.

Model 6065

Key No.	Part No.	Description	Key No.	Part No.	Description
1.	731-1687	Steering Wheel	54.	747-1228A	Shift Rod
2.	731-1459A	Steering Wheel Cap	55.	747-1240	Variable Control Rod
3.	647-0055	Shift Pivot Assembly	56.	747-1249	Control Rod
4.	683-0432	Drive Pedal Assembly	57.	747-1254	Shift Rod
5.	683-0433	Brake Pedal Assembly	58.	747-1255	PTO Lever
6.	683-0592	Idler Brake Assembly	59.	747-04024	Brake Lock -Out Rod
7.	710-0191	Hex Bolt 3/8-24 x 1.25"	60.	747-1262	Belt Keeper Rod
8.	710-0599	TT Screw 1/4-20 x 0.5"	61.	783-1142	Shift Switch Bracket
9.	710-0604A	TT Screw 5/16-18 x 0.625"	62.	783-1253	Shift Index Bracket
10.	710-0859	Hex Bolt 3/8-16 x 2.5"	63.	783-1287	Brake Mounting Bracket
11.	710-1017	AB Screw 1/4-14 x 0.625"	64.	783-1293	Cont. Bracket: PTO
12.	710-1681	Hex Bolt	65.	783-1307	Link Bracket
13.	710-3013	Hex Bolt 1/4-20 x 0.50"	66.	650-0007	Steering Tube Assembly
14.	711-0242	Spacer	67.	683-0033A	Steering Support Bracket Assembly
15.	711-0396	Spacer	68.	683-0178A	Front Axle RH
16.	711-1155	Ferrule	69.	683-0179A	Front Axle LH
17.	711-1531	Shaft	70.	710-0459A	Hex Bolt 3/8-24 x 1.5"
18.	712-0296	Jam Nut 3/8-24	71.	710-0643	Hex Bolt 5/16-18 x 1.0"
19.	712-0380	Flange Lock Nut 1/4-28	72.	710-0689	Hex Bolt 1/2-13 x 0.75"
20.	712-0431	Flange Lock Nut 3/8-16	73.	710-0837	AB Screw #10-16 x 0.625"
21.	712-0692	Nylon Lock Nut	74.	710-0958	Hex Bolt 1/4-20 x 1.25"
22.	712-0714	Flange Lock Nut 5/16-18	76.	712-0116	Jam Lock Nut 3/8-24
23.	712-3007	Jam Nut 5/16-18	77.	712-0206	Hex Nut 1/2-13
24.	712-3017	Hex Nut 3/8-16	78.	712-0241	Hex Nut 3/8-24
25.	714-0104	Cotter Pin	79.	712-0324	Hex Lock Nut 1/4-20
26.	714-0145	Click Pin	80.	712-0411	Hex Lock Nut 5/16-24
27.	714-0149B	Hairpin Clip	81.	712-0692	Hex Lock Nut
28.	714-0470	Cotter Pin	84.	723-0156	Ball Joint 3/8-24
29.	720-0232	Shift Knob	85.	731-0559B	Steering Bellow
30.	720-0269	Clutch Grip	86.	736-0105	Bell Washer
31.	726-0272	Clamp	89.	736-0196	Flat Washer.628 x 1.56 x .036
32.	732-0445	Extension Spring	90.	736-0242	Bell Washer .340 x .872 x .060
33.	732-0594A	Extension Spring	91.	736-0272	Flat Washer .510 x 1.0 x .060
34.	732-1167	Compression Spring	92.	736-0320	Flat Washer 3/8 x 1.37
35.	732-3091	Compression Spring	93.	736-3078	Flat Washer .344 x 1.0 x .063
36.	735-0283	Drive Pad	94.	738-0541	Spacer
37.	735-3049	Brake Pad	95.	738-3089A	Steering Adapter
39.	736-0160	Flat Washer.53 x .93 x .050	96.	741-0225	Hex Flange Bearing
40.	736-0169	Lock Washer 3/8	97.	741-0356	Bearing: Steering Column
41.	736-0187	Flat Washer	98.	747-0955	Tie Rod
42.	736-0267	Flat Washer	99.	748-0290	Pinion Gear
43.	736-0270	Bell Washer	100.	750-0532	Spacer
44.	736-0314	Thrust Washer	101.	783-1302	Steering Gear
45.	736-0701	Flat Washer	102.	683-0591	Cover: Steering Column
46.	736-0734	Flat Washer	103.	634-0169A	Complete Wheel Assembly: Front
47.	738-0183	Shoulder Screw .50 x .21: 3/8-16		634-0170A	Rim Assembly*
48.	738-0347	Shoulder Spacer		734-0255	Valve*
49.	738-0826	Shoulder Screw 1/4-28 x .375		741-0487A	Fl. Bearing*
50.	741-0495	Flange Bearing		741-0706	Fl. Bearing*
52.	746-1127	Deck Cable	104.	714-0115	Cotter Pin
53.	746-1129	Brake Cable			

* Not shown in illustration

Model 6065

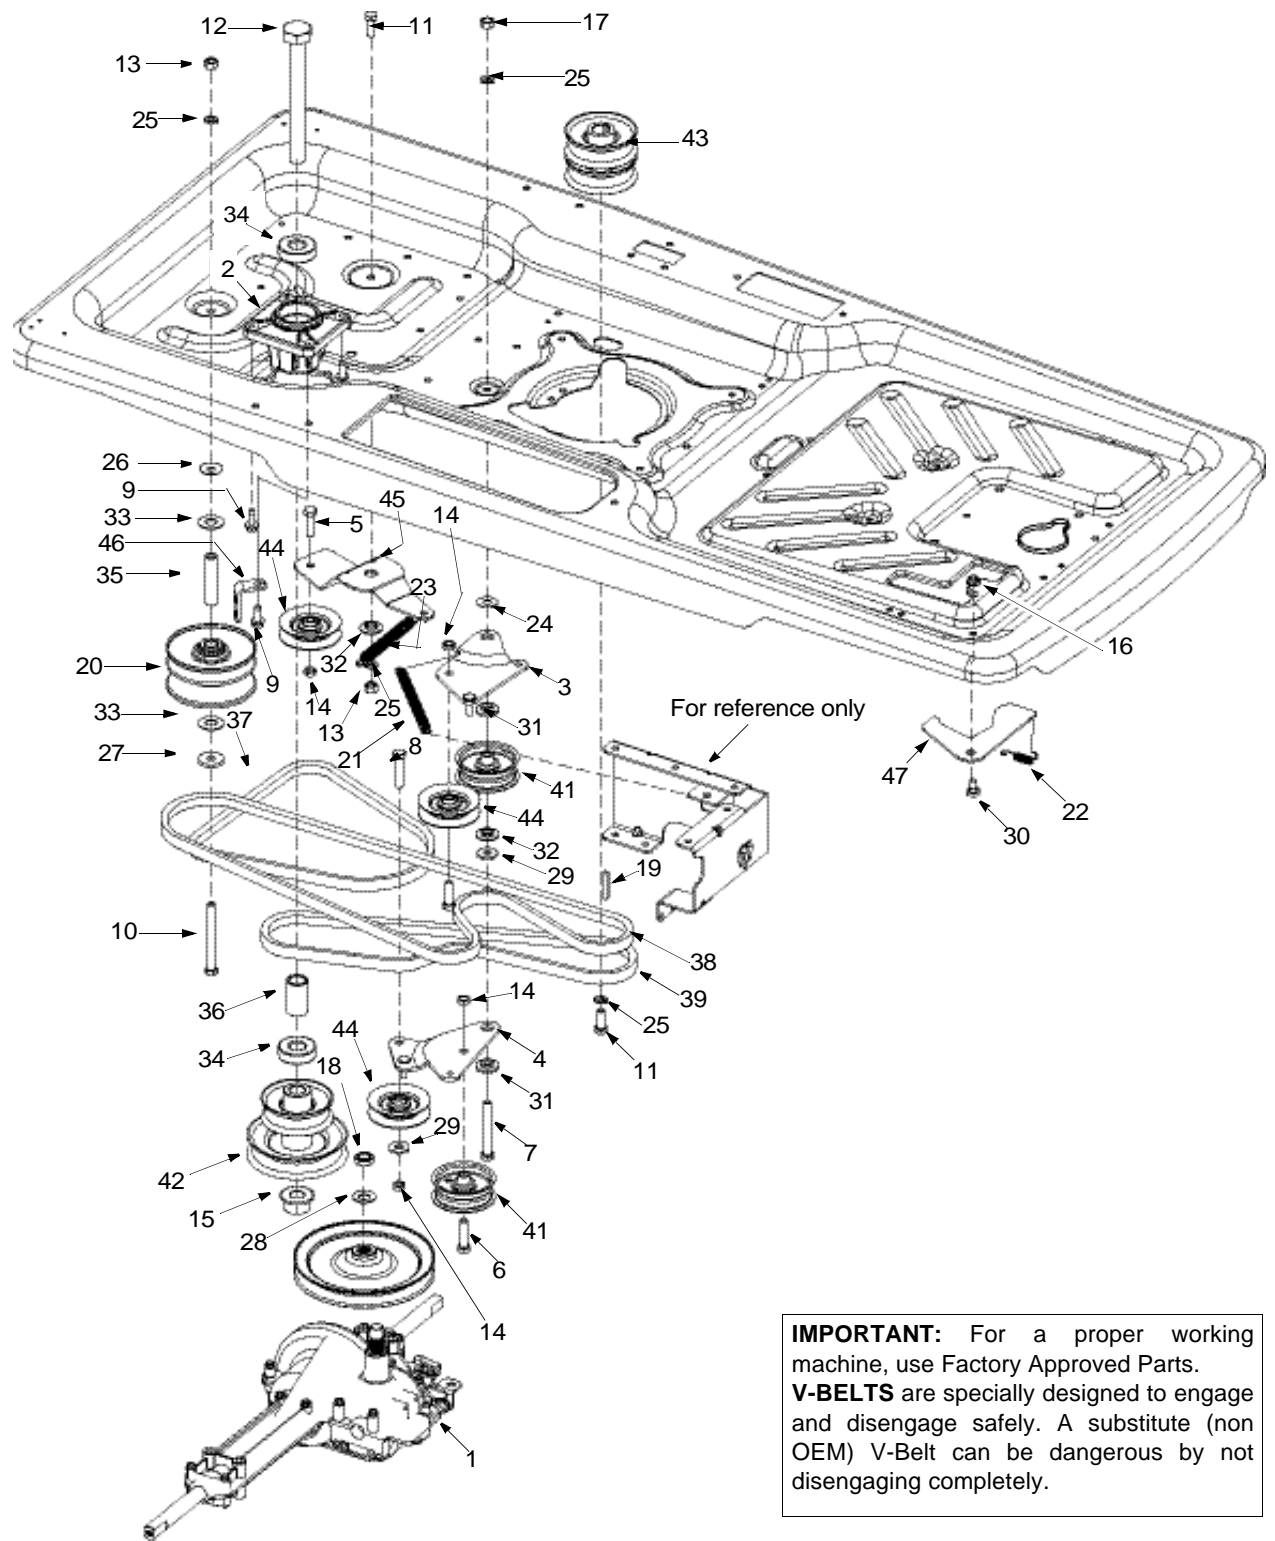


IMPORTANT: For a proper working machine, use Factory Approved Parts. **V-BELTS** are specially designed to engage and disengage safely. A substitute (non OEM) V-Belt can be dangerous by not disengaging completely.

Model 6065

Key No.	Part No.	Description	Key No.	Part No.	Description
1.	618-04007	Transmission Assembly*	25.	736-0169	Lock Washer 3/8
2.	619-0011	Spindle Housing	26.	736-0219	Bell Washer .39 x 1.13 x .062
3.	683-0446	Idler Bracket Assembly	27.	736-0247	Flat Washer 3/8 x 1.25"
4.	683-0447	Idler Bracket Assembly	28.	736-0427	Bell Washer .567 x 1.125 x .06
5.	710-0191	Hex Bolt 3/8-24 x 1.25"	29.	736-3052	Flat Washer .406 x 1.0 x .105
6.	710-0459A	Hex Bolt 3/8-24 x 1.50"	30.	738-0155	Shoulder Screw
7.	710-0521	Hex Bolt 3/8-16 x 3.0"	31.	738-0347	Shoulder Spacer
8.	710-0539	Hex Bolt 3/8-24 x 1.75"	32.	738-0968	Shoulder Spacer
9.	710-0650	TT Screw 5/16-18 x 0.875"	33.	741-0405	Thrust Bearing
10.	710-0902	Hex Screw 3/8-24 x 3.75"	34.	741-0919	Ball Bearing
11.	710-1039	Hex Screw 3/8-24 x 1.0"	35.	750-0705	Sleeve Spacer
12.	710-1812	Hex Screw M20 x 2.5:180	36.	750-0952	Spacer
13.	712-0241	Hex Nut 3/8-24	37.	754-0453	Belt: V Type
14.	712-0296	Jam Lock Nut 3/8-24	38.	754-0493	Belt: V Type
15.	712-0695	Hex Flange Nut M20 x 2.5	39.	754-0494	Belt: V Type
16.	712-3004A	Flange Lock Nut 5/16-18	40.	756-0650	Transmission Pulley
17.	712-3017	Hex Nut 3/8-16	41.	756-0981A	Flat Idler Pulley
18.	712-3035	Jam Nut 9/16-18	42.	756-1195	Jack Pulley: Double
19.	714-0133	Key	43.	756-1200	Engine Pulley: Double
20.	717-0884	Variable Speed Pulley Assembly	44.	756-1207	Idler Pulley
21.	732-0308	Extension Spring	45.	783-0528	Idler Bracket: Variable Speed
22.	732-0418	Extension Spring	46.	783-1292	Cable Bracket
23.	732-0814	Extension Spring	47.	783-1341	Bracket: Lock: Pedal
24.	736-0101	Flat Washer .406 x 1.0 x .030			

Model 6065

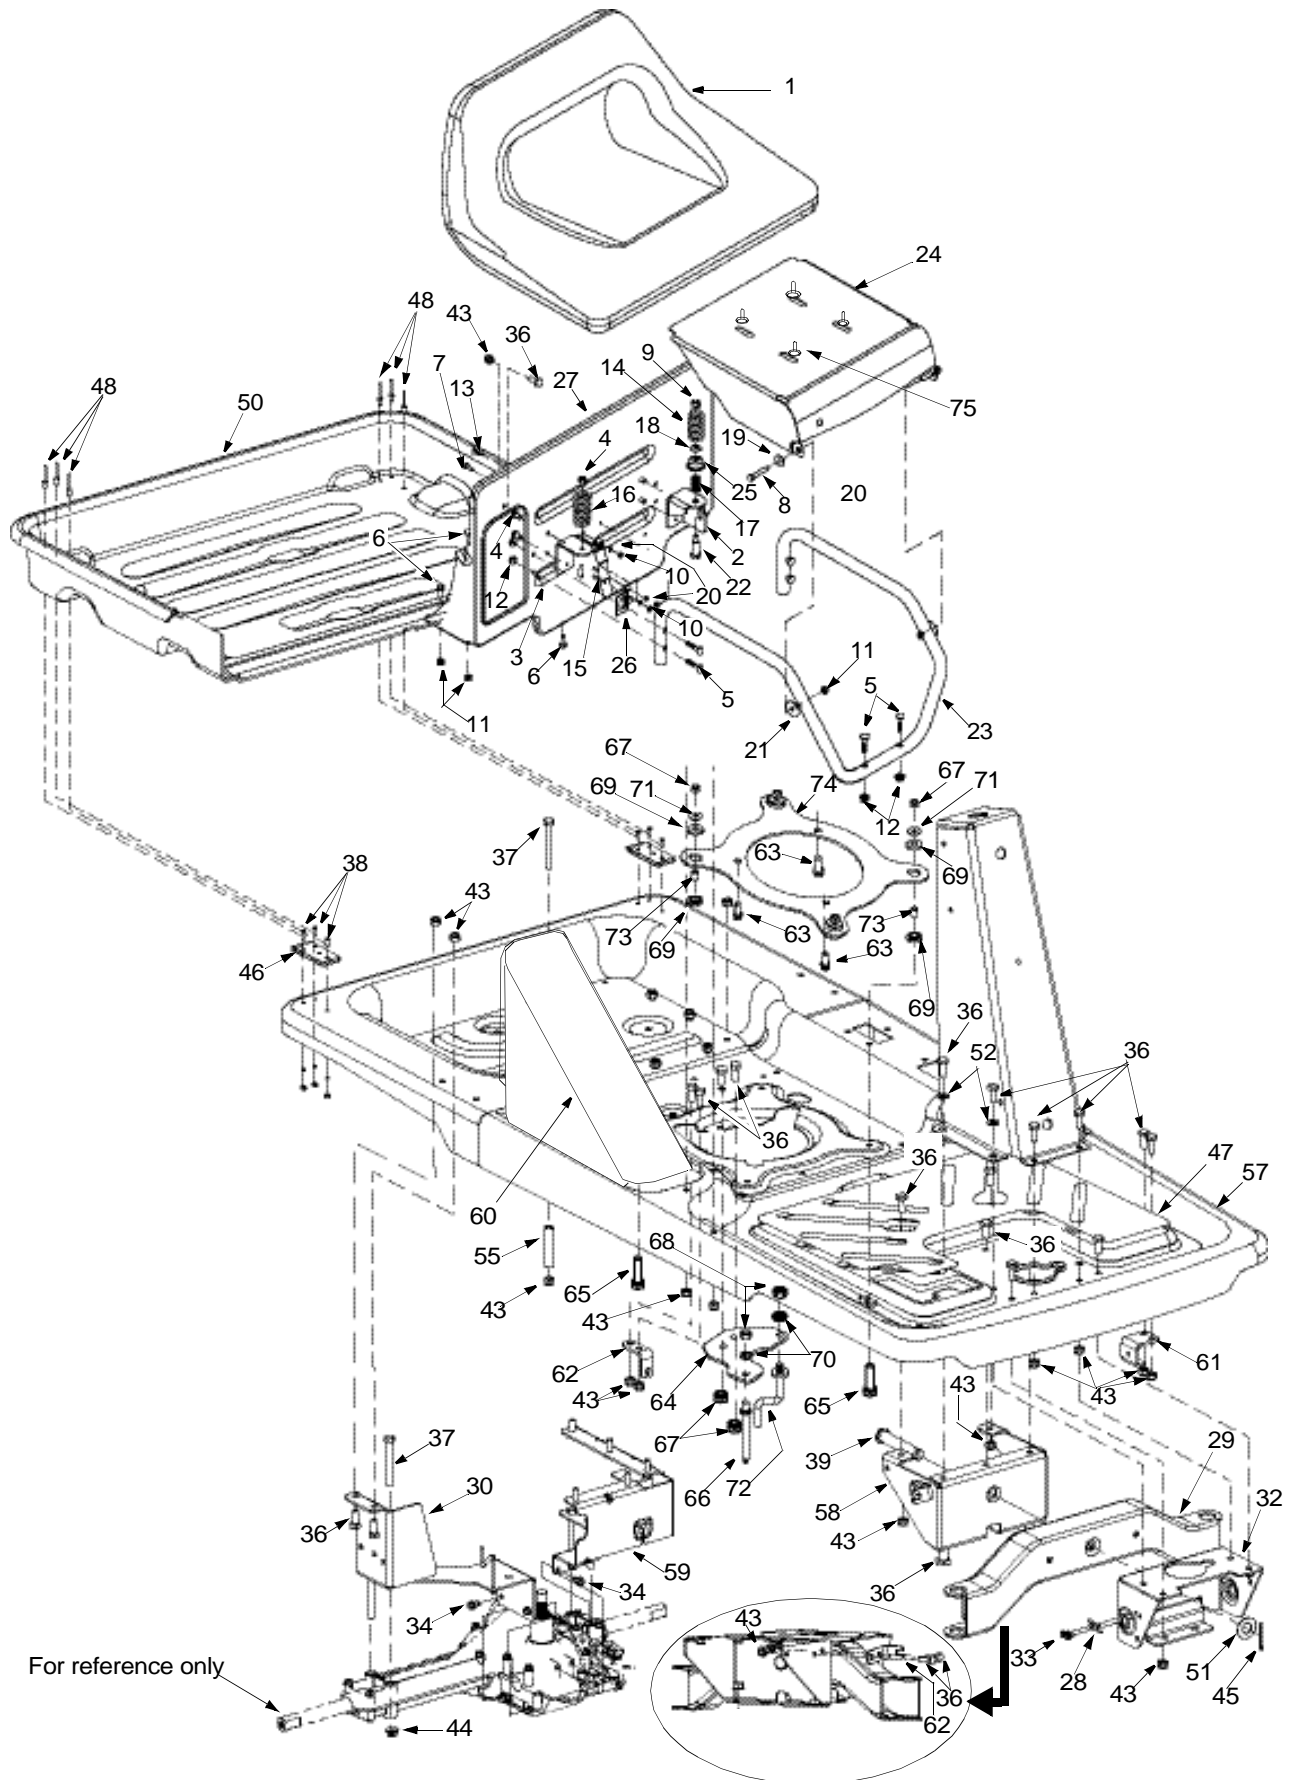


Model 6065

Key No.	Part No.	Description	Key No.	Part No.	Description
1.	757-0378	Seat: Black, Low Back	36.	710-1681	Hex Screw M8-1.25: 20
2.	683-0575	Support Bracket Assembly LH	37.	710-1708	Special Screw
3.	683-0576	Support Bracket Assembly RH	38.	710-1752	Special Screw
4.	710-0604A	TT Screw 5/16-18 x 0.625"	39.	711-1165	Clevis Pin
5.	710-1250	Carriage Bolt 5/16 x 1.5"	42.	712-0640	Hex Nut
6.	710-1681	Hex Bolt M8-1.25: 20	43.	712-0692	Hex Lock Nut
7.	710-1690	Special Screw M6-1: 16	44.	712-0714	Flange Lock Nut
8.	710-1703	Hex Bolt M8-1.25: 45	45.	714-0470	Cotter Pin
9.	712-0431	Flange Lock Nut 3/8-16	46.	723-0491	Tray
10.	712-0689	Hex Nut M6-1	47.	723-0604	Foot Pad
11.	712-0692	Hex Lock Nut M8-1.25	48.	728-0285	Rivet
12.	712-3004A	Flange Lock Nut 5/16-18	50.	731-2360	Bag Tray
13.	726-3046	Ratchet Clip	51.	736-0187	Flat Washer .64 x 1.24 x .06
14.	732-0735	Compression Spring	52.	736-0700	Flat Washer 8.4 x 16
15.	732-0750A	Actuator Spring	53.	736-0765	Lock Washer M4
16.	732-0996	Compression Spring	55.	750-1293	Spacer
17.	732-0997	Compression Spring	57.	783-1081A	Frame
18.	736-0105	Bell Washer .375 x .870 x .063	58.	783-1097	Rear Bracket: Pivot Support
19.	736-0289	Shoulder Bushing	59.	783-1101	Support Bracket: Transmission
20.	736-0648	Lock Washer	60.	783-1148	Chute Bracket
21.	736-0743	Flat Washer 8.4 x 35	61.	783-1260	Stop Bracket: Pivot
22.	738-1014	Shoulder Screw	62.	783-1292	Cable Bracket
23.	749-1264	Support Tube: Seat	63.	710-0654A	TT Sems Screw 3/8-16 x 1.0
24.	783-04005	Seat Bracket	64.	783-1294	Belt Keeper Bracket
25.	783-0733	Spacer	65.	710-1683	Hex Bolt M8-1.25: 30
26.	783-0931	Bag Switch Bracket	66.	711-1065	Pin: Belt Guard
27.	783-1118B	Seat Support Bracket	67.	712-0692	Lock Nut M8-1.25
28.	17962	Switch Plate	68.	712-3010	Hex Nut 5/16-18
29.	683-0142	Pivot Bar Assembly	69.	722-0153	Engine Mount: Gromm.
30.	683-0581	Support Bracket Assembly RH	70.	736-0119	Lock Washer 5/16
31.	683-0591	Bracket Assembly: Steering Column	71.	736-0701	Flat Washer 8.4 x 24
32.	683-0593	Pivot Support Bracket: Front	72.	747-1292	Belt Keeper Rod
33.	710-0224	Ab Screw #10-16 x 0.5"	73.	750-0539	Spacer
34.	710-0599	TT Screw 1/4-20 x 0.5"	74.	783-1120	Mounting Plate
35.	710-0946	Machine Screw *	75.	710-0870	Self-Tapping Screw

* If equipped


Model 6065

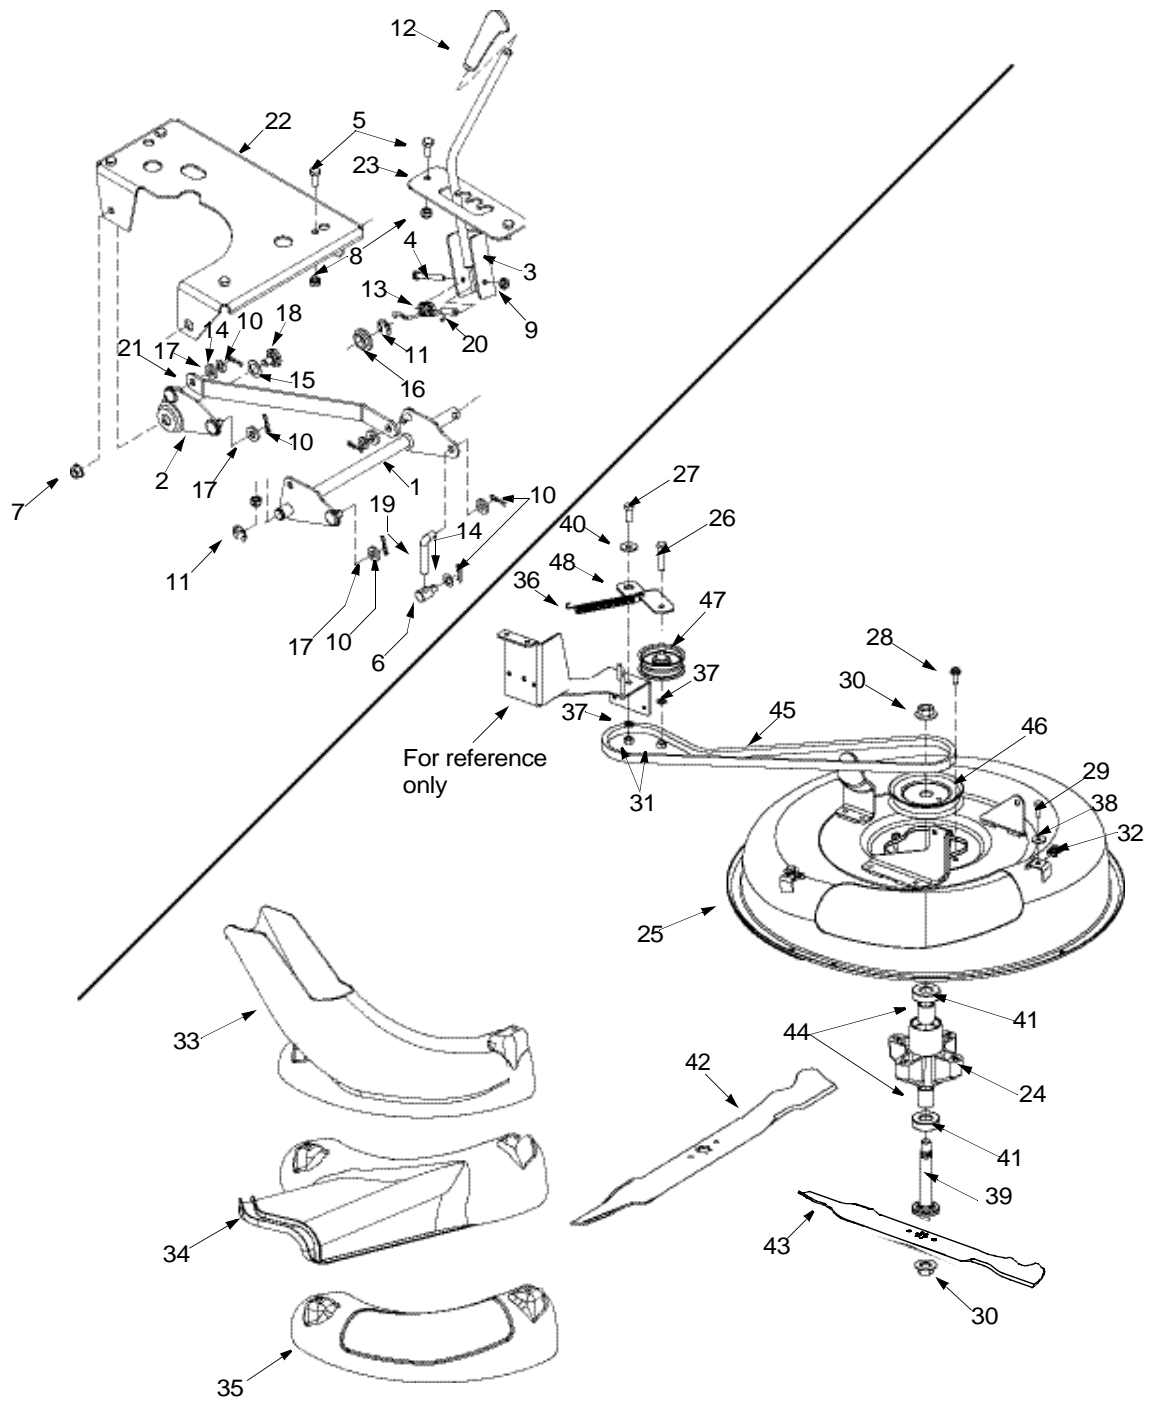

Model 6065


Key No.	Part No.	Description	Key No.	Part No.	Description
1.	683-0441	Shift Assembly: Front Lift	25.	783-1082	Deck
2.	683-0442	Pivot Bracket Assembly	26.	710-0347	Hex Screw 3/8-16 x 1.75
3.	683-0448	Bracket Assembly: Lift Handle	27.	710-0514	Hex Bolt 3/8-16 x 1.0
4.	710-0641	Hex Bolt 1/4-20 x 2.25	28.	710-0650	TT Screw 5/16-18 x 0.875
5.	710-1681	Hex Bolt M8-1.25: 20	30.	712-0417A	Flange Nut 5/8-18
6.	711-0832	Ferrule	31.	712-3017	Hex Nut 3/8-16
7.	712-0431	Flange Lock Nut 3/8-16	32.	726-0365	Speed Nut
8.	712-0692	Hex Lock Nut M8-1.25	33.	731-2361A	Grass Catcher Chute
9.	712-3027	Lock Nut 1/4-20	34.	731-2477	Side-Discharge Chute
10.	714-0104	Hairpin Clip	35.	731-2505	Mulch Plug
11.	716-0106	E-Ring	36.	732-0814	Extension Spring
12.	731-2509	Handle Grip	37.	736-0169	Lock Washer
13.	732-1020	Torsion Spring	38.	736-0701	Flat Washer 8.4 x 24
14.	736-0314	Thrust Washer .375 x .70 x .030	39.	738-0933	Spindle Shaft
15.	736-0336	Flat Washer 5/8 x 1.0 x .030	40.	738-0968	Shoulder Spacer
16.	736-0341B	Flange Washer .633 x .883	41.	741-0919	Ball Bearing
17.	736-3010	Flat Washer .407 x .812 x .135	42.	742-0667	Blade: Bagging
18.	738-0281	Shoulder Screw .625 x .17: 3/8-16	43.	742-0760	Blade: 3-in-1
19.	747-1247	Lift Link	44.	750-1000	Spacer
20.	750-0566A	Spacer	45.	754-0495	Belt: V Type
21.	783-1136	Upper Lift Link Bracket	46.	756-0969	Deck Pulley
22.	783-1138	Lift Hanger Bracket	47.	756-0981A	Flat Idler Pulley
23.	783-1143	Lift Indx. Bracket	48.	783-1122	Idler Bracket: Deck
24.	619-0020	Spindle Housing			

Model 6065

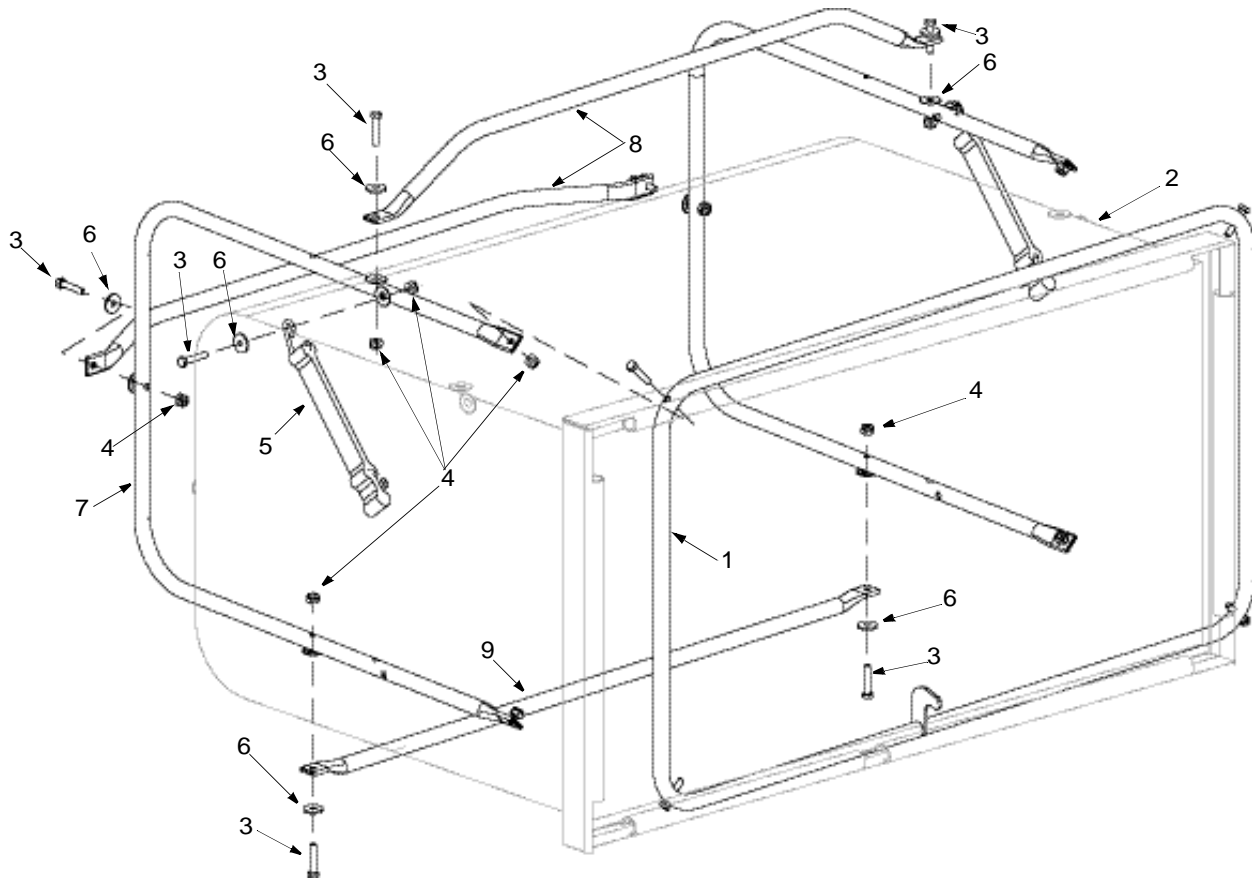

Key No.	Part No.	Description
1.	649-0126	Tube Assembly: Front Frame
2.	664-0107	Grass Catcher Bag
3.	710-1194	Mach. Screw #10-24 x 1.0
4.	712-0161	Lock Nut #10-24
5.	723-0383	Retainer Strap
6.	736-0400	Flat Washer
7.	749-1260	Side Tube: Frame
8.	749-1262	Bag Handle
9.	749-1269	Support Tube

Model 6065

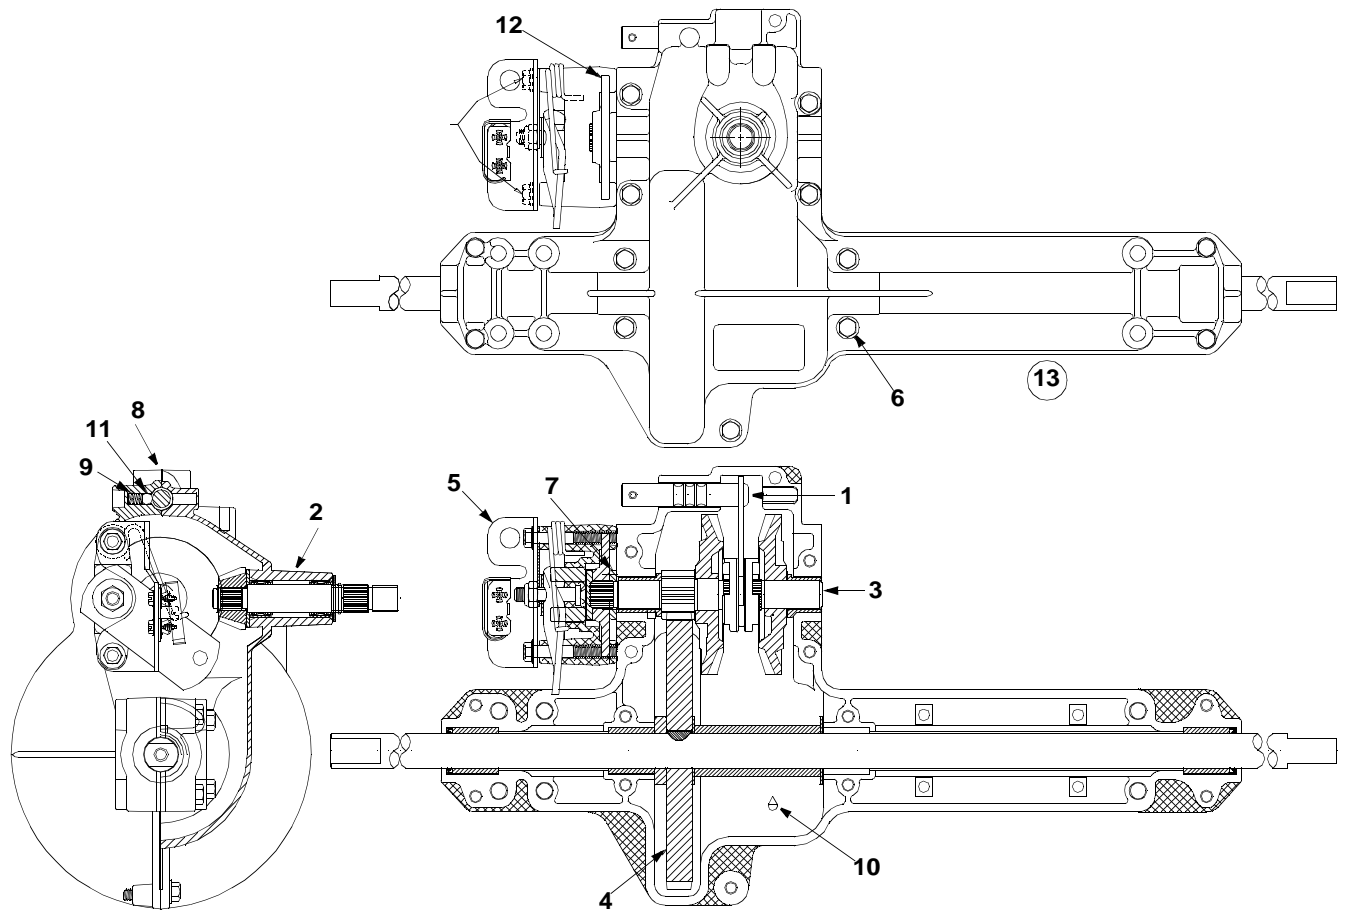

Key No.	Part No.	Description
1.	611-0011	Shaft Assembly: Detent
2.	618-0072B	Upper Housing Assembly
3.	618-0135	Drive Shaft Assembly: LH Brake
4.	618-04009	Axle Assembly
5.	661-0043	Brake Assembly: Yoke LH
6.	710-1325	TT Screw 1/4-20 x 1.625"
7.	717-0678	Break Pad
8.	719-0313B	Lower Housing
9.	732-0863	Spring Detent
10.	737-0148	Grease
11.	741-0862	Ball: Detent: .250
12.	761-0202	Brake Disc
13.	618-04007	Transmission Assembly Complete: Single Speed