



9

Parts List



1	749-04282	Upper Handle
2	720-04072	Star Handle Knob
3	749-04281	Lower Handle
4	710-04398	Flange Screw 5/16-18 x 7.5
5	754-04123	Belt
6	756-04163	Idler Pulley
7	748-04125	Shoulder Spacer
8	686-04080	Idler Bracket
9	712-04065	Flange Lock Nut: 3/8-16
10	710-0654A	TT Screw 3/8-16 x 1.00
11	786-04303	Frame
12	710-0514	HH Cap Screw 3/8-16 x 1.00
13	732-0418	Extension Spring
14	738-04139	Stud 33 x 1.5 x 3/8-16
15	756-04217	Flywheel Pulley
16	710-0591	HH Cap Screw 3/8-24 x 1.00
17	710-0520	HH Cap Screw 3/8-16 x 1.50
18	786-04256	Tine Shield 61 cm
19	711-0415	Clevis Pin
20	642-0005	Outer Tine Assembly LH
21	642-0003	Inner Tine Assembly LH
22	714-0149B	Internal Cotter Pin
23	710-0809	TT Screw 1/4-20 x 1.25
24	GW-9727	Pipe Plug 3/8 NPT
25	642-0002	Inner Tine Assembly RH
26	642-0004	Outer Tine Assembly RH
27	618-04276A	Case Assembly
28	721-04157	Gasket
29	726-0299	Push Cap
30	734-0973	Wheel 5 x 1.38
31	749-04265	Depth Stake Tube
32	711-04520	Axle Shaft
33	710-1007	TT Screw 3/8-16 x 1.50
34	786-04296	Wheel Bracket
35	749-04266	Rear Wheel Tube
36	714-3020	Internal Cotter Pin
37	712-04063	Flange Lock Nut: 5/16-18
38	710-0487	Carriage Bolt
39	731-05385	Clutch Cable Fitting
40	746-04247	Clutch Cable
41	710-0599	TT Screw 1/4-20 x .50
42	786-04307	Cable Mount Bracket
43	747-04508	Clutch Bail
44	736-0300	Flat Washer .406 x .875 x .059

For a proper working machine, use Factory Approved Parts. V-BELTS are specially designed to engage and disengage safely. A substitute (non-OEM) V-Belt can be dangerous by not disengaging completely.

Tiller features/components vary by model. Some parts listed may not be available on your unit.