



# Model Series 980

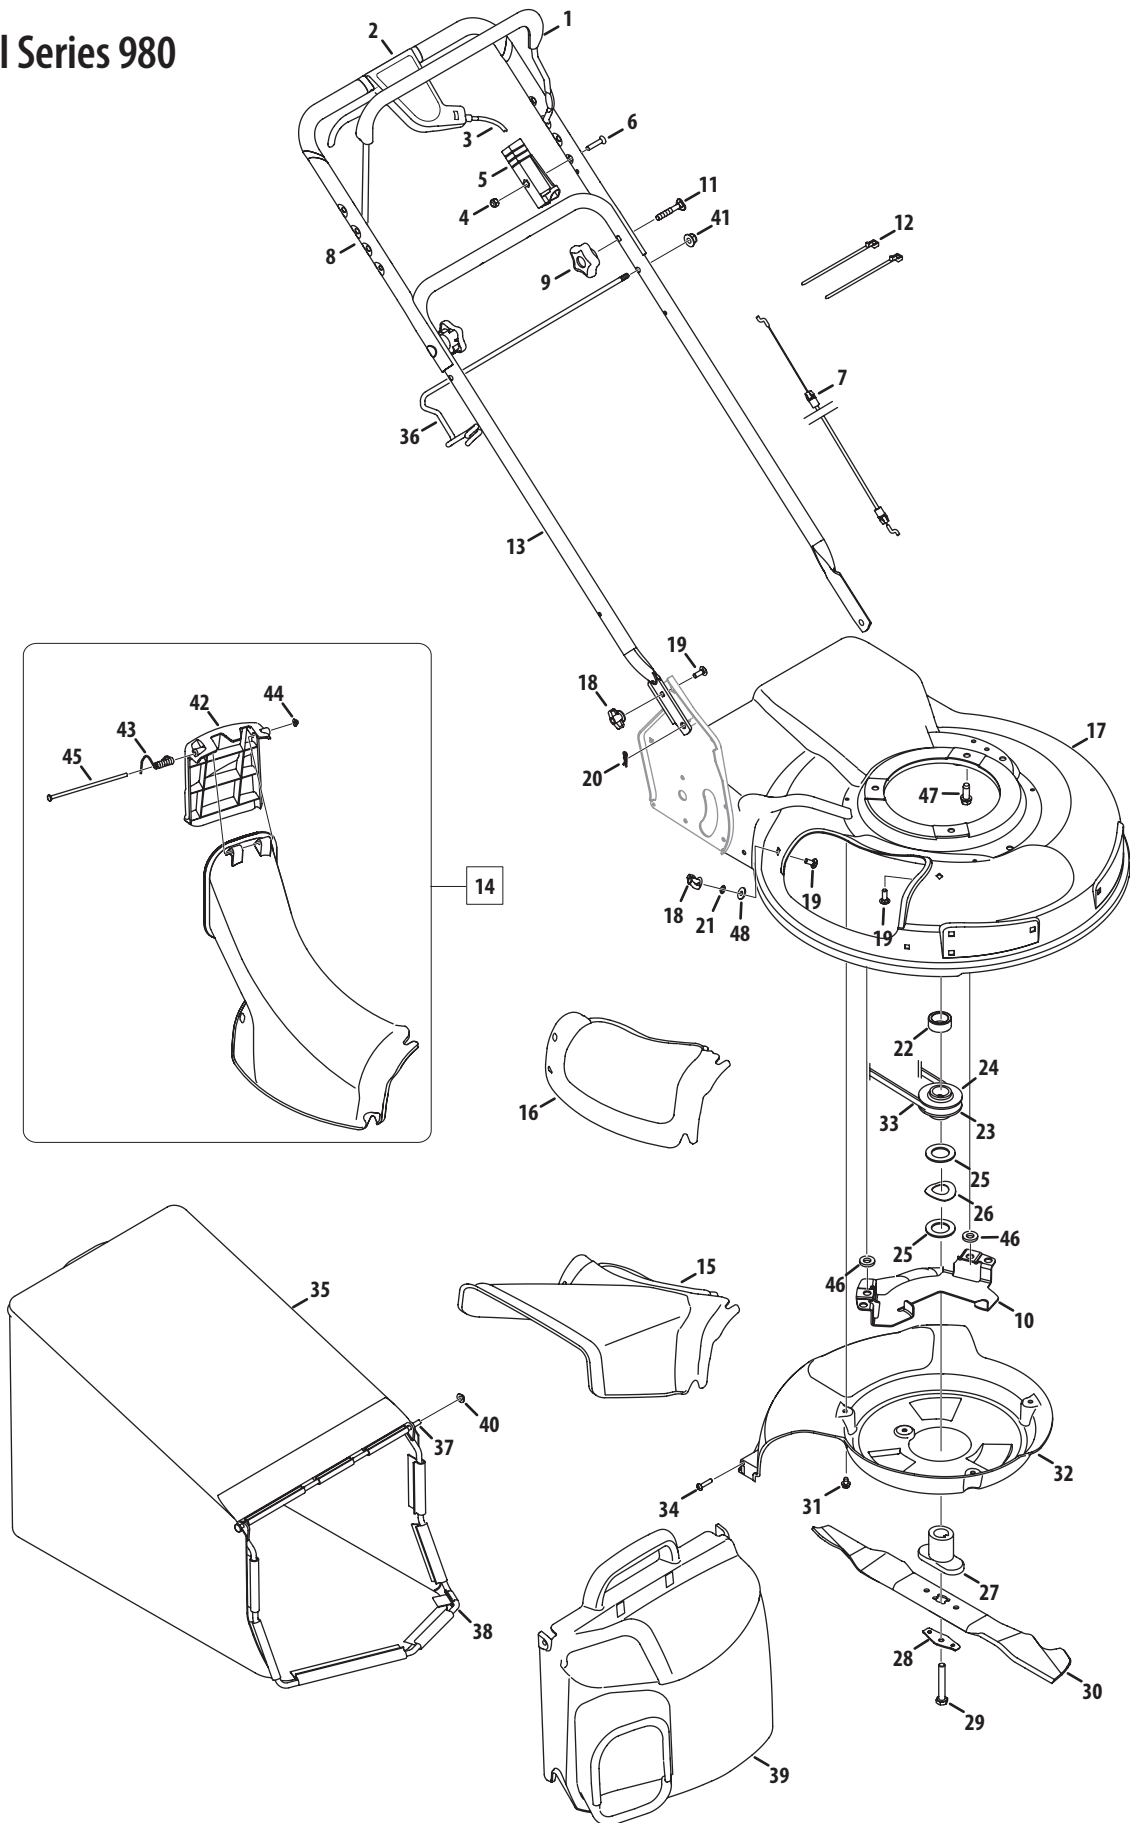

Ref No.	Part Number	Description
1	747-0824	Control Lever
2	753-05096A	Control Lever Assembly
3	746-0711B	Drive Cable 51"
4	712-0324	Top Lock Nut 1/4-20
5	746-0883	Control Housing
6	710-1270	Oval C-Sunk Screw
7	746-0557	Control Cable 47"
8	749-0439E	Upper Handle
9	720-04072	Star Knob
10	782-9063	Belt Keeper
11	710-1174	Carriage Bolt 5/16-18 x 2.0
12	726-0240	Cable Tie
13	749-0907B	Lower Handle
14	631-0066	Chute Assembly
15	731-1832	Side-Discharge Chute
16	731-1833A	Mulch Cover
17	782-0078B	Deck 21-inch
18	712-0397	Wing Nut
19	710-0703	Carriage Bolt 1/4-20 x .75"
20	714-0104	Cotter Pin
21	726-0233	Push Nut .25 x ID x .50 OD
22	750-04438A	Slv. Spcr., 25mm x 1.375 x .440
23	756-04160	Half Pulley: Key 25mm x 2.62 OD
24	756-04161	Half Pulley: Upper 25mm x 2.62

Ref No.	Part Number	Description
25	736-0277	Flat Washer 1.031 x 1.620 x .095
26	736-0447	Wave Washer, 1.5 x 1.0 x .029
27	748-04082	Blade Adapter
28	736-0524B	Blade Bell Support
29	710-1257	Hex Bolt 3/8-24 x 2.5
30	742-0741	21" Mulching Blade
31	710-0653	Screw 1/4-20 x 3.75
32	731-1828	Baffle
33	754-0460	Belt 3/8 x 39.24
34	710-0895	HL Screw 1/4-15 x .75
35	664-0121	Grass Catcher
36	747-0940A	Support Rod w/ Rope Guide
37	747-0939	Pivot Rod
38	747-0937	Grass Bag Frame
39	631-0071	Grass Bag Cover
40	726-0106	Cap Nut
41	712-04063	Hex Nut 5/16-18
42	731-1874	Chute Door
43	732-0819	Torsion Spring
44	726-0111	Push Cap
45	747-0965	Pivot Rod
46	736-3010	Washer, Flat, .407 x .812 x .135
47	710-0654A	Sems Screw 3/8-16 x 1.00
48	736-3090	Washer, Flat, .260 x .720 x .060

# Model Series 980

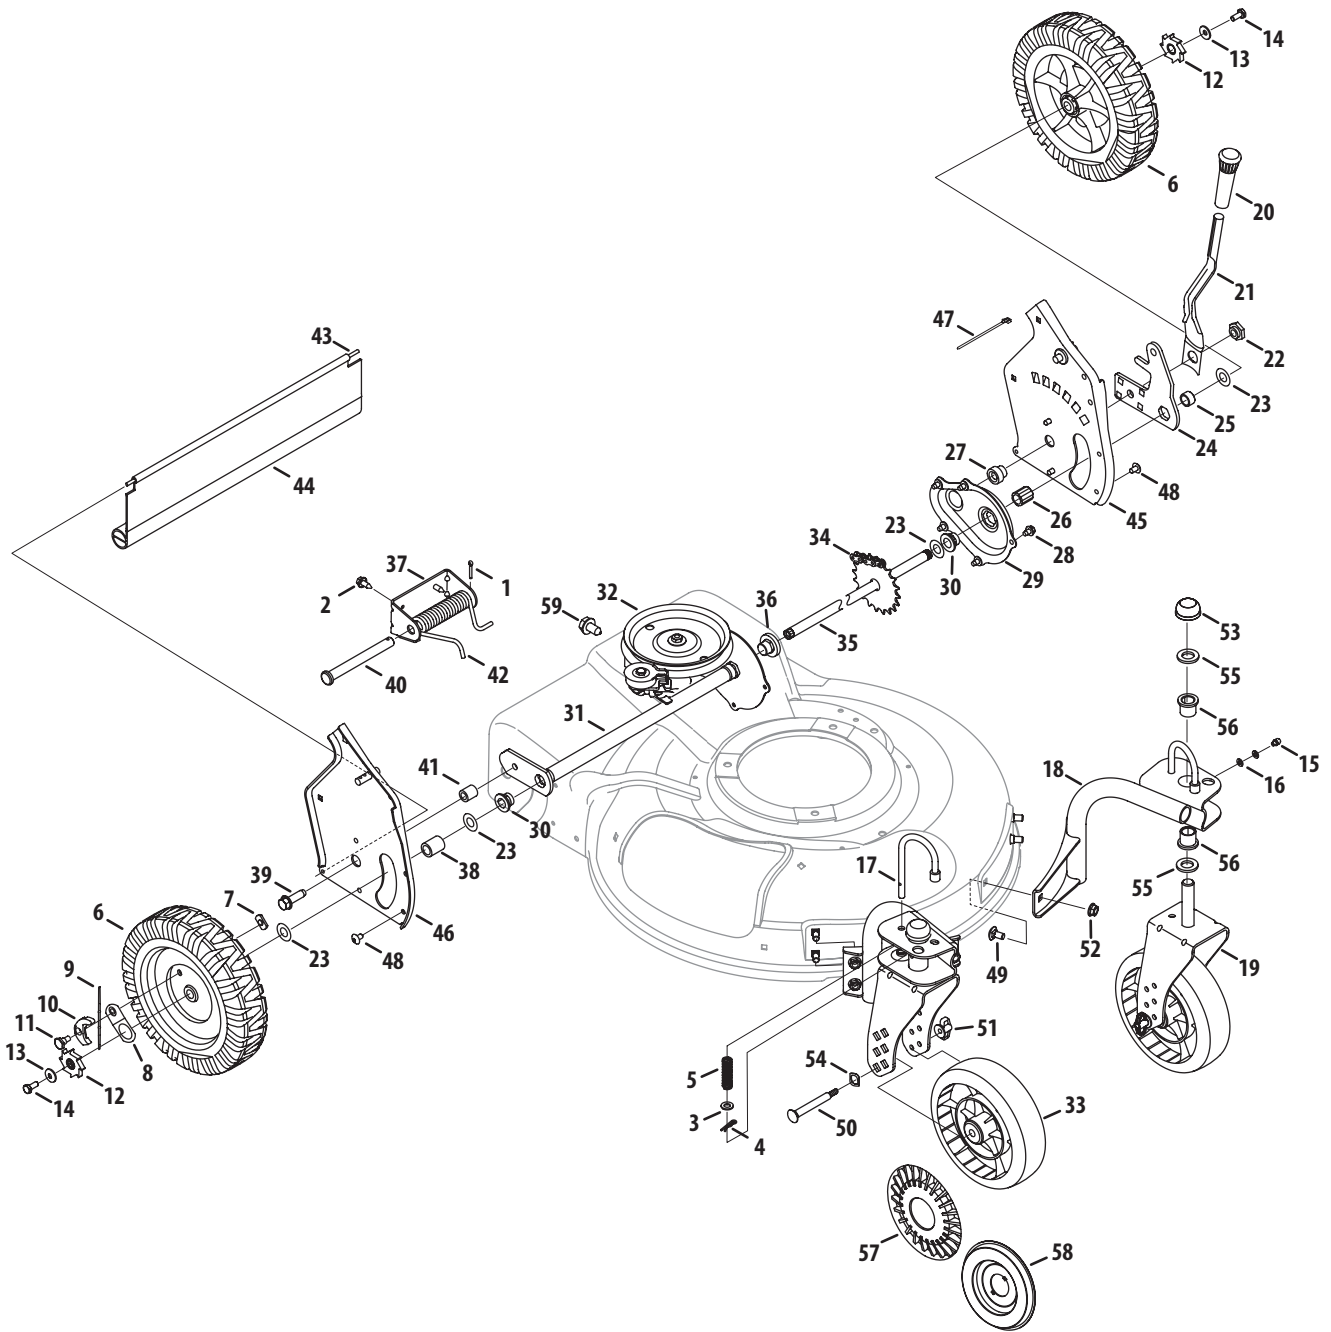

Ref No.	Part Number	Description
1	714-0474	Cotter Pin
2	710-1652	Screw 1/4-14 x .825
3	736-0264	Flat Washer.330 ID x.630 OD
4	714-0104	Cotter Pin
5	732-0306	Compression Spring
6	734-2044	Wheel, 9 x 2.125
7	712-0414	Top Lock Tab Weld Nut 1/4-20
8	16855	Ratchet Pawl Plate
9	10622B	Plastic Spring Ratchet
10	748-0381	Pawl RH
	748-0188B	Pawl LH
11	738-0137A	Shlder Screw.340 ID x.285 OD
12	748-0318	Wheel Ratchet
13	736-0270	Bell Washer.265 ID x.75 OD
14	710-0751	Hex Cap Screw 1/4-20 x.620
15	737-3000	Grease Fitting
16	736-0931	Flat Washer.203 ID x.403 OD
17	747-0924	Wheel Pin Lock
18	682-9020A	Caster Assembly RH
	682-9021A	Caster Assembly LH
19	682-9024	Caster Bracket Assembly RH
	682-9026	Caster Bracket Assembly LH
20	720-0223	Grip
21	732-0803A	Spring Lever
22	738-0529	Shoulder Nut.825 x .165 Lg.
23	736-0369	Flat Washer .508 ID x 1.0 OD
24	782-0566B	Pivot Arm Assembly
25	750-0515	Spacer .510 ID x .70 OD
26	741-0978	Slv Bearing .504 ID x .830 OD
27	750-1056	Shlder Spacer, .385ID x .715Lg
28	710-0653	Tap Screw 1/4-20 x .375

Ref No.	Part Number	Description
29	682-7528	Chain Cover Assembly
30	741-0324A	Flge Bearing .506 ID x .590 Lg
31	682-7526	Transmission Axle Assembly
32	618-0263A	Transmission Ass'y Complete
33	734-1857	Wheel 7 x 2
34	713-0453	Chain
35	638-0012	Rear Axle Assembly
36	741-0522	Flge Bearing .506 ID x .715 Lg
37	782-0568	Height Adjustment Spring Brkt.
38	750-0151	Spacer .550 ID x .750 OD
39	710-1315	Screw 3/8-16 x .25
40	711-0835	Clevis Pin .50 Dia x 4.82 Lg.
41	750-0807	Spacer .385 ID x .624 OD
42	732-0832	Torsion Spring
43	732-0842	Trail Shield Wire
44	731-1901A	Trail Shield
45	682-3053	Handle Bracket Assembly - LH
46	682-3052	Handle Bracket Assembly - RH
47	725-0157	Cable Tie
48	710-1348	Screw 1/4-14 x.500
49	710-0260A	Carriage Bolt 5/16-18 x.62
50	711-1146	Caster Axle
51	712-0397	Wing Nut
52	712-04063	Flange Lock Nut 5/16-18
53	726-0214	Push Cap
54	736-0232	Wave Washer.531 ID x.781 OD
55	736-0366	Flat Washer.640 ID x 1.12 OD
56	741-0685	Flange Bearing
57	731-1887	Hubcap - Spoke w/ Hole
58	731-0981A	Hubcap - Radial Spoke
59	710-0604A	Screw, 5/16-18 x .625