


PARTS LIST

REPLACEMENT PARTS - MODEL TB4SC  
4-CYCLE GAS BLOWER

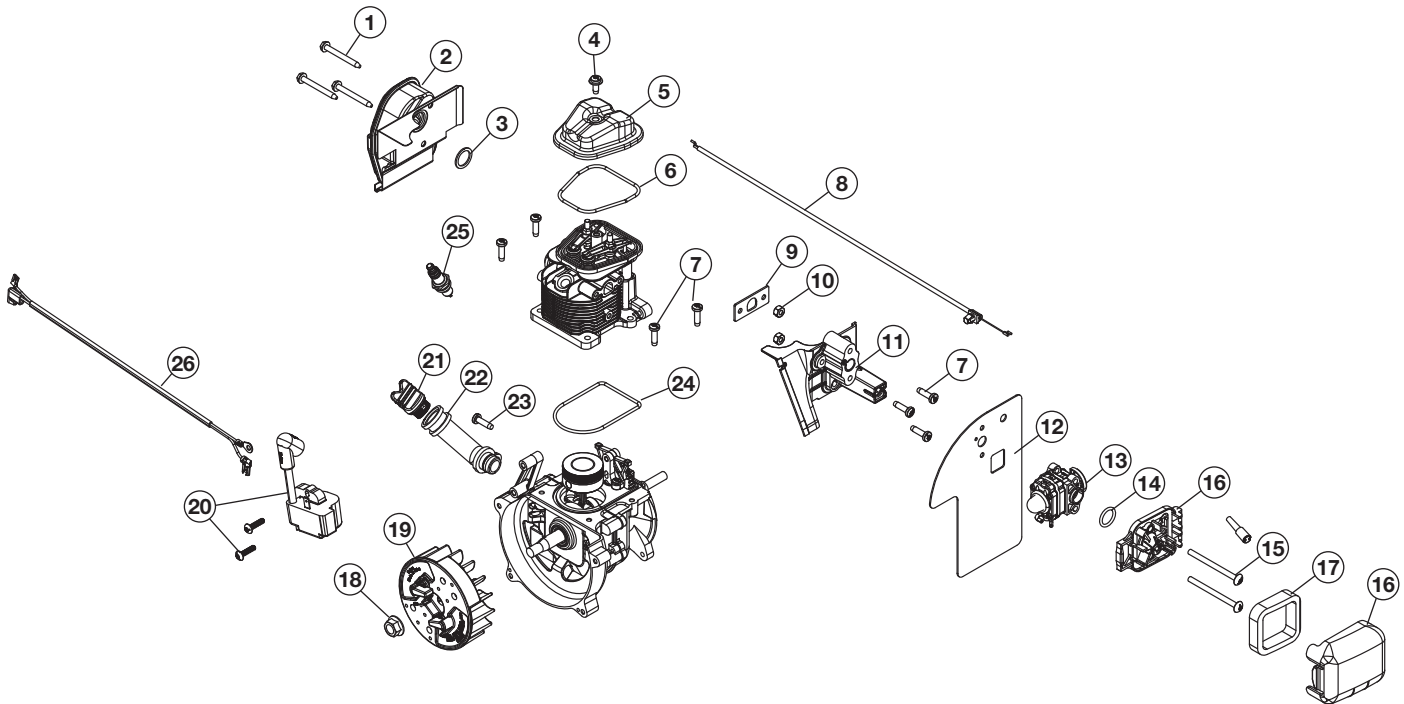


Item	Part No.	Description
1	753-05246	Muffler Screws
2	753-05900	Muffler Assembly (includes 1 & 3)
3	753-05244	Muffler Gasket
4	791-181025	Screw
5	753-05901	Rocker Cover
6	753-05902	O-Ring
7	791-181003	Screw
8	753-05903	Throttle Cable
9	753-05673	Insulator Gasket
10	753-05248	Nut
11	753-05904	Insulator
12	753-05905	Carburetor Gasket
13	753-05908	Carburetor
14	791-181751	Carburetor O-Ring
15	753-05253	Screw

Item	Part No.	Description
16	753-04223	Air Cleaner Assembly (includes 17)
17	791-181757	Air Filter
18	753-05687	Nut
19	753-05906	Flywheel Assembly
20	753-05907	Module
21	753-05400	Oil Plug
22	753-05909	Oil Fill Tube
23	753-05377	Screw
24	753-05910	O-Ring
25	753-05784	Spark Plug
26	753-05911	Lead Wire
*	753-05966	Valve
*	753-05912	Shortblock Assembly (includes 4-7 & 21-25)

\* Items Not Shown

PARTS LIST

REPLACEMENT PARTS - MODEL TB4SC  
4-CYCLE GAS BLOWER

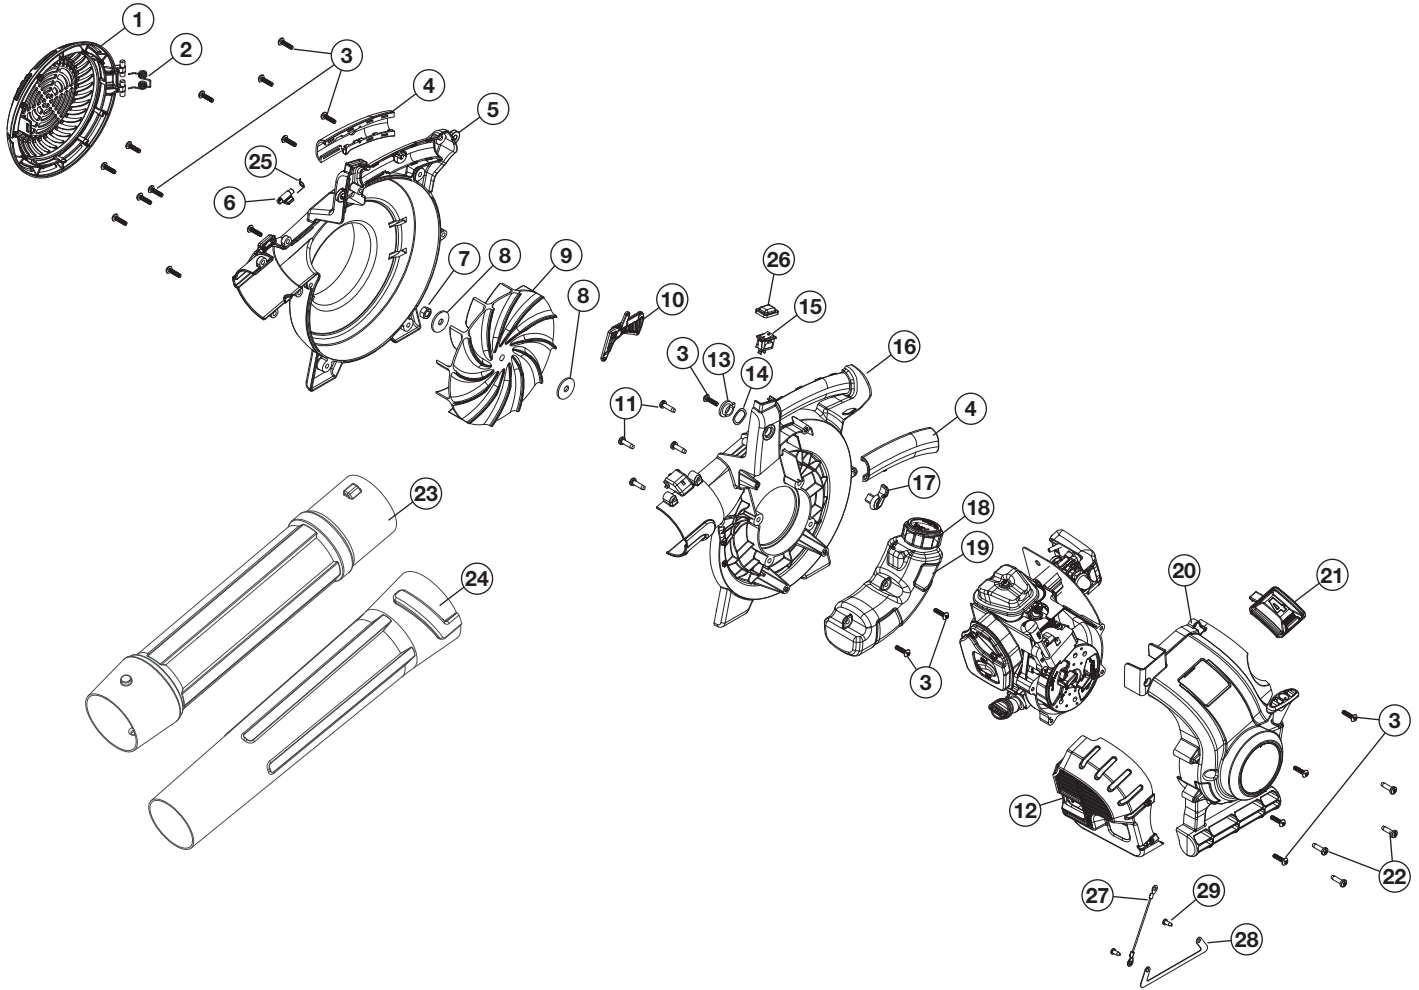

Item	Part No.	Description	Item	Part No.	Description
1	753-05917	Intake Cover	16	753-05921	Impeller Housing (includes 4)
2	753-05918	Spring	17	753-05932	Outer Trigger Lock
3	753-04595	Screw	18	753-05289	Fuel Cap
4	753-05919	Handle Grips	19	753-05933	Fuel Tank Assembly (includes 18)
5	753-05920	Impeller Housing (includes 4)	20	753-05941	Engine Cover Assembly (includes 3, 21 & 22)
6	753-05926	Latch Tube	21	753-05935	Spark Plug Cover
7	753-05927	Nut	22	753-05377	Screw
8	753-05928	Washer	23	753-05936	Upper Tube
9	753-05929	Impeller	24	753-05937	Lower Tube
10	753-05930	Throttle Trigger	25	753-05939	Latch Spring
11	791-181003	Screw	26	753-05942	Switch Cover
12	753-05931	Muffler Cover (includes 3)	27	753-05964	Wire Ground
13	753-05924	Inner Trigger Lock	28	753-05965	Strap Ground
14	753-05925	Wavy Washer	29	753-1202	Screw
15	791-182405	Switch			