


**REPLACEMENT PARTS - MODEL Y26SS**  
**4-CYCLE GAS TRIMMER**  
PPN 41CD26SC900

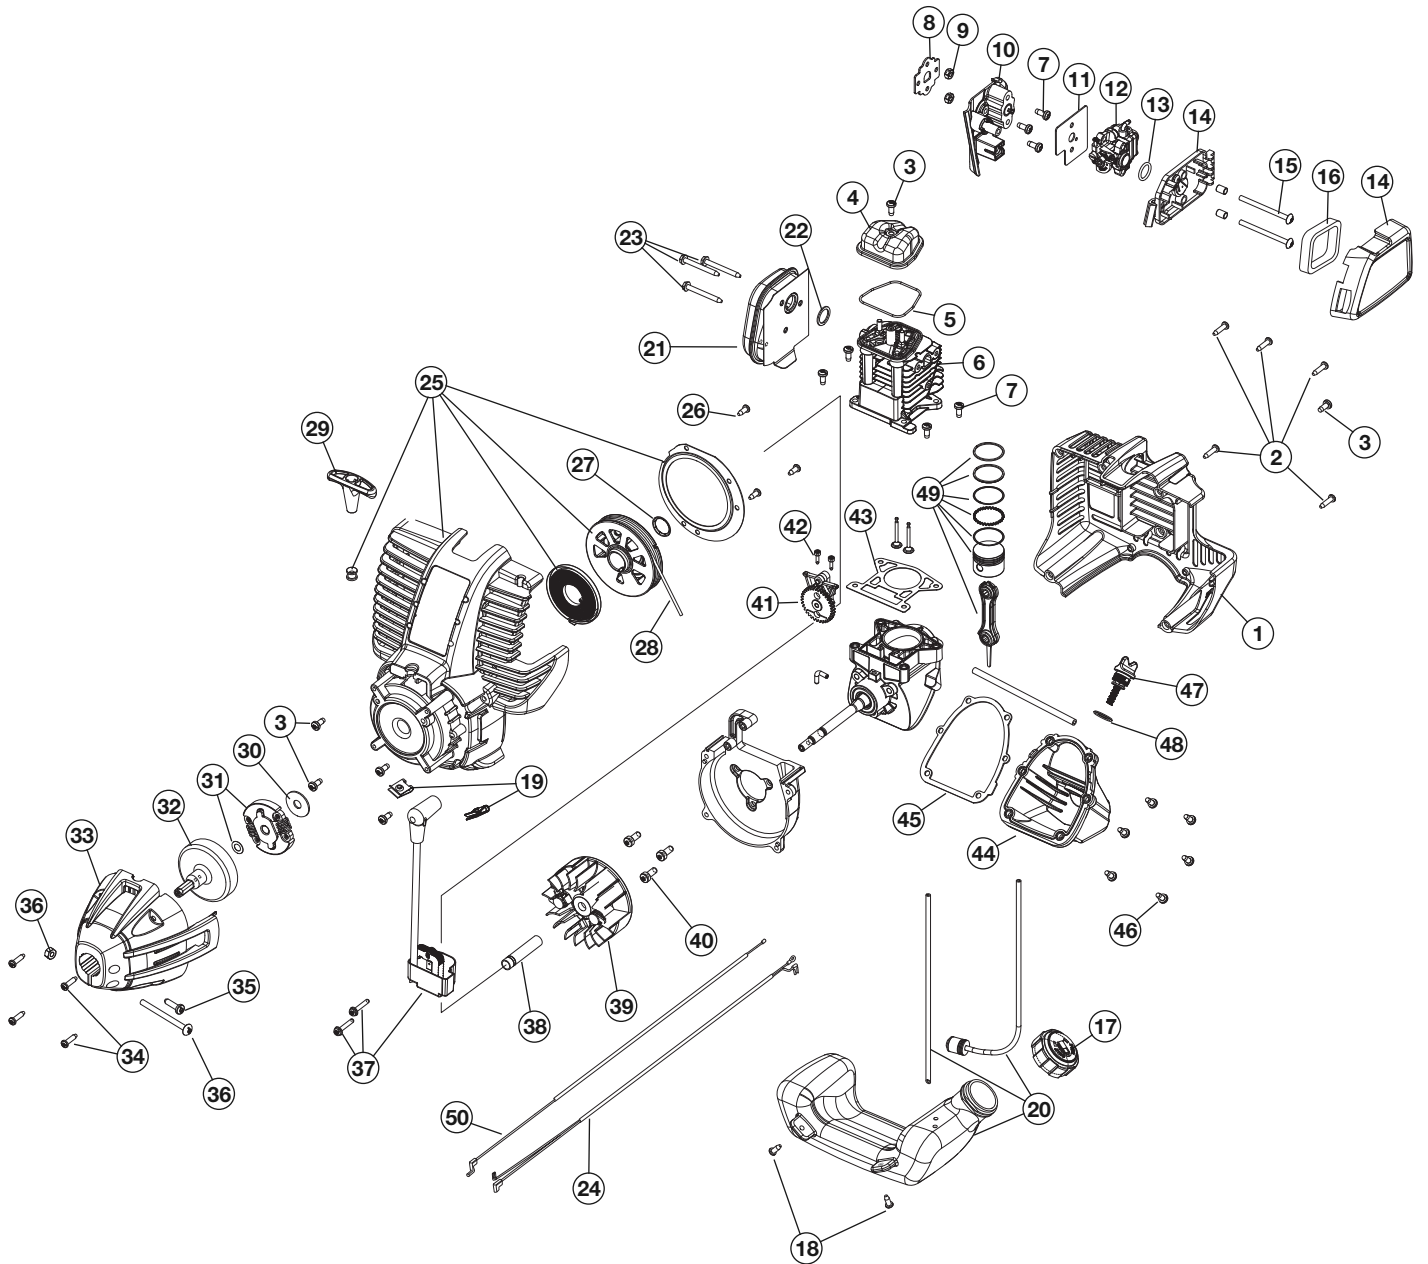

# REPLACEMENT PARTS - MODEL Y26SS


## 4-CYCLE GAS TRIMMER

PPN 41CD26SC900

---

<u>Item</u>	<u>Part No.</u>	<u>Description</u>	<u>Item</u>	<u>Part No.</u>	<u>Description</u>
1	753-05449	Engine Cover	30	791-182396	Washer
2	791-181345	Screw	31	753-1238	Clutch Assembly
3	753-05377	Screw	32	791-153592	Clutch Drum
4	753-05209	Valve Cover	33	753-05446	Clutch Cover Assembly (includes 34-36)
5	753-05210	Valve Cover Gasket	34	791-181345	Cover Screw
6	753-05438	Cylinder Assembly (includes 5, 7 & 43)	35	791-182519	Anti-Rotation Screw
7	791-181003	Cylinder Screw	36	753-04291	Clamping Screw Assembly
8	753-05247	Insulator Gasket	37	753-05243	Ignition Module Assembly
9	753-05248	Nut	38	753-05078	Spacer
10	753-05452	Insulator (includes 11)	39	753-05240	Flywheel
11	753-05439	Carburetor Gasket	40	791-181861	Shroud Screw
12	753-1225	Carburetor w/Primer	41	753-04919	Cam Bracket Assembly (includes 42)
13	791-181751	Carburetor O-Ring	42	791-181012	Cam Bracket Screw
14	753-06061	Air Filter Cover Assembly (includes 16)	43	791-182374	Cylinder Gasket
15	753-05253	Air Filter Mounting Screw	44	791-182377	Oil Pan (includes 45 & 46)
16	753-05442	Air Filter	45	791-181018	Oil Pan Gasket
17	753-05289	Fuel Cap	46	791-181020	Oil Pan Screw
18	791-181930	Screw	47	791-182378	Dipstick Assembly (includes 48)
19	791-182366	Clip Nut	48	791-182290	O-Ring
20	753-05443	Fuel Tank Assembly (includes 17)	49	753-06031	Piston Assembly
21	753-05444	Muffler Assembly (includes 22 & 23)	50	753-05266	Throttle Cable
22	753-05244	Muffler Gasket	*	753-05784	Spark Plug
23	753-05246	Muffler Mounting Screw	*	753-06117	Shortblock Assembly (includes 3-7 & 37-49)
24	753-05264	Lead Wire			
25	753-06062	Starter Housing Assembly (includes 3 & 26-29)			
26	753-1202	Plate Screw			
27	753-05260	Push Nut			
28	753-05840	Rope			
29	791-181079	Pull Handle			

**REPLACEMENT PARTS - MODEL Y26SS**  
**4-CYCLE GAS TRIMMER**  
 PPN 41CD26SC900

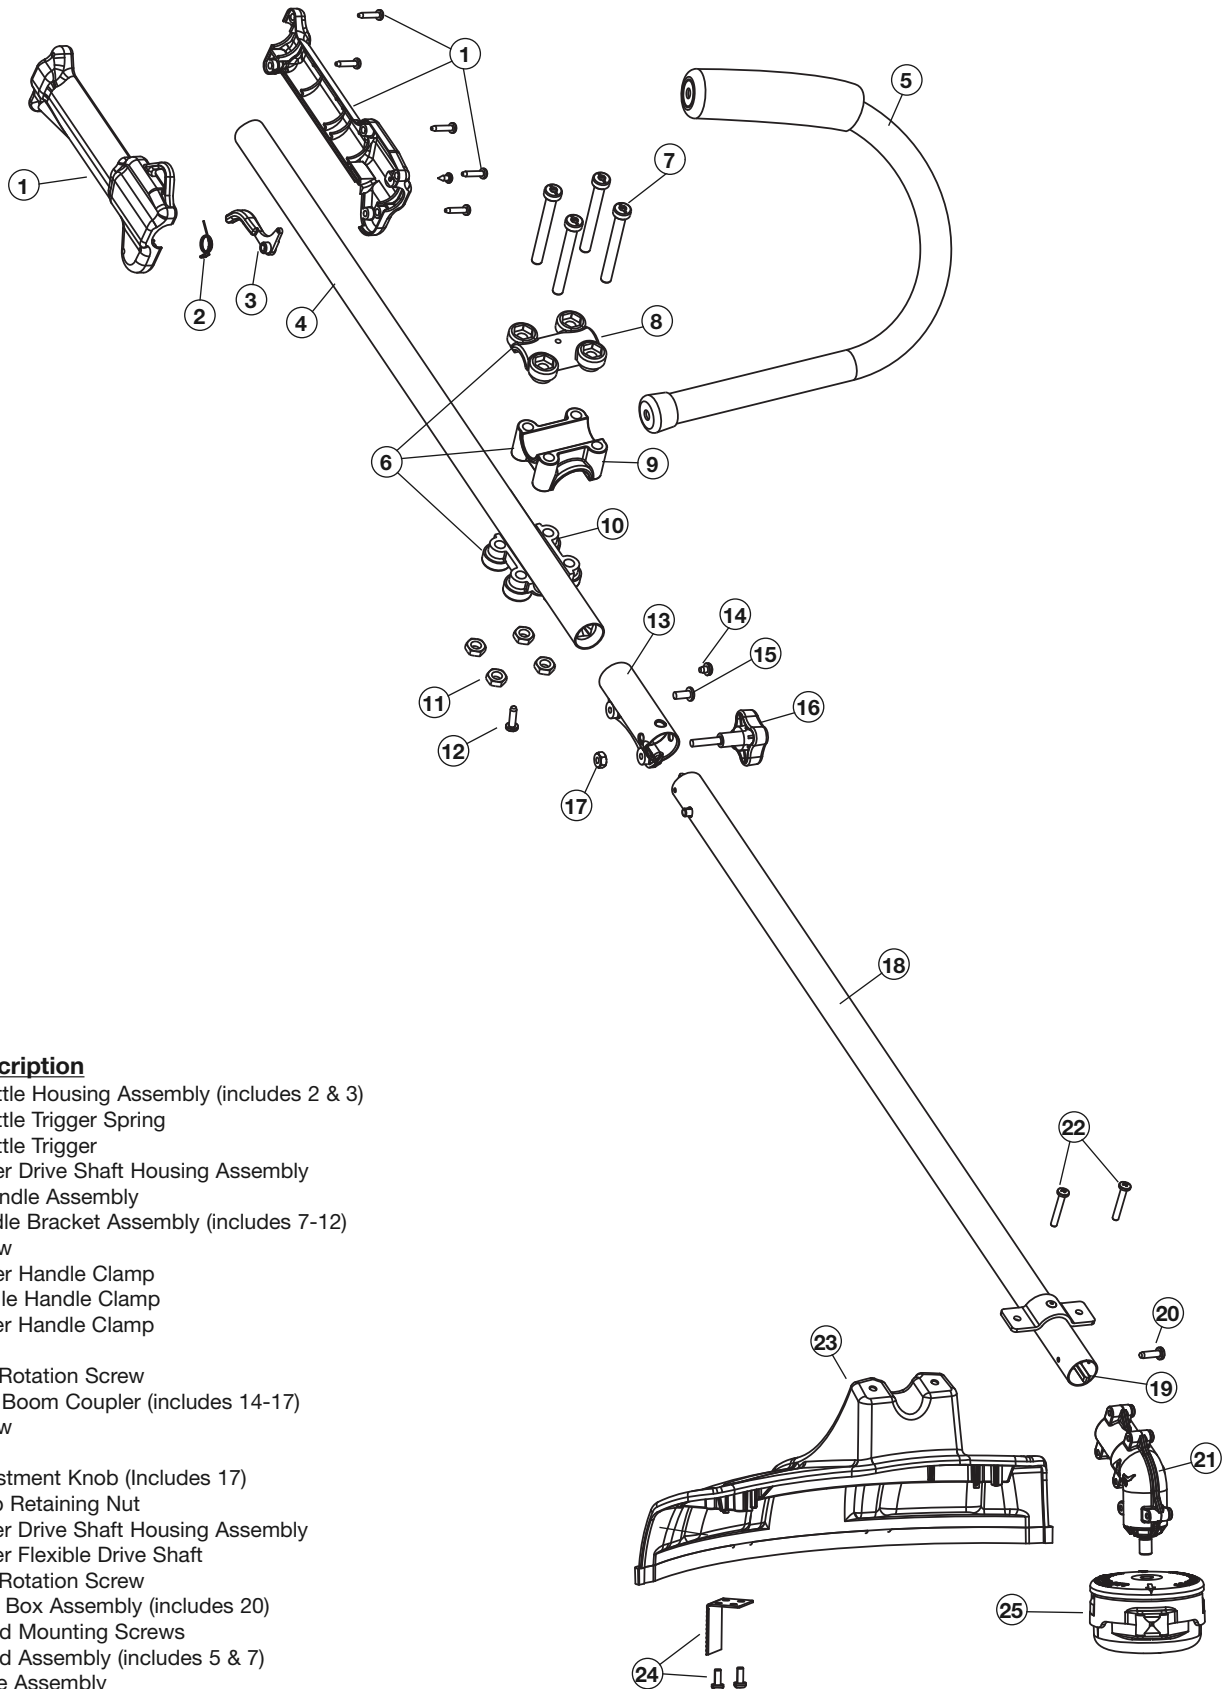

Item	Part No.	Description
1	753-04234	Throttle Housing Assembly (includes 2 & 3)
2	791-182690	Throttle Trigger Spring
3	753-04119	Throttle Trigger
4	753-04236	Upper Drive Shaft Housing Assembly
5	791-180687	J-Handle Assembly
6	791-683295	Handle Bracket Assembly (includes 7-12)
7	791-181811	Screw
8	791-181812	Upper Handle Clamp
9	791-181813	Middle Handle Clamp
10	791-181814	Lower Handle Clamp
11	791-181815	Nut
12	791-145569	Anti-Rotation Screw
13	791-181616B	Split Boom Coupler (includes 14-17)
14	791-182057	Screw
15	791-181617	Bolt
16	791-181981	Adjustment Knob (Includes 17)
17	753-04386	Knob Retaining Nut
18	753-06139	Lower Drive Shaft Housing Assembly
19	753-05267	Lower Flexible Drive Shaft
20	753-05698	Anti-Rotation Screw
21	753-06124	Gear Box Assembly (includes 20)
22	753-06125	Shield Mounting Screws
23	753-06123	Shield Assembly (includes 5 & 7)
24	753-06126	Blade Assembly
25	753-06129	Cutting Head Assembly