


# REPLACEMENT PARTS - MODEL MTD5520


## ENGINE ASSEMBLY

PPN 41AY85AR978

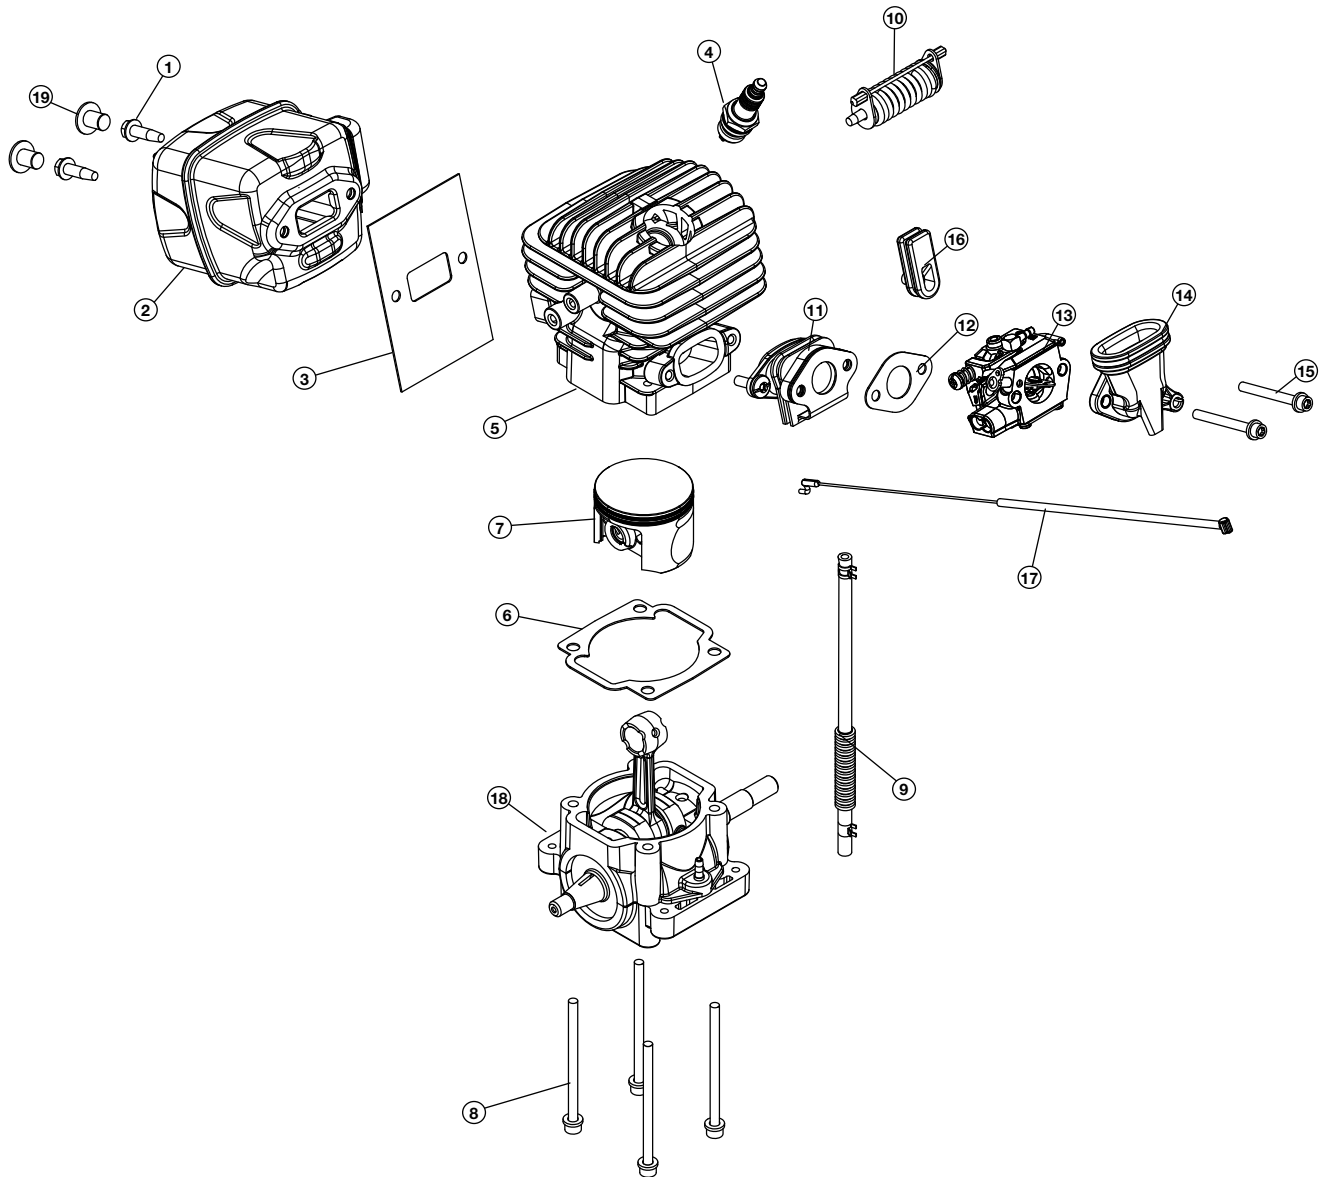

Item	Part No.	Description
1	753-06397	Muffler Screw
2	753-06268	Muffler Assembly (includes 1, 3 & 19)
3	753-06398	Muffler Gasket
4	753-06269	Spark Plug
5	753-06399	Cylinder Assembly (includes 6, 8 & 10)
6	753-06400	Cylinder Gasket
7	753-06401	Piston Assembly
8	753-06402	Cylinder Hardware
9	753-06403	Breather Hose w/clamp
10	753-06404	Isolator Assembly
11	753-06405	Insulator Assembly
12	753-06406	Carburetor Gasket
13	753-06407	Carburetor
14	753-06408	Boot & Bracket Assembly
15	753-06410	Carburetor Hardware
16	753-06411	Grommet
17	753-06409	Throttle Cable
18	753-06412	Shortblock Assembly (includes 4-10)
19	753-06507	Muffler Plug

# REPLACEMENT PARTS - MODEL MTD5520 ENGINE ASSEMBLY PPN 41AY85AR978

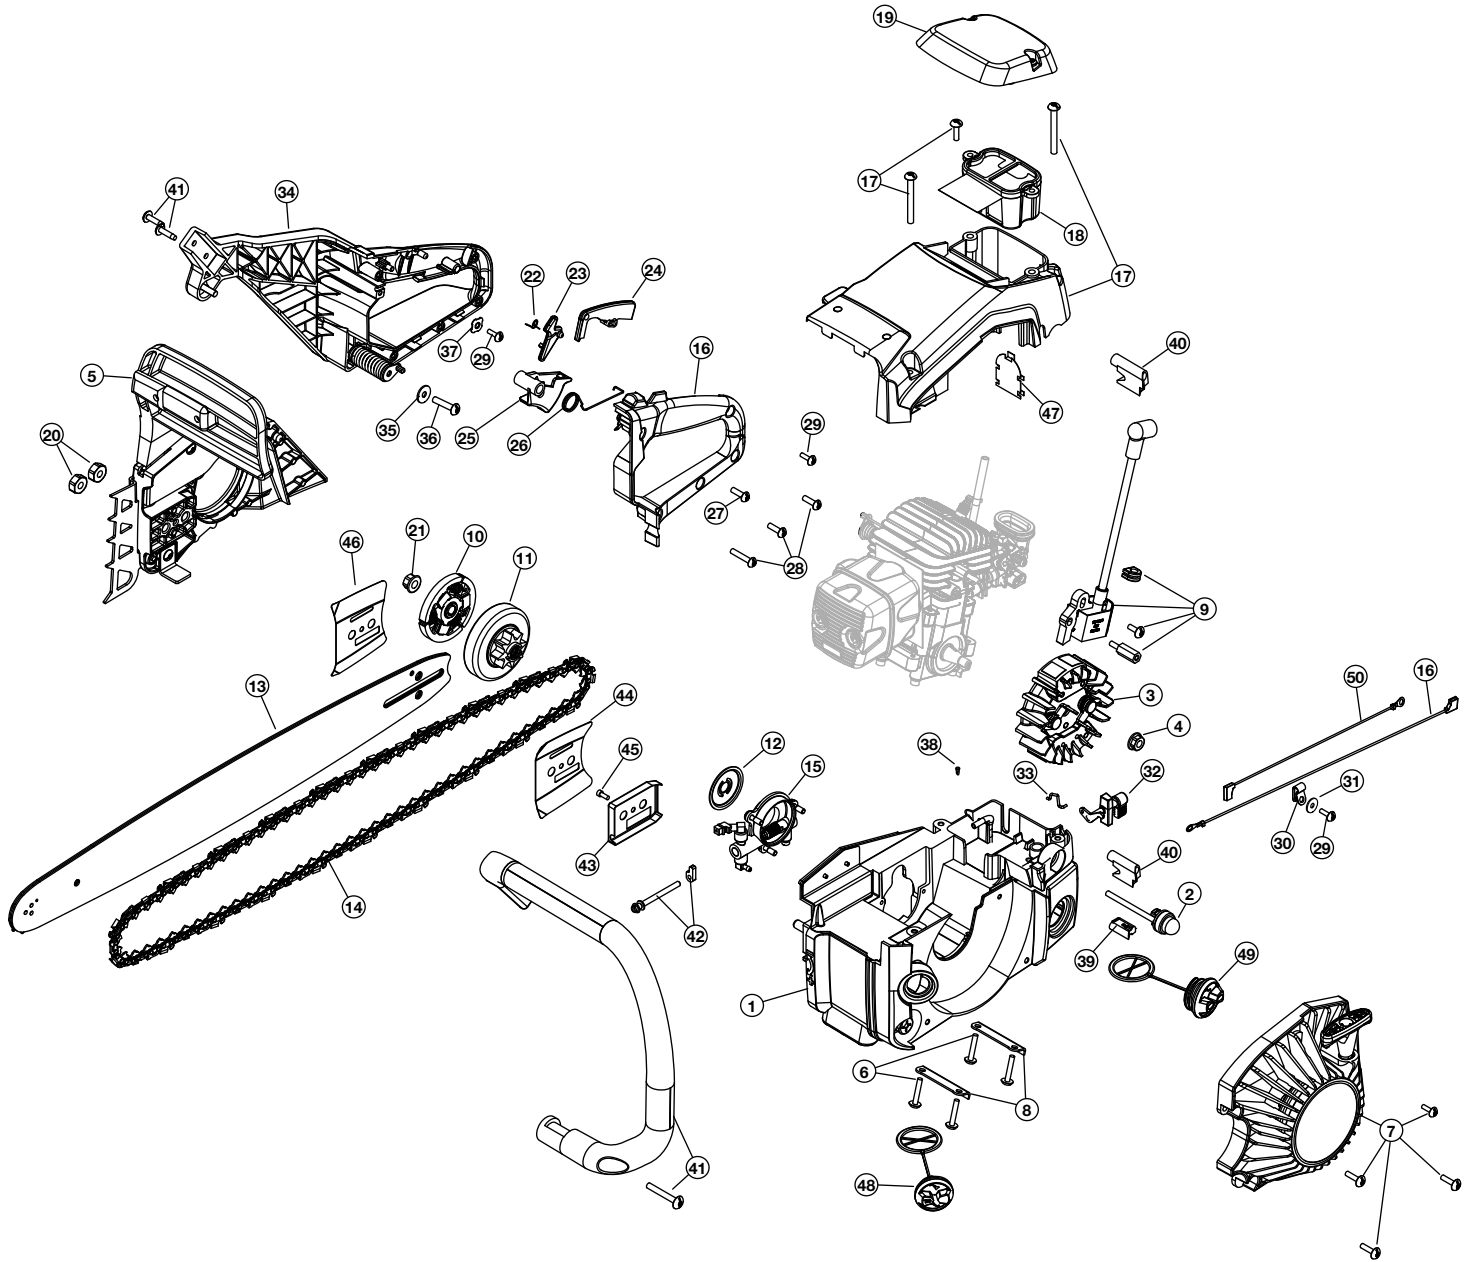

Item	Part No.	Description
1	753-06424	Housing Assembly
2	753-06425	Primer Bulb Assembly
3	753-06426	Flywheel Assembly
4	753-06427	Flywheel Nut
5	753-06386	Chain Brake Assembly
6	753-06429	Engine Mount Screw
7	753-06430	Starter Housing Assembly
8	753-06431	Engine Mount Plate Assembly (includes 6)
9	753-06432	Module Assembly
10	753-06449	Clutch
11	753-06450	Clutch Drum Assembly
12	753-06451	Oil Pump Shield
13	753-06266	Bar
14	753-06267	20" Chain
15	753-06387	Oil Pump Assembly
16	753-06390	Rear Handle Cover Assembly w/switch
17	753-06456	Top Cover Assembly
18	753-06457	Air Cleaner Assembly
19	753-06458	Air Cleaner Cover Assembly
20	753-06460	Bar Nut
21	753-06461	Clutch Nut
22	753-06462	Idle Latch Spring
23	753-06463	High Idle Latch
24	753-06464	Trigger Release
25	753-06465	Throttle Trigger
26	753-06466	Trigger Release Spring
27	753-06467	Upper Grip Screw

Item	Part No.	Description
28	753-06468	Lower Grip Screw
29	753-06470	Throttle Clamp Screw
30	753-06471	Cable Clamp
31	753-06472	Washer
32	753-06473	Choke Lever Assembly
33	753-06474	Choke Rod
34	753-06476	Rear Handle Assembly
35	753-06477	Grip Anti-vibration Washer
36	753-06478	Grip Anti-vibration Screw
37	753-06479	Throttle Clamp Washer
38	753-06480	Grommet
39	753-06481	Plug
40	753-06482	Boot
41	753-06483	Handle Assembly
42	753-06484	Tension Screw & Nut Assembly
43	753-06485	Bar Plate
44	753-06486	Inner Guide Plate
45	753-06487	Guide Plate Screw
46	753-06488	Outer Guide Plate
47	753-06504	Screen
48	753-06505	Oil Cap
49	753-06506	Fuel Cap
50	753-06510	Ground Wire

\* Items Not Shown  
 \* 753-06489 Case  
 \* 753-06490 Wrench