


**REPLACEMENT PARTS - MODEL TB590 EC**  
**4-CYCLE BRUSHCUTTER**  
PPN 41CDT59C966

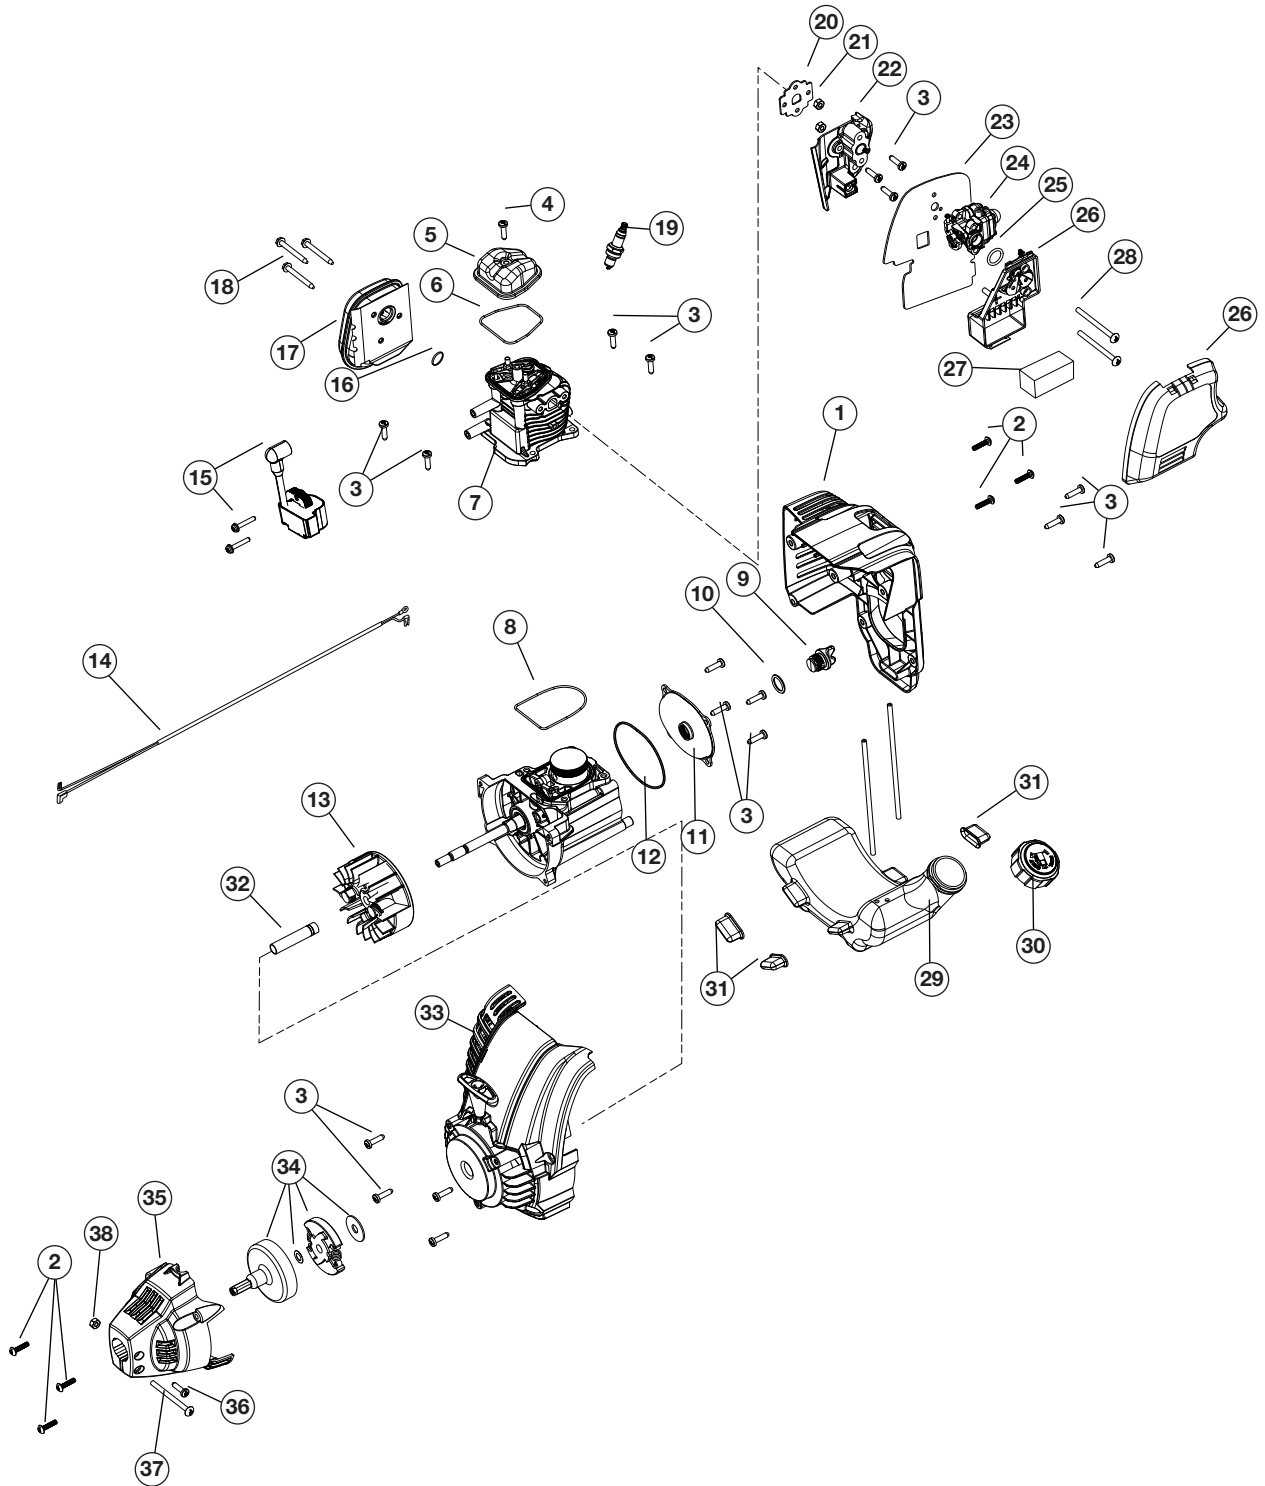

# REPLACEMENT PARTS - MODEL TB590 EC


## 4-CYCLE BRUSHCUTTER

PPN 41CDT59C966

<u>Item</u>	<u>Part No.</u>	<u>Description</u>	<u>Item</u>	<u>Part No.</u>	<u>Description</u>
1	753-06134	Engine Cover Assembly (includes 2 & 3)	21	753-05248	Nut
2	753-04595	Cover Screw	22	753-05249	Insulator
3	753-05377	Housing Screw	23	753-05366	Carburetor Gasket
4	791-181025	Rocker Cover Screw	24	753-06220	Carburetor
5	753-05209	Rocker Cover	25	791-181751	O-Ring
6	753-05210	Rocker Cover O-Ring	26	753-05252	Air Cleaner Cover Assembly (includes 27)
7	753-06311	Cylinder Assembly (includes 3-6 & 8)	27	753-05254	Air Filter
8	753-05910	Cylinder O-Ring	28	753-05253	Screw
9	753-05408	Oil Plug (includes 10)	29	753-06240	Fuel Tank Assembly w/Fuel Lines (includes 30)*
10	791-182290	Oil Plug O-Ring	30	753-1229	Fuel Cap
11	753-06111	Crankcase Cover	31	753-05259	Fuel Tank Pads
12	753-05238	Crankcase Cover O-ring	32	753-05078	Spacer
13	753-06221	Flywheel Assembly	33	753-06314	Starter Housing Assembly (includes 3)
14	753-05264	Lead Wires	34	753-06281	Clutch Drum Assembly
15	753-05301	Module Assembly	35	753-05263	Clutch Cover (includes 2)
16	753-05244	Muffler Gasket	36	791-182519	Anti-Rotation Screw
17	753-05245	Muffler Assembly (includes 16 & 18)	37	753-04003	Clamp Screw
18	753-05246	Muffler Screw	38	791-180217	Nut
19	753-05784	Spark Plug	*	753-05297	Spark Arrestor Assembly
20	753-05247	Insulator Gasket	*	753-06317	Shortblock Assembly (includes 3-8, 13, 15 & 19)

# REPLACEMENT PARTS - MODEL TB590 EC 4-CYCLE BRUSHCUTTER

PPN 41CDT59C966

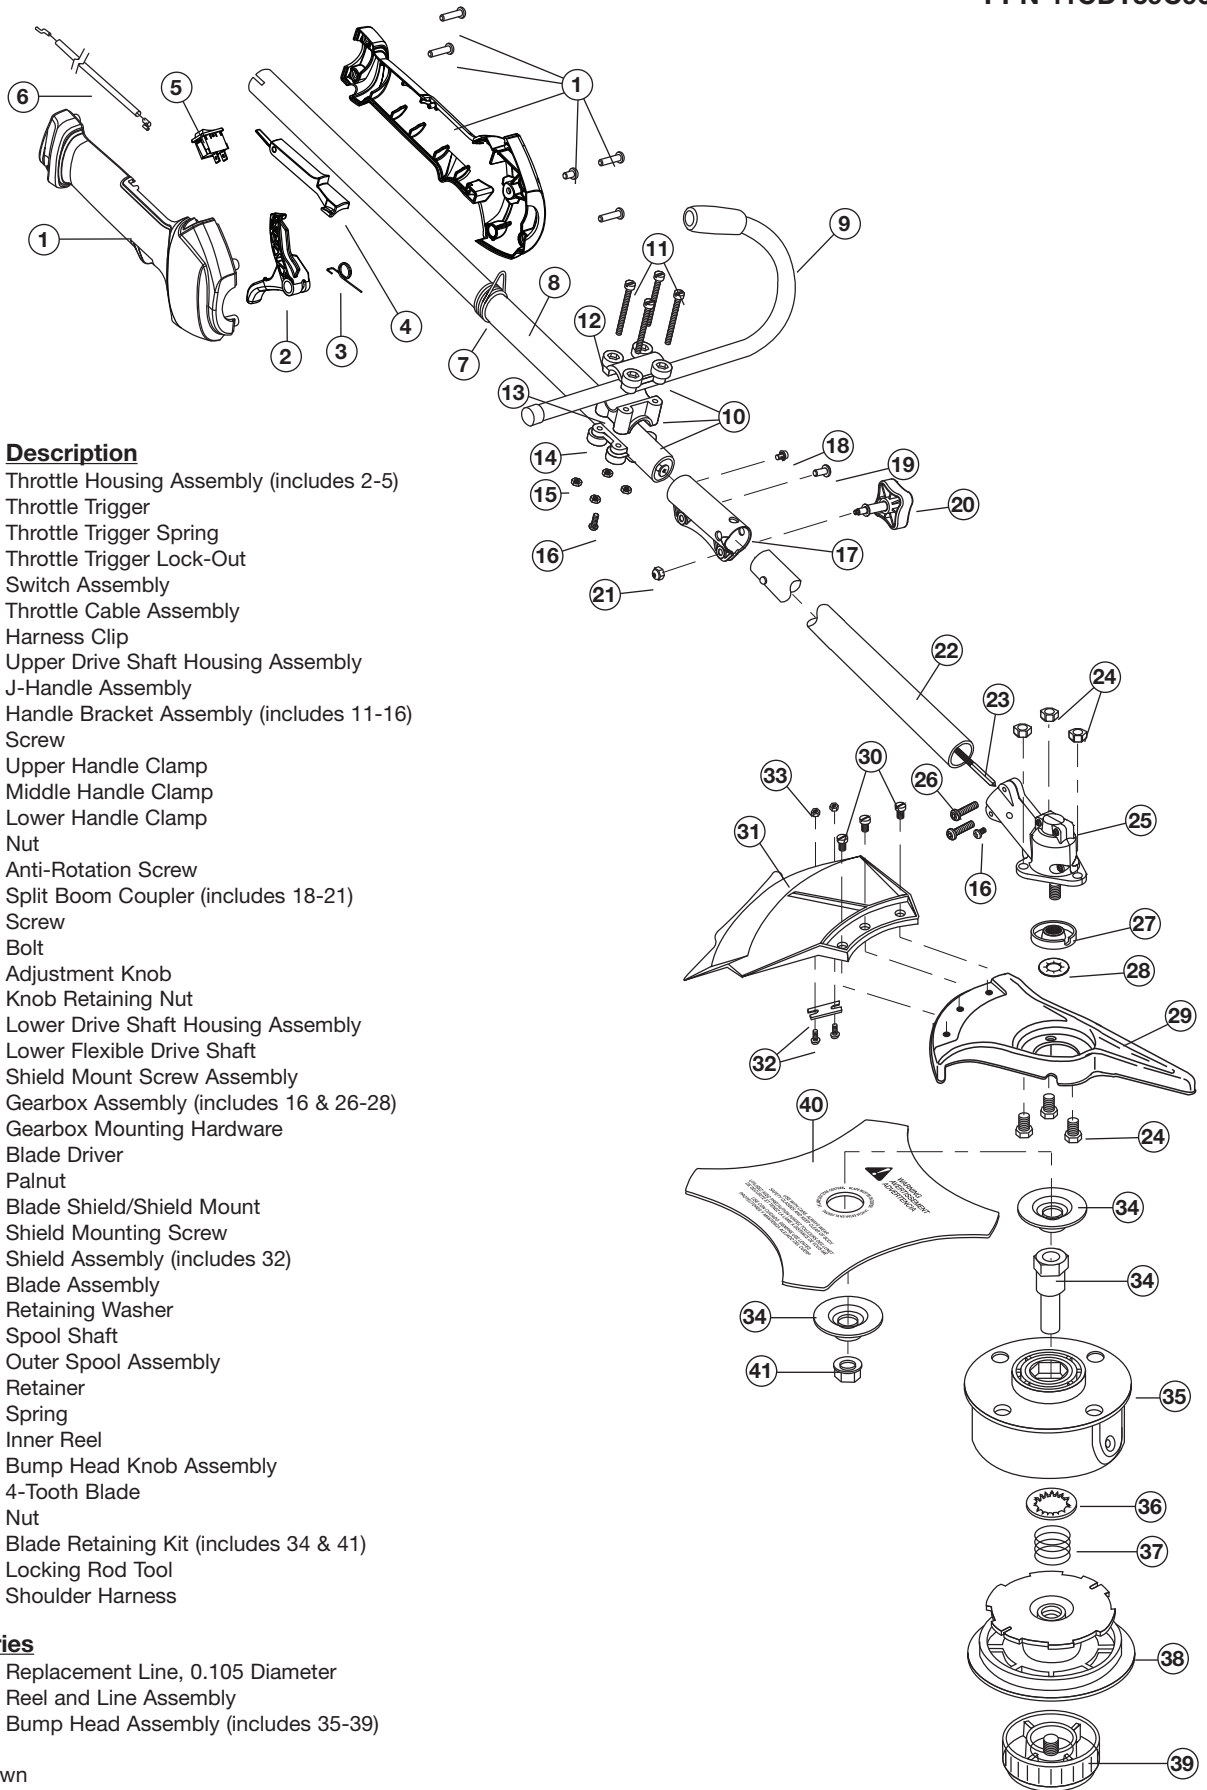

Item	Part No.	Description
1	753-05192	Throttle Housing Assembly (includes 2-5)
2	753-04991	Throttle Trigger
3	753-05007	Throttle Trigger Spring
4	753-05171	Throttle Trigger Lock-Out
5	791-182405	Switch Assembly
6	753-05270	Throttle Cable Assembly
7	791-610327	Harness Clip
8	753-04236	Upper Drive Shaft Housing Assembly
9	791-181099	J-Handle Assembly
10	791-683295	Handle Bracket Assembly (includes 11-16)
11	791-181811	Screw
12	791-181812	Upper Handle Clamp
13	791-181813	Middle Handle Clamp
14	791-181814	Lower Handle Clamp
15	791-181815	Nut
16	791-182519	Anti-Rotation Screw
17	753-1190	Split Boom Coupler (includes 18-21)
18	791-182057	Screw
19	791-181617	Bolt
20	791-181951	Adjustment Knob
21	753-04386	Knob Retaining Nut
22	753-04504	Lower Drive Shaft Housing Assembly
23	753-05267	Lower Flexible Drive Shaft
24	791-182200	Shield Mount Screw Assembly
25	791-182193	Gearbox Assembly (includes 16 & 26-28)
26	791-182195	Gearbox Mounting Hardware
27	791-182196	Blade Driver
28	753-04348	Palnut
29	791-147492	Blade Shield/Shield Mount
30	791-683304	Shield Mounting Screw
31	753-1191	Shield Assembly (includes 32)
32	791-682061	Blade Assembly
33	791-147490	Retaining Washer
34	791-612483	Spool Shaft
35	791-683301	Outer Spool Assembly
36	791-612026	Retainer
37	791-610636B	Spring
38	791-147495	Inner Reel
39	791-180814B	Bump Head Knob Assembly
40	791-145873B	4-Tooth Blade
41	791-181699	Nut
*	791-180014B	Blade Retaining Kit (includes 34 & 41)
*	791-613226	Locking Rod Tool
*	791-682075B	Shoulder Harness

### Optional Accessories

- \* 753-04216 Replacement Line, 0.105 Diameter
- \* 753-1224 Reel and Line Assembly
- \* 753-1161 Bump Head Assembly (includes 35-39)

\* Items Not Shown