


# REPLACEMENT PARTS - MODEL TB2BP

## 2-CYCLE GAS BACKPACK BLOWER


PPN 41AR2BEG966

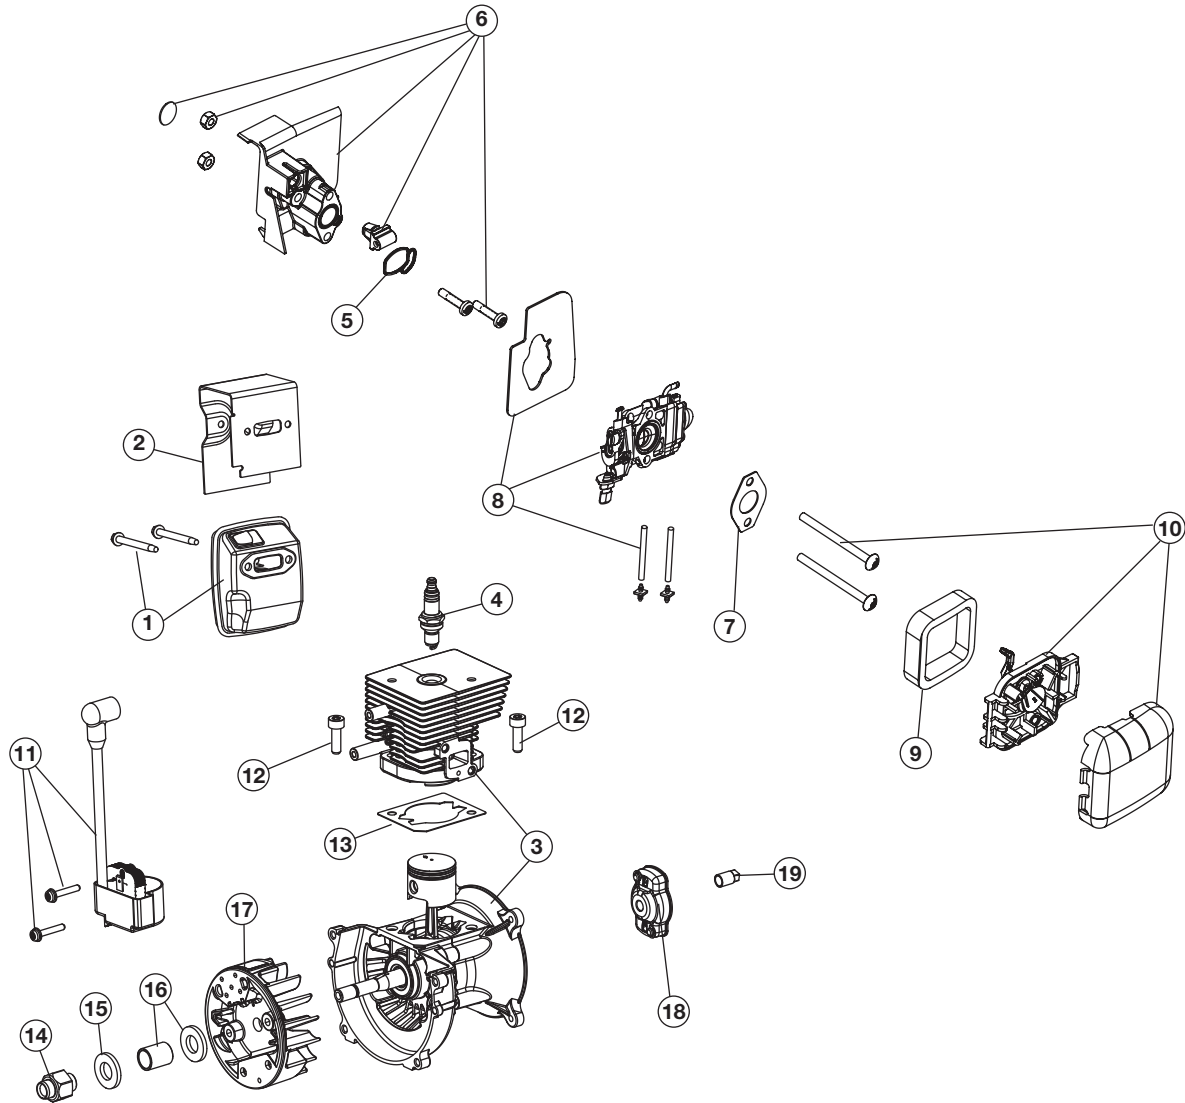

Item	Part No.	Description
1	753-06418	Muffler Assembly (includes 2)
2	753-06419	Muffler Gasket
3	753-06441	Shortblock Assembly (includes 4 & 11-17)
4	753-06193	Spark Plug
5	753-06184	Insulator O-Ring
6	753-06189	Insulator Assembly (includes 5)
7	753-06253	Carburetor Gasket
8	753-06442	Carburetor Assembly (includes 7)
9	791-181757	Air Filter

Item	Part No.	Description
10	753-05634	Air Cleaner Assembly (includes 9)
11	753-06443	Module Assembly
12	753-05703	Screw
13	753-06440	Cylinder Gasket
14	753-05705	Flywheel Adaptor
15	753-05706	Washer
16	753-05707	Bushing
17	753-06246	Flywheel Assembly
18	753-06091	Pawl Assembly
19	753-06104	Electric Start Adaptor

**REPLACEMENT PARTS - MODEL TB2BP**  
**2-CYCLE GAS BACKPACK BLOWER**  
 PPN 41AR2BEG966

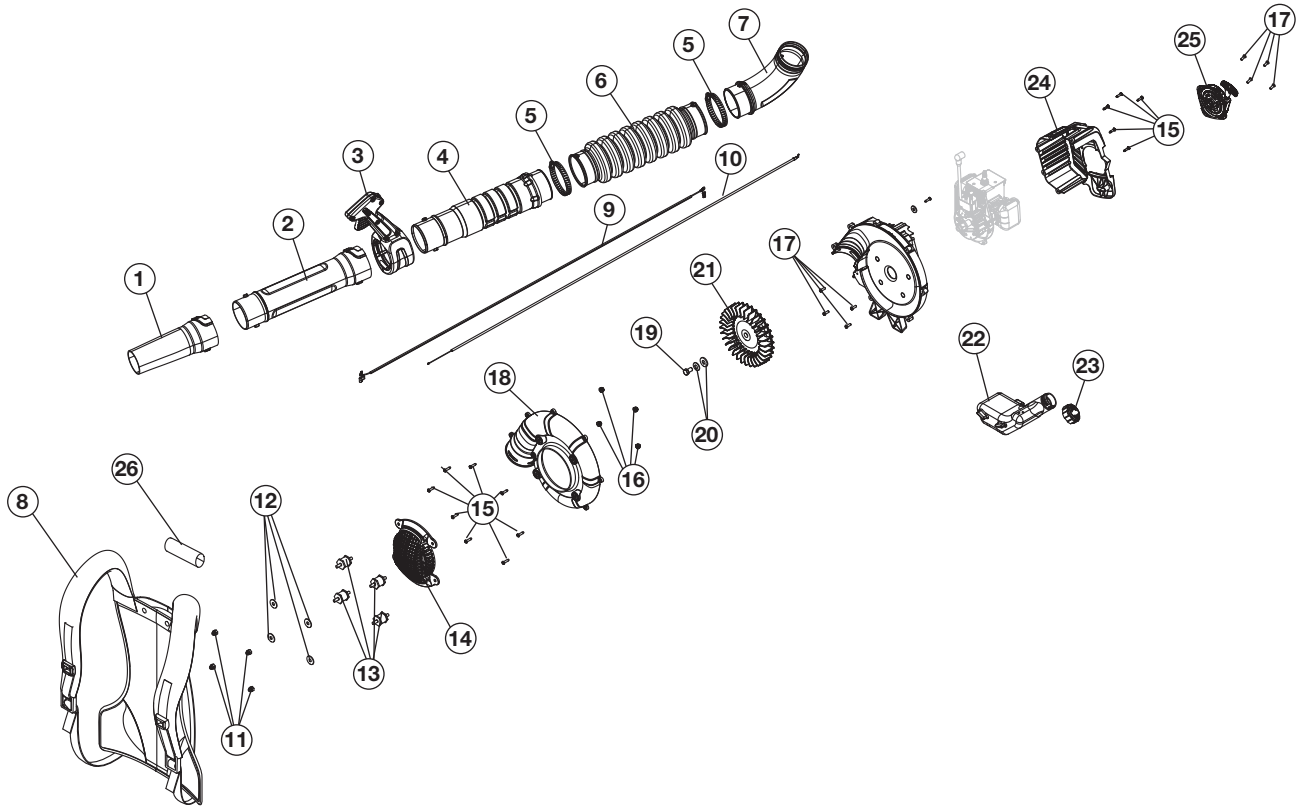

<u>Item</u>	<u>Part No.</u>	<u>Description</u>	<u>Item</u>	<u>Part No.</u>	<u>Description</u>
1	753-06000	Nozzle	14	753-05786	Intake Cover
2	753-05971	Lower Blower Tube	15	791-181345	Screw
3	753-05975	Throttle Grip Assembly	16	791-180050	Nut
4	753-05991	Upper Blower Tube	17	791-181862	Screw
5	753-05640	Clamp	18	753-06597	Impeller Housing Assembly (includes 13-17)
6	753-05641	Flex Tube	19	791-182414	Bolt
7	753-05990	Elbow	20	753-04482	Impeller Hardware (includes 19)
8	753-05645	Harness	21	753-05651	Impeller (includes 19 & 20)
9	753-05643	Lead Wire	22	753-05654	Fuel Tank Assembly (includes 23)
10	753-06434	Throttle Cable	23	791-182529	Fuel Cap
11	753-05647	Nut	24	753-06598	Housing Assembly (includes 15)
12	791-182678	Washer	25	753-06596	Starter Assembly (includes 17)
13	753-05648	Insulator Mount	26	753-06345	Grip