


REPLACEMENT PARTS - MODEL TB4HB EC 4-CYCLE BACKPACK BLOWER

PPN 41CS4SCG966

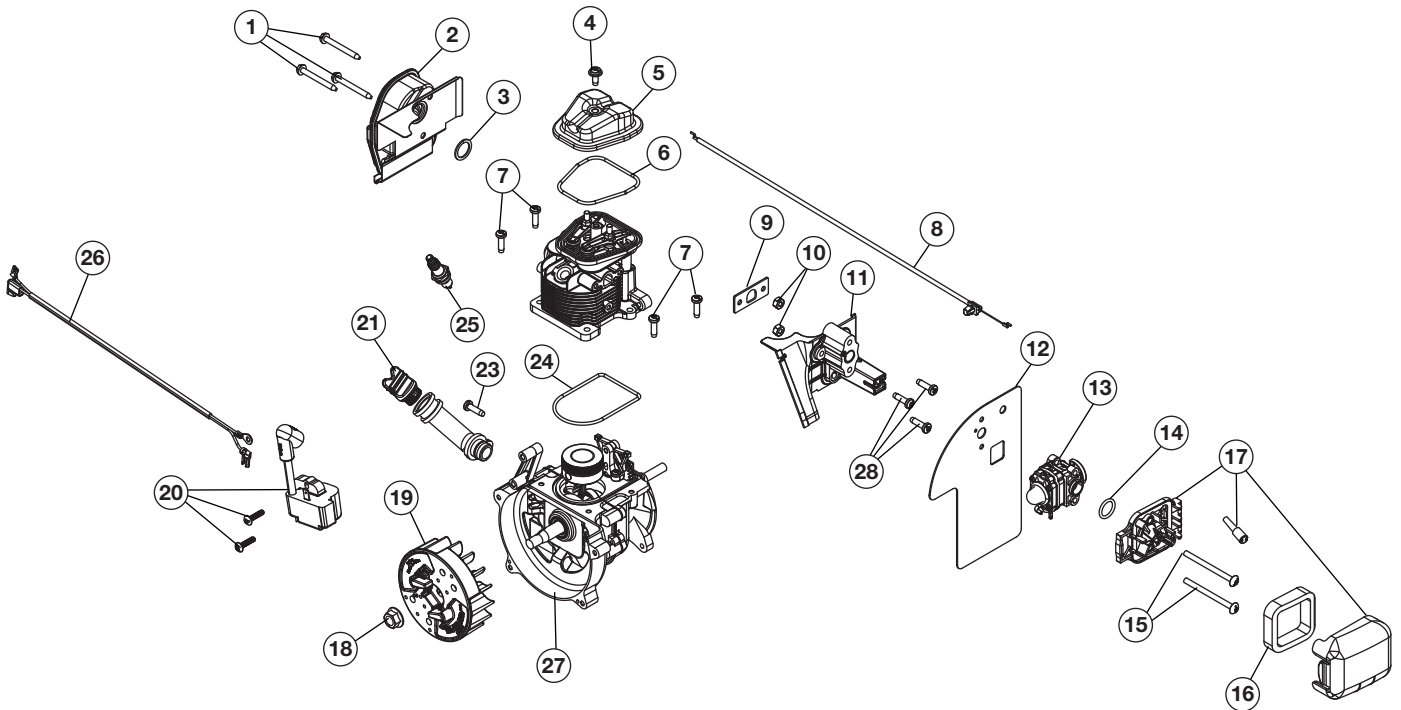


Item	Part No.	Description	Item	Part No.	Description
1	753-05246	Muffler Screws	19	753-05906	Flywheel Assembly
2	753-05900	Muffler Assembly (includes 1 & 3)	20	753-05907	Module
3	753-05244	Muffler Gasket	21	753-05400	Oil Plug
4	791-181025	Screw	22	753-05682	Oil Fill Tube (includes 23)
5	753-05901	Rocker Cover	23	753-05377	Screw
6	753-05902	O-Ring	24	753-05910	O-Ring
7	791-181003	Screw	25	753-05784	Spark Plug
8	753-05903	Throttle Cable	26	753-05911	Lead Wire
9	753-05673	Insulator Gasket	27	753-06677	Short Block Assembly (includes 4-7 & 21-25)
10	753-05248	Nut	28	791-181003	Screw
11	753-05904	Insulator			
12	753-05905	Carburetor Gasket			
13	753-05908	Carburetor			
14	791-181751	Carburetor O-Ring			
15	753-05253	Screw			
16	753-04223	Air Cleaner Assembly (includes 17)			
17	791-181757	Air Filter			
18	753-05687	Nut			

REPLACEMENT PARTS - MODEL TB4HB EC

4-CYCLE BACKPACK BLOWER

PPN 41CS4SCG966

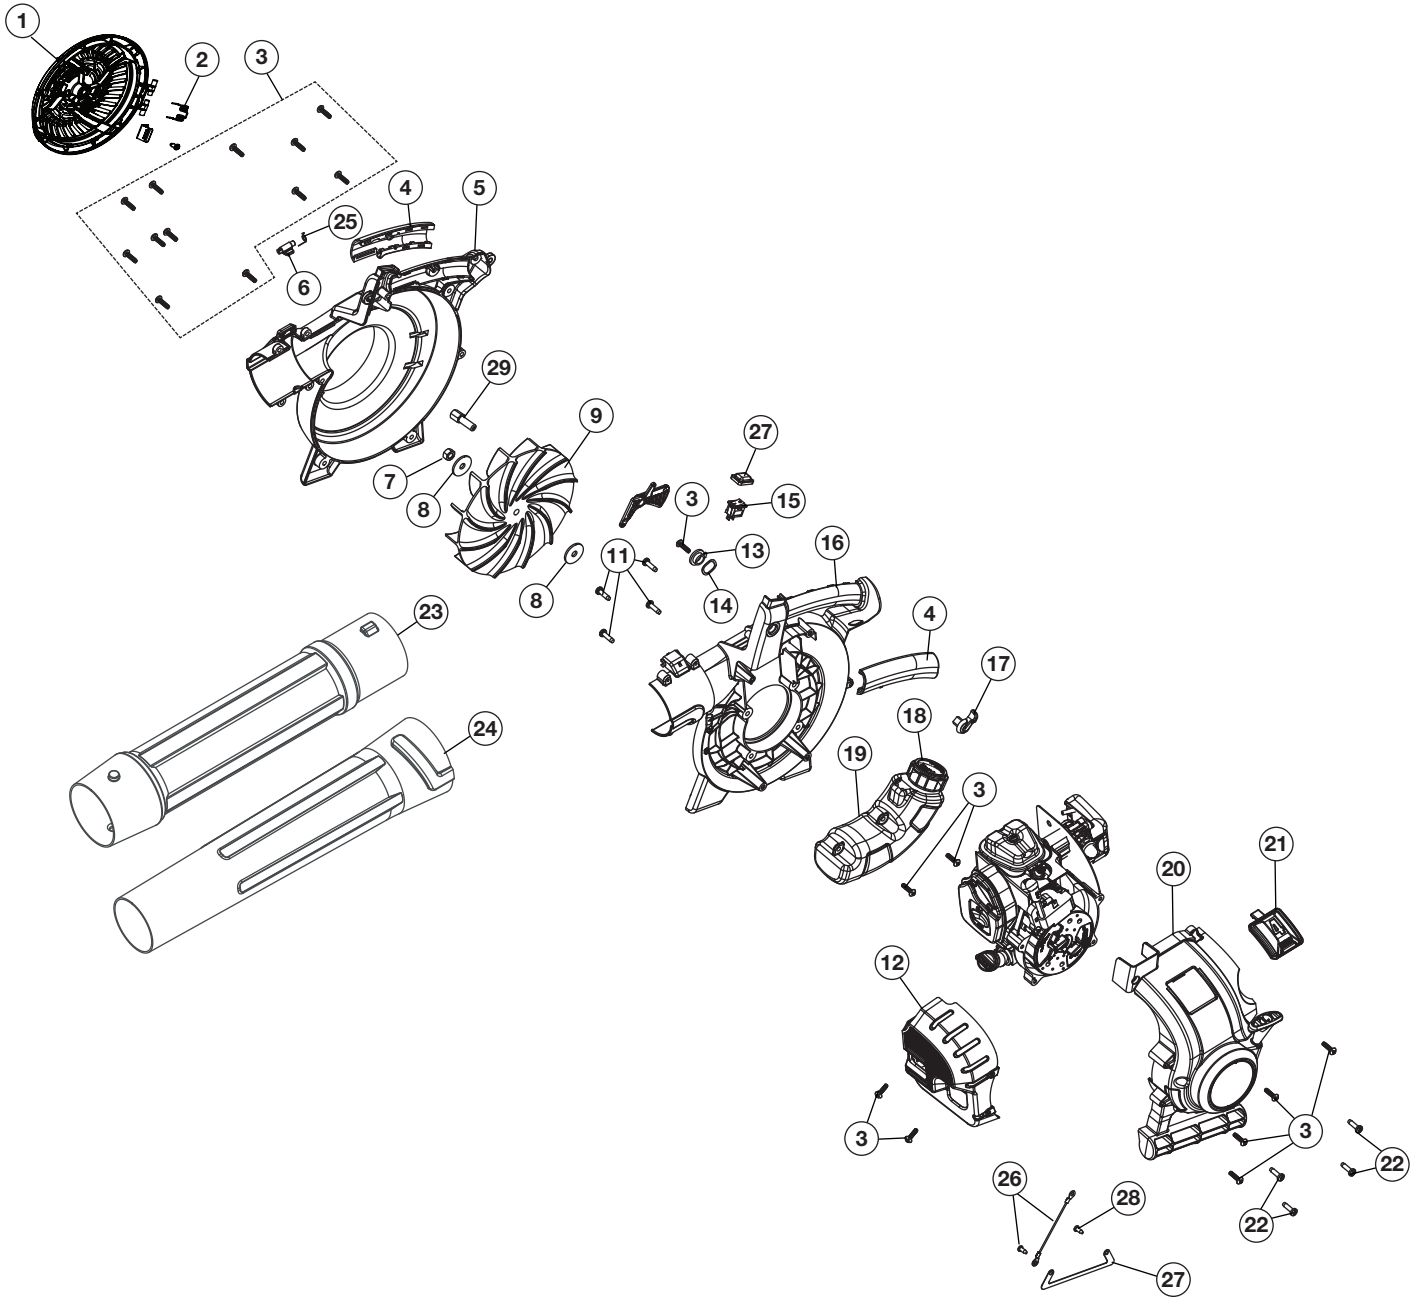

Item	Part No.	Description
1	753-06719	Intake Cover Assembly
2	753-05918	Spring
3	753-04595	Screw
4	753-05919	Handle Grips
5	753-06679	Impeller Housing (includes 4)
6	753-05926	Latch Tube
7	753-05927	Nut
8	753-06444	Washer
9	753-05929	Impeller
10	753-05930	Throttle Trigger
11	791-181003	Screw
12	753-05931	Muffler Cover (includes 3)
13	753-05924	Inner Trigger Lock
14	753-05925	Wavey Washer
15	791-182405	Switch

Item	Part No.	Description
16	753-05921	Impeller Housing (includes 4)
17	753-05932	Outer Trigger Lock
18	753-05289	Fuel Cap
19	753-05933	Fuel Tank Assembly (includes 18)
20	753-05941	Engine Cover Assembly (includes 3, 21 & 22)
21	753-05935	Spark Plug Cover
22	753-05377	Screw
23	753-05936	Upper Tube
24	753-05937	Lower Tube
25	753-05939	Latch Spring
26	753-05964	Wire Ground
27	753-05965	Strap Ground
28	753-1202	Screw
29	753-06700	Adapter