


# REPLACEMENT PARTS - MODEL TB2040 XP

## 2-CYCLE GAS TRIMMER

PPN 41ADZ2PC766

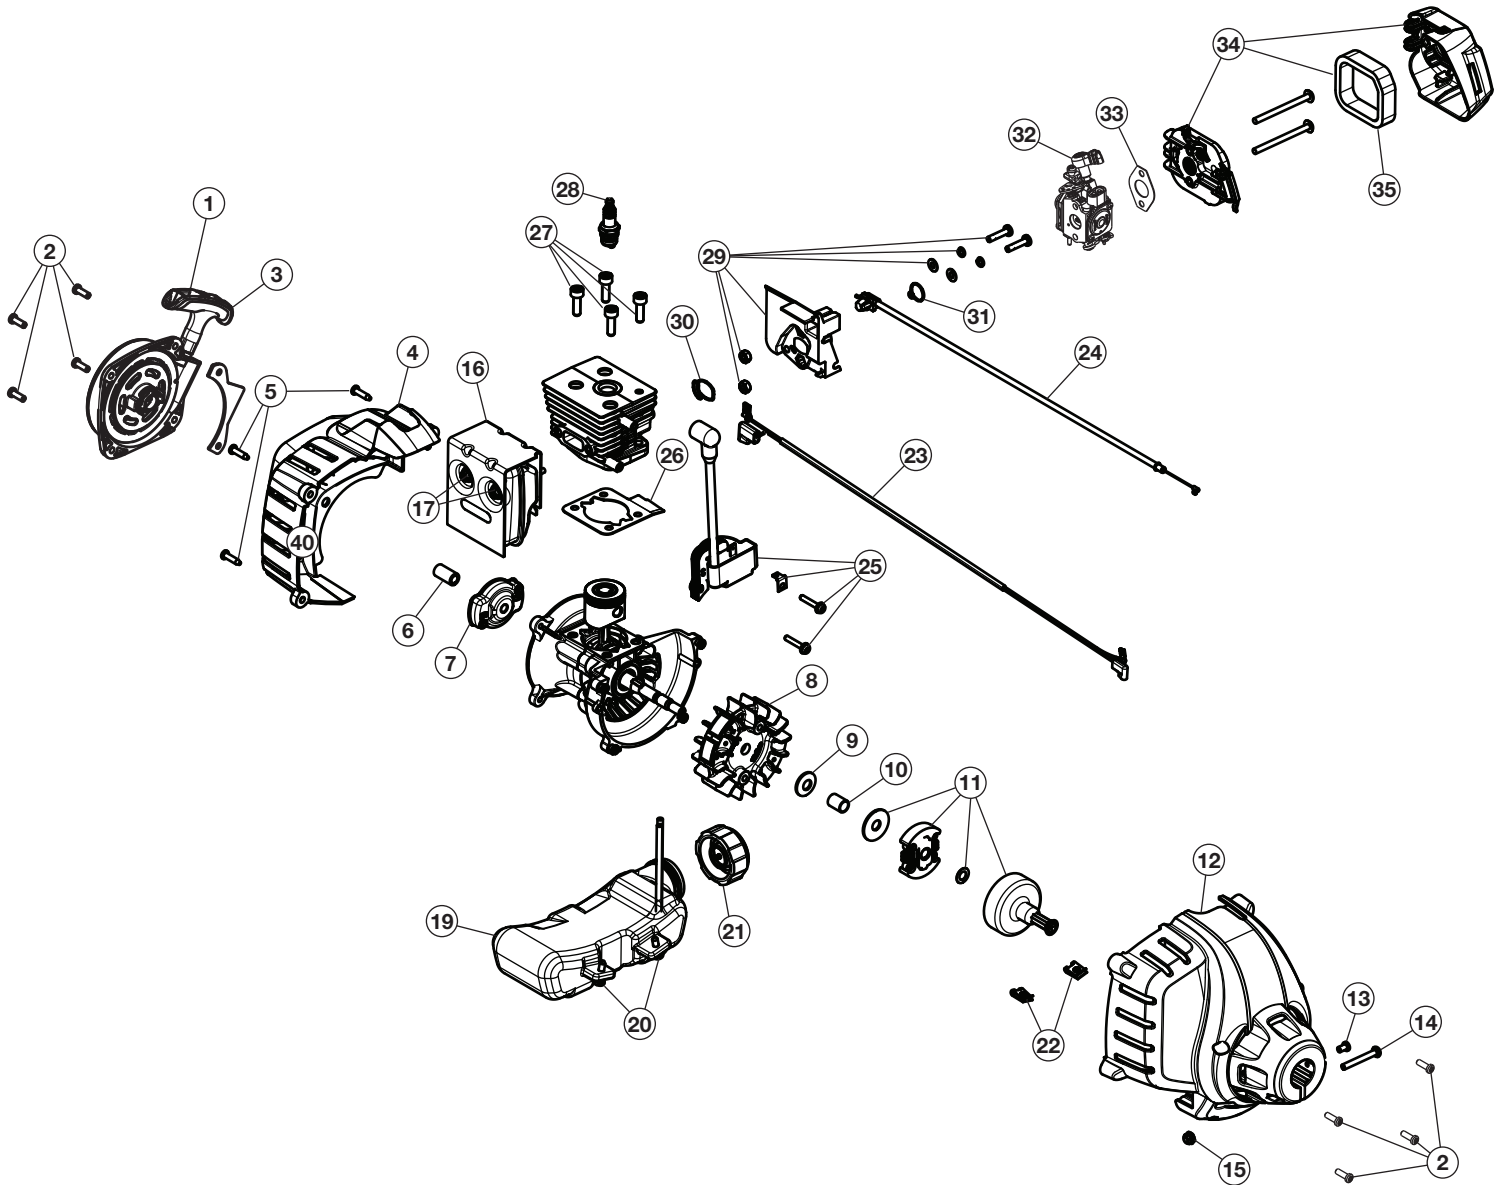


Item	Part No.	Description
1	753-06878	Starter Assembly (includes 2 & 3)
2	791-181862	Starter Screw
3	753-06244	Starter Assembly Guard (includes 2)
4	753-06245	Rear Engine Cover (includes 5)
5	791-181345	Cover Screw
6	753-06104	Adapter
7	753-06091	Pawl Assembly
8	753-06246	Flywheel Assembly
9	753-06247	Washer
10	753-06248	Spacer
11	753-05860	Clutch Assembly
12	753-06879	Clutch Cover Assembly (includes 2, 13 -15 and 22)
13	791-182519	Anti-rotation Screw
14	753-04003	Clamp Screw
15	791-180217	Clamp Nut
16	753-06418	Muffler Assembly (includes 17 and 18)
17	753-06294	Muffler Screw
18	753-04619	Muffler Gasket (not shown)
19	753-06856	Fuel Tank Assembly (includes 20 and 21)
20	791-181930	Tank Screw

Item	Part No.	Description
21	753-06857	Fuel Cap
22	791-182366	U-shaped Nut
23	753-05877	Lead Wires
24	753-06251	Throttle Cable
25	753-06303	Module Assembly
26	753-06827	Cylinder Gasket
27	753-05703	Cylinder Bolt
28	753-06193	Spark Plug
29	753-06189	Insulator Assembly (includes 30 and 31)
30	753-06184	Insulator O-Ring
31	753-06185	Carburetor O-Ring
32	753-06190	Carburetor
33	753-06253	Carburetor Gasket
34	753-06913	Air Cleaner Assembly (includes 35)
35	753-06914	Air Cleaner Filter

Items Not Shown  
 \* 753-06885 Short Block Assembly (includes Crankcase, Cylinder, Piston, 8 - 11, 25 - 28)

**REPLACEMENT PARTS - MODEL TB2040 XP**  
**2-CYCLE GAS TRIMMER**  
 PPN 41ADZ2PC76

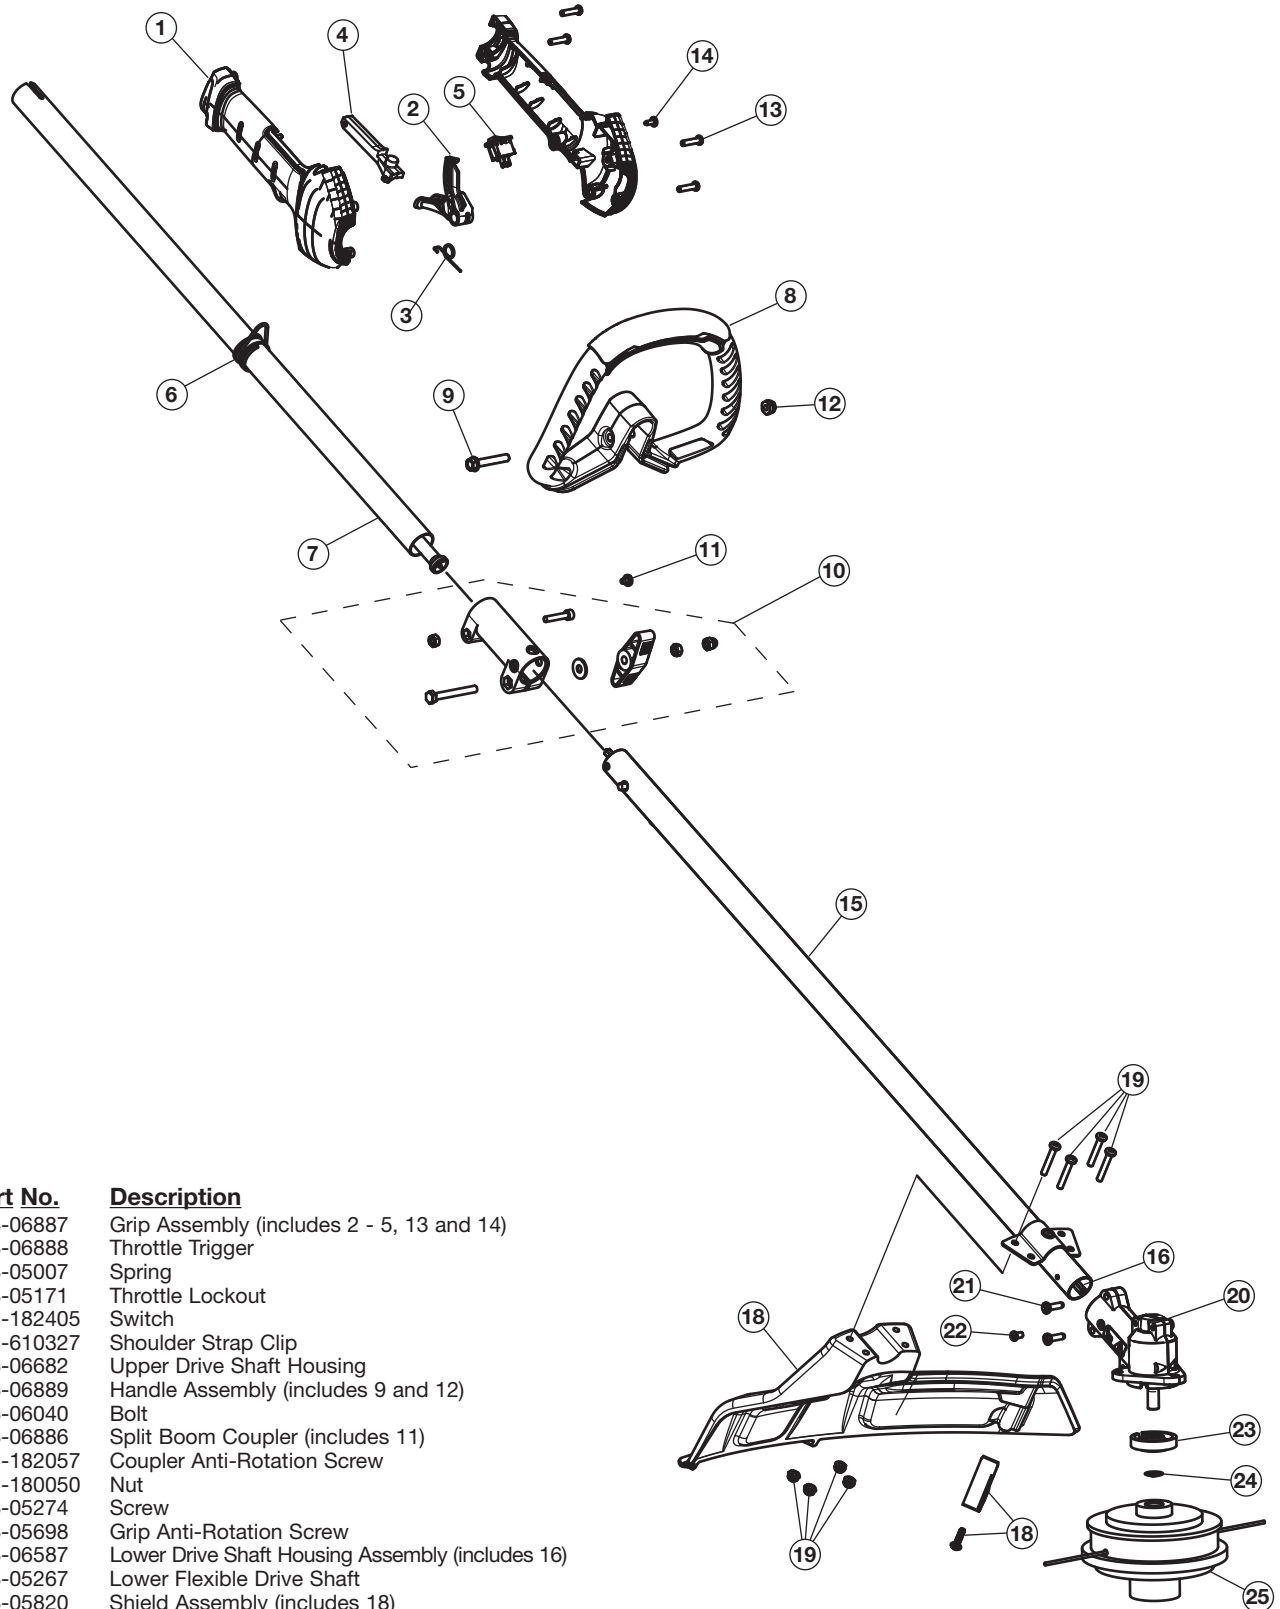

Item	Part No.	Description
1	753-06887	Grip Assembly (includes 2 - 5, 13 and 14)
2	753-06888	Throttle Trigger
3	753-05007	Spring
4	753-05171	Throttle Lockout
5	791-182405	Switch
6	791-610327	Shoulder Strap Clip
7	753-06682	Upper Drive Shaft Housing
8	753-06889	Handle Assembly (includes 9 and 12)
9	753-06040	Bolt
10	753-06886	Split Boom Coupler (includes 11)
11	791-182057	Coupler Anti-Rotation Screw
12	791-180050	Nut
13	753-05274	Screw
14	753-05698	Grip Anti-Rotation Screw
15	753-06587	Lower Drive Shaft Housing Assembly (includes 16)
16	753-05267	Lower Flexible Drive Shaft
17	753-05820	Shield Assembly (includes 18)
18	753-05821	Blade Assembly
19	753-06125	Shield Mounting Screw and Nut
20	791-182193	Gearbox (includes 21 - 25)
21	791-182195	Gearbox Mounting Hardware
22	791-182519	Anti-Rotation Screw
23	791-182196	Cutting Head Driver
24	753-04348	Palnut
25	753-06890	Cutting Head Assembly