


REPLACEMENT PARTS - MODEL TB4BP EC 4-CYCLE BACKPACK BLOWER

PPN 41AR4BEG766

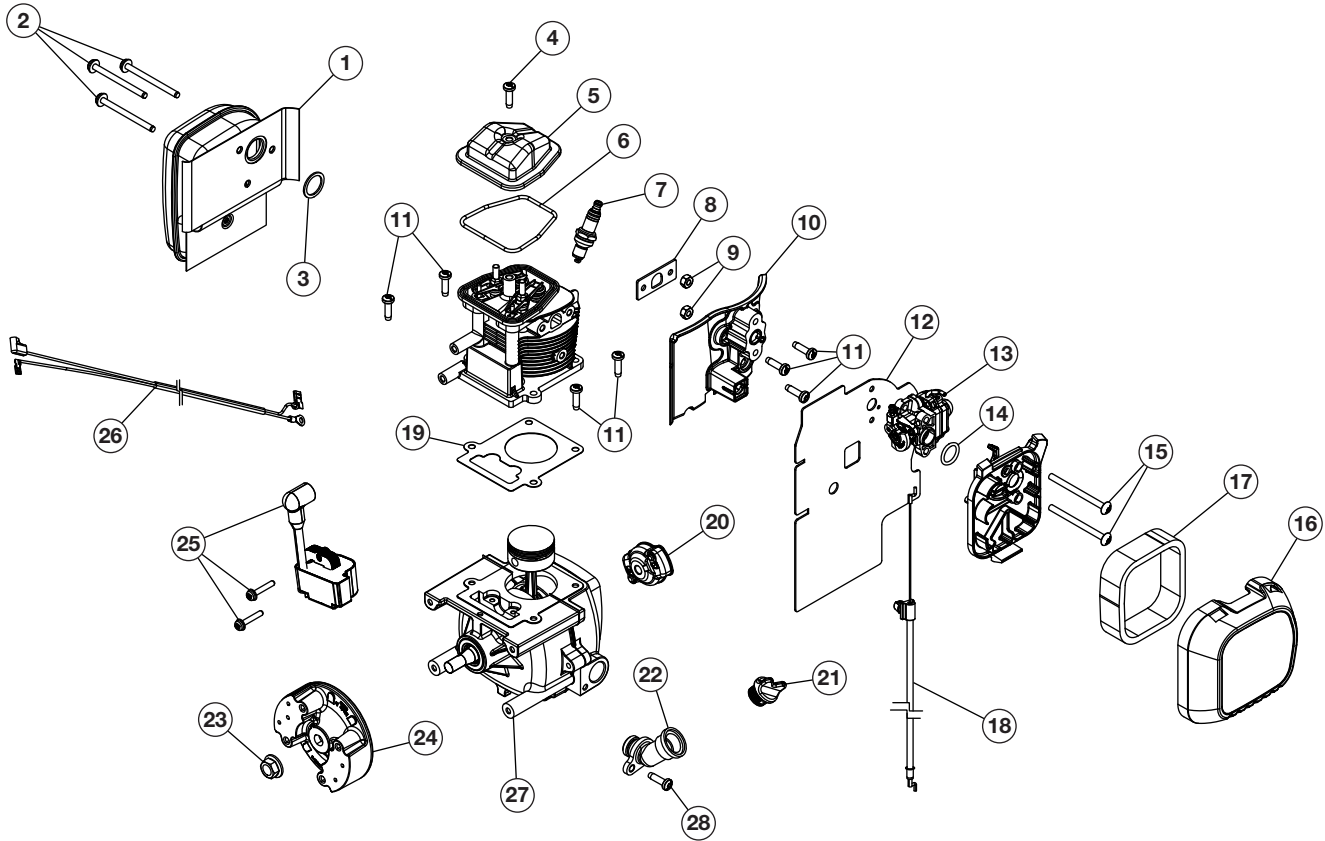


Item	Part No.	Description	Item	Part No.	Description
1	753-05669	Muffler Assembly (includes 2 & 3)	19	753-05681	Cylinder Gasket
2	791-182361	Muffler Screw	20	753-06091	Pawl Assembly
3	753-05670	Muffler Gasket	21	753-05400	Oil Plug
4	791-181025	Screw	22	753-05682	Oil Fill Tube (includes 28)
5	753-05671	Rocker Cover	23	753-05687	Nut
6	753-05672	Rocker Cover O-Ring	24	753-05688	Flywheel Assembly
7	753-05784	Spark Plug	25	753-05907	Module Assembly
8	753-05673	Insulator Gasket	26	753-05690	Lead Wire
9	753-05248	Nut	27	753-08026	Short Block Assembly (includes 4-7, 11, 19, 21 & 22)
10	753-05674	Insulator	28	791-181020	Screw
11	791-181003	Screw			
12	753-05675	Carburetor Gasket			
13	753-08025	Carburetor			
14	791-181751	Carburetor O-Ring			
15	753-05253	Screw			
16	753-05852	Air Cleaner Assembly (includes 17)			
17	753-05677	Air Filter			
18	753-05970	Throttle Cable			

REPLACEMENT PARTS - MODEL TB4BP EC

4-CYCLE BACKPACK BLOWER

PPN 41AR4BEG766

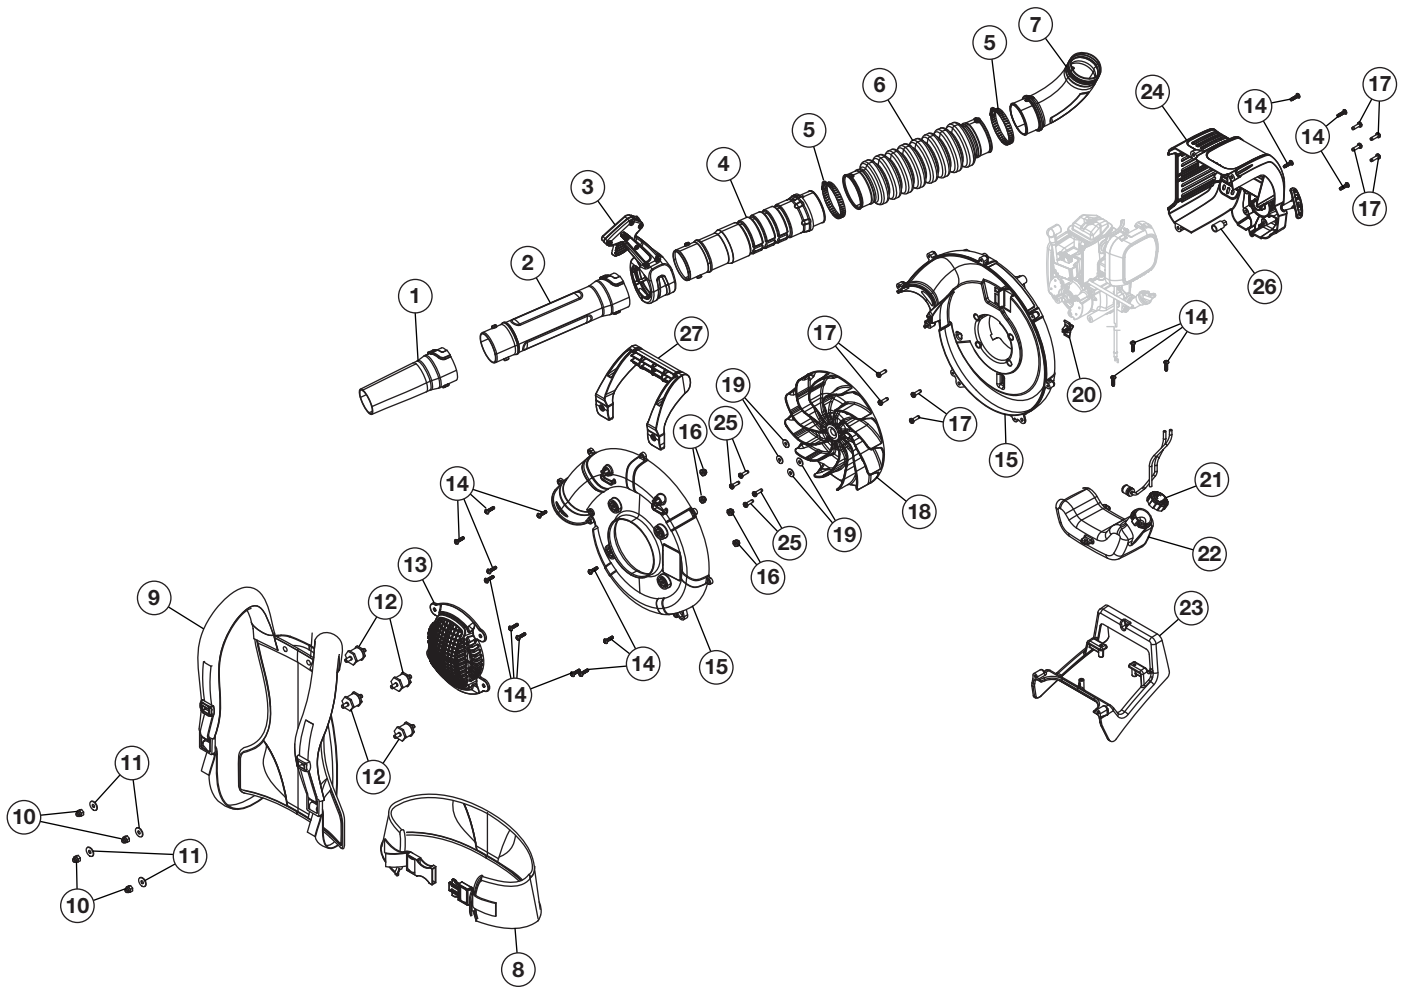

Item	Part No.	Description	Item	Part No.	Description
1	753-06000	Concentrator Nozzle	14	753-04595	Screw
2	753-05971	Lower Blower Tube	15	753-05658	Impeller Housing Assembly
3	753-05975	Throttle Grip Assembly	16	791-180050	Nut
4	753-05991	Upper Blower Tube	17	753-05377	Housing Screw
5	753-05640	Clamp	18	753-07100	Impeller (includes 19 & 25)
6	753-05641	Flex Tube	19	791-182409	Washer
7	753-05990	Elbow Tube	20	753-05661	Throttle Retaining Clip
8	753-06340	Hip Belt	21	753-05289	Fuel Cap
9	753-05645	Support System	22	753-05715	Fuel Tank Assembly (includes 21)
10	753-05647	Nut	23	753-05663	Stand
11	791-182678	Washer	24	753-06683	Engine Cover Assembly (includes 14 & 17)
12	753-05648	Isolator Mount	25	791-182348	Impeller Screw
13	753-05649	Intake Cover	26	753-06104	Electric Starter Adapter
			27	753-05771	Handle