


Ref #	Part Number	Qty	Description
1	753-06418		Muffler Assembly (Incl. 2)
2	753-06419		Muffler Gasket
3	753-06441		Shortblock Assembly (Incl. 4 & 11-17)
4	753-06193		Spark Plug
5	753-06184		Insulator O-Ring
6	753-06189		Insulator Assembly (Incl. 5)
7	753-06253		Carburetor Gasket
8	753-08045		Carburetor Assembly (Incl. 7)
9	791-181757		Air Filter
10	753-05725		Air Cleaner Assembly (Incl. 9)
11	753-06443		Module Assembly
12	710-04715		Screw
13	753-06440		Cylinder Gasket
14	753-05705		Flywheel Adaptor
15	936-0326		Washer
16	753-05707		Bushing
17	753-06246		Flywheel Assembly
18	753-06091		Pawl Assembly

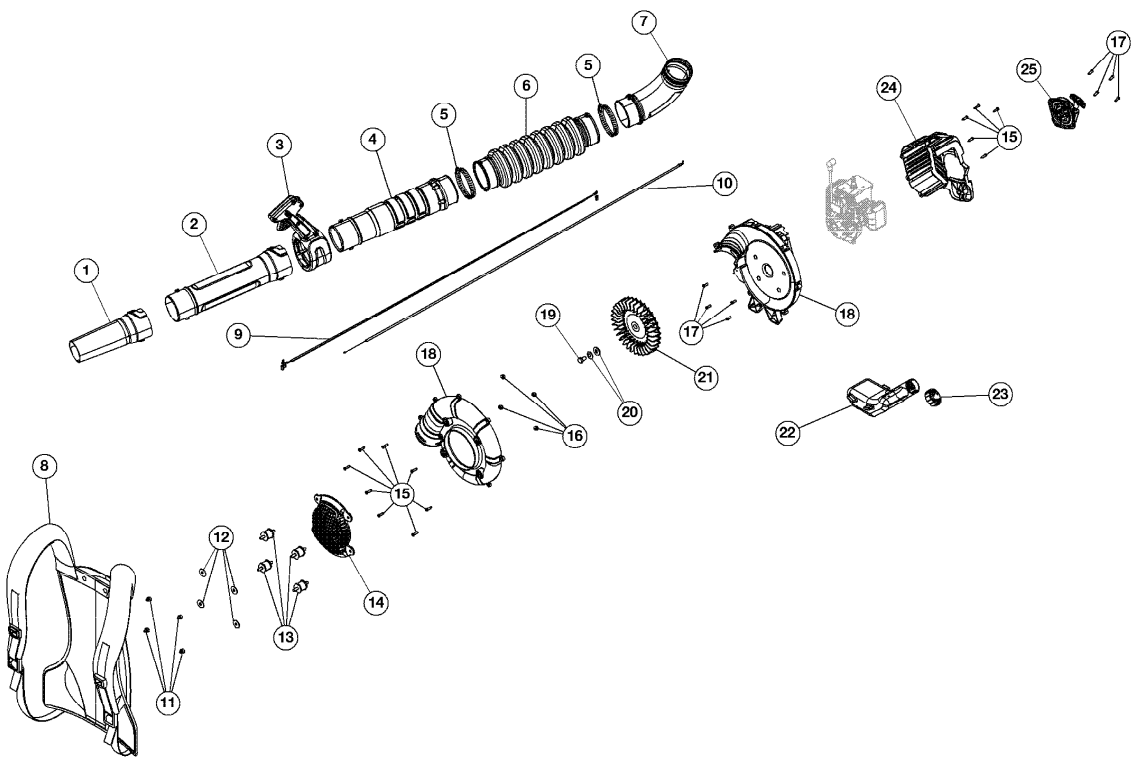

Ref #	Part Number	Qty	Description
1	753-06000		Nozzle
2	753-05971		Lower Blower Tube
3	753-05975		Throttle Grip Assembly
4	753-05991		Upper Blower Tube
5	726-04080		Clamp
6	753-05641		Flex Tube
7	753-05990		Elbow
8	753-05645		Harness
9	753-05643		Lead Wire
10	753-06434		Throttle Cable
11	912-0442		Nut
12	791-182678		Washer
13	753-05648		Insulator Mount
14	753-05649		Intake Cover
15	791-181345		Screw
16	712-0324		Nut
17	791-181862		Screw
18	753-06594		Impeller Housing Assembly (Incl. 13-17)
19	791-182414		Bolt
20	753-04482		Impeller Hardware (Incl. 19)
21	753-05651		Impeller (Incl. 19 & 20)
22	753-05654		Fuel Tank Assembly (Incl. 23)
23	791-182529		Fuel Cap
24	753-06455		Housing Assembly (Incl. 15)
25	753-06596		Starter Assembly (Incl. 17)