
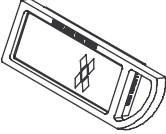


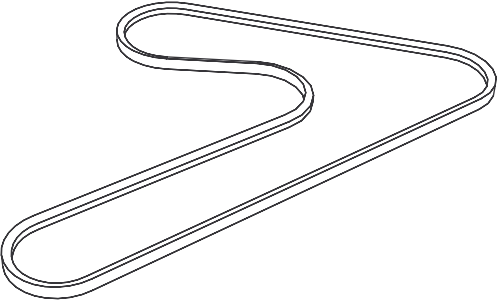
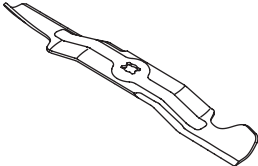
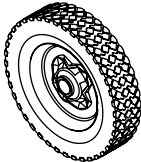
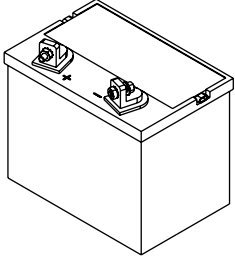

 
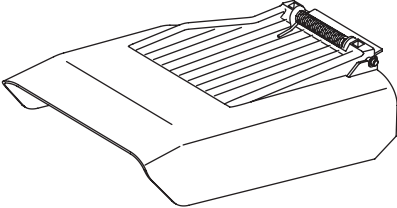
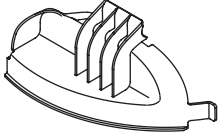
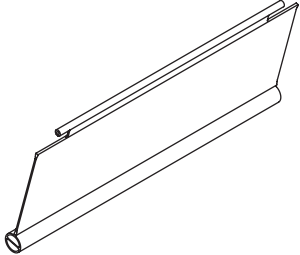


Component	Part Number and Description
	759-3336 Spark Plug
	BS-797007 Air Filter Cartridge
	951-12182 Fuel Cap
	BS-394358S Fuel Filter
	954-04139 Belt (Mowing Deck Engagement)
	942-04154A Deck Blade
	734-04243 Wheel (Front) 634-04285 Wheel (Back)


Component	Part Number and Description
	925-1707D†      Battery
	946-04604      Throttle/Choke Control (Cable)
	925-1745A†      Ignition Key
	931-04244      Discharge Chute Assembly
	631-04252      Mulch Baffle
	731-05766      Trail Shield

† If Equipped

The following attachments and accessories are compatible for the Troy-Bilt Wide Cut Mower. See your Troy-Bilt dealer or the retailer from which you purchased your mower for information regarding price and availability.

<b>Model Number</b>	<b>Description</b>
19A20001OEM	Grass Collector, 33" Mower


# TB WC33 XP (12AE763Z)

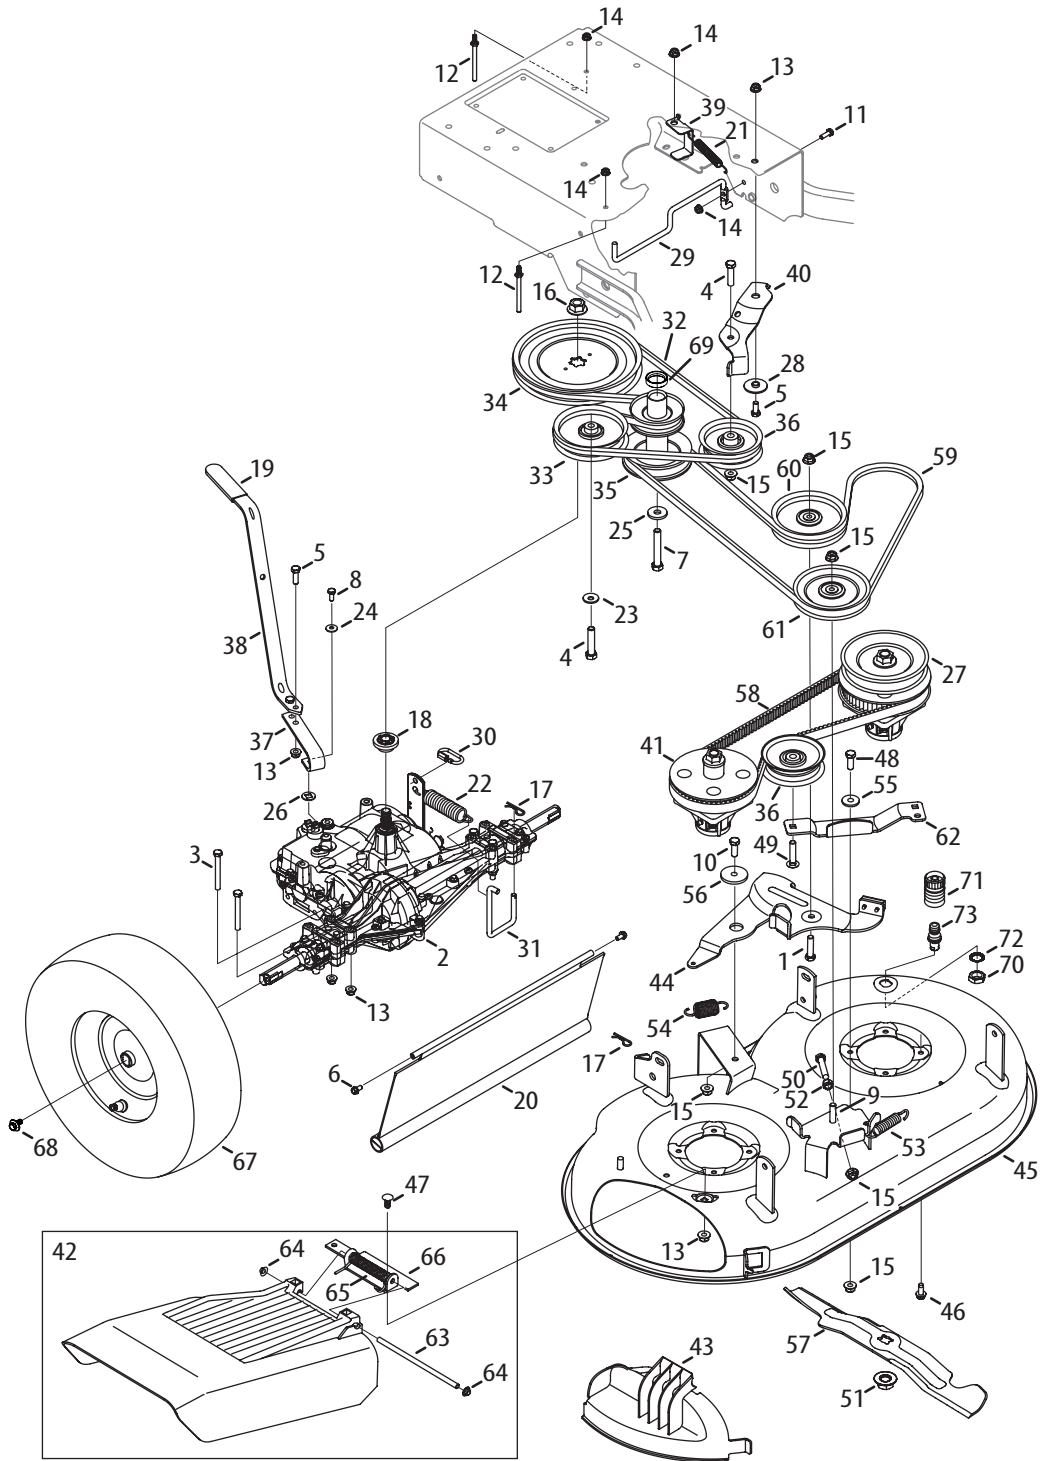

Ref.	Part Number	Description
1	710-3005	Hex Head Cap Screw, 3/8-16 x 1.75
2	918-04639	4 Speed Drive Assembly, Tecumseh
3	710-0176	Hex Head Cap Screw, 5/16-18 x 2.75
4	710-0347	Hex Head Cap Screw, 3/8-16 x 1.75
5	710-0376	Hex Head Cap Screw, 5/16-18 x 1.00
6	710-04669	Screw, 10-16 x 0.625
7	710-04377	HHCS, 7/16-20 x 2.75
8	710-0513	Hex Head Cap Screw, 1/4-28 x .625
9	710-0520	Hex Head Cap Screw, 3/8-16 x 1.50
10	710-3005	Hex Head Cap Screw, 3/8-16 x 1.25
11	710-3015	Hex Head Cap Screw, 1/4-20 x .75
12	911-1000	Belt Keeper, .25 DIA X 3.0
13	712-04063	Flangelock Nut, 5/16-18
14	712-04064	Flangelock Nut, 1/4-20
15	712-04065	Flangelock Nut, 3/8-16
16	712-0700	Flange Nut, 9/16-18
17	914-0145	Click Pin, .092 x 1.64 LG
18	718-04407	Spline Pulley Hub, 5/8
19	720-04191	Grip, Red
20	731-05766	Trailshield, 8.35 x 19.17
21	732-04409	Extension Spring, Wheel Drive
22	732-04443A	Extension Spring, Brake
23	736-0105	Washer, Spring, .401 x .870 x .063
24	736-0270	Washer, Bell, .265 x .75 x .062
25	736-0322	Washer, Flat, .450 x 1.250 x .164
26	736-04256	Washer, Flat, .39 x .87 x .06
27	918-04438C	Drive Spindle Assembly
28	738-04166	Spacer, Shoulder, .5000 x .1475
29	747-04635A	Belt Keeper Rod
30	747-05571	Coupling Link, 3/16
31	747-04678A	Brake Spring Mounting Rod
32	954-04145A	V Belt, 4L 64.2
33	756-04129B	Idler Pulley, 4.25 DIA
34	756-04258	Flat Sheave, DIA 7.75
35	756-04260	Engine Pulley, 3.20 x 4.35 DIA
36	756-04280A	Idler Pulley, 3.50 DIA
37	787-01469B	Lower Shaft Lever

Ref.	Part Number	Description
38	787-01470A	Upper Shaft Lever
39	787-01473A	Belt Keeper, .375 x 2.00
40	787-01523A	Wheel Drive Idler Bracket
41	918-04439C	Spacer Spindle Assembly
42	931-04244	Chute Deflector Assembly
43	631-04252	Mulch Cover
44	987-02420	Idler Arm Assembly
45	687-02476	Deck Assembly
46	710-1260A	Screw, 5/16-18 x .750
47	710-0451	Bolt, Carriage, 5/16-18 x .750
48	710-0514	Hex Head Cap Screw, 3/8-16 x 1.00
49	710-0560	Screw, Carriage, 3/8-16 x 1.75
50	710-3184A	Hex Head Cap Screw, 3/8-16 x 2.00
51	712-0417A	Flange Nut, 5/8-18
52	912-3017	Hex Nut, 3/8-16
53	732-04406	Extension Spring, Timing Belt
54	732-04452	Extension Spring, Deck Brake
55	938-0347	Shoulder Spacer, .625 ID x .169
56	738-04162C	Shoulder Spacer, .8840 x .190
57	942-04154A	2 in 1 Blade
58	754-04136	Timing Belt, .315 x .787
59	954-04139	Aramid V Belt, 72.2
60	756-04129B	Idler Pulley, 4.25" DIA
61	756-0616	Idler Pulley, V-Type, 5.0 DIA
62	787-01440	Timing Idler Bracket
63	711-04027	Deflector Pin
64	726-04009	Push Cap
65	732-04012	Deflector Torsion Spring
66	787-01017A	Deflector Hinge Bracket
67	634-04285-0911	Wheel, 16 x 4 x 8
68	710-05339	Screw, 5/16-24 x .750
69	750-05516	Spacer, 1.0 x 1.28 x .31 (420CC)
70	912-0641	Nut, Hex, M16-1.5
71	921-04041	Water Nozzle Adaptor
72	736-0225	Washer, Lock, 5/8
73	737-04003D	Deck Water Nozzle
—	977S30145	Danger Label (Not Shown)

# TB WC33 XP (12AE763Z)

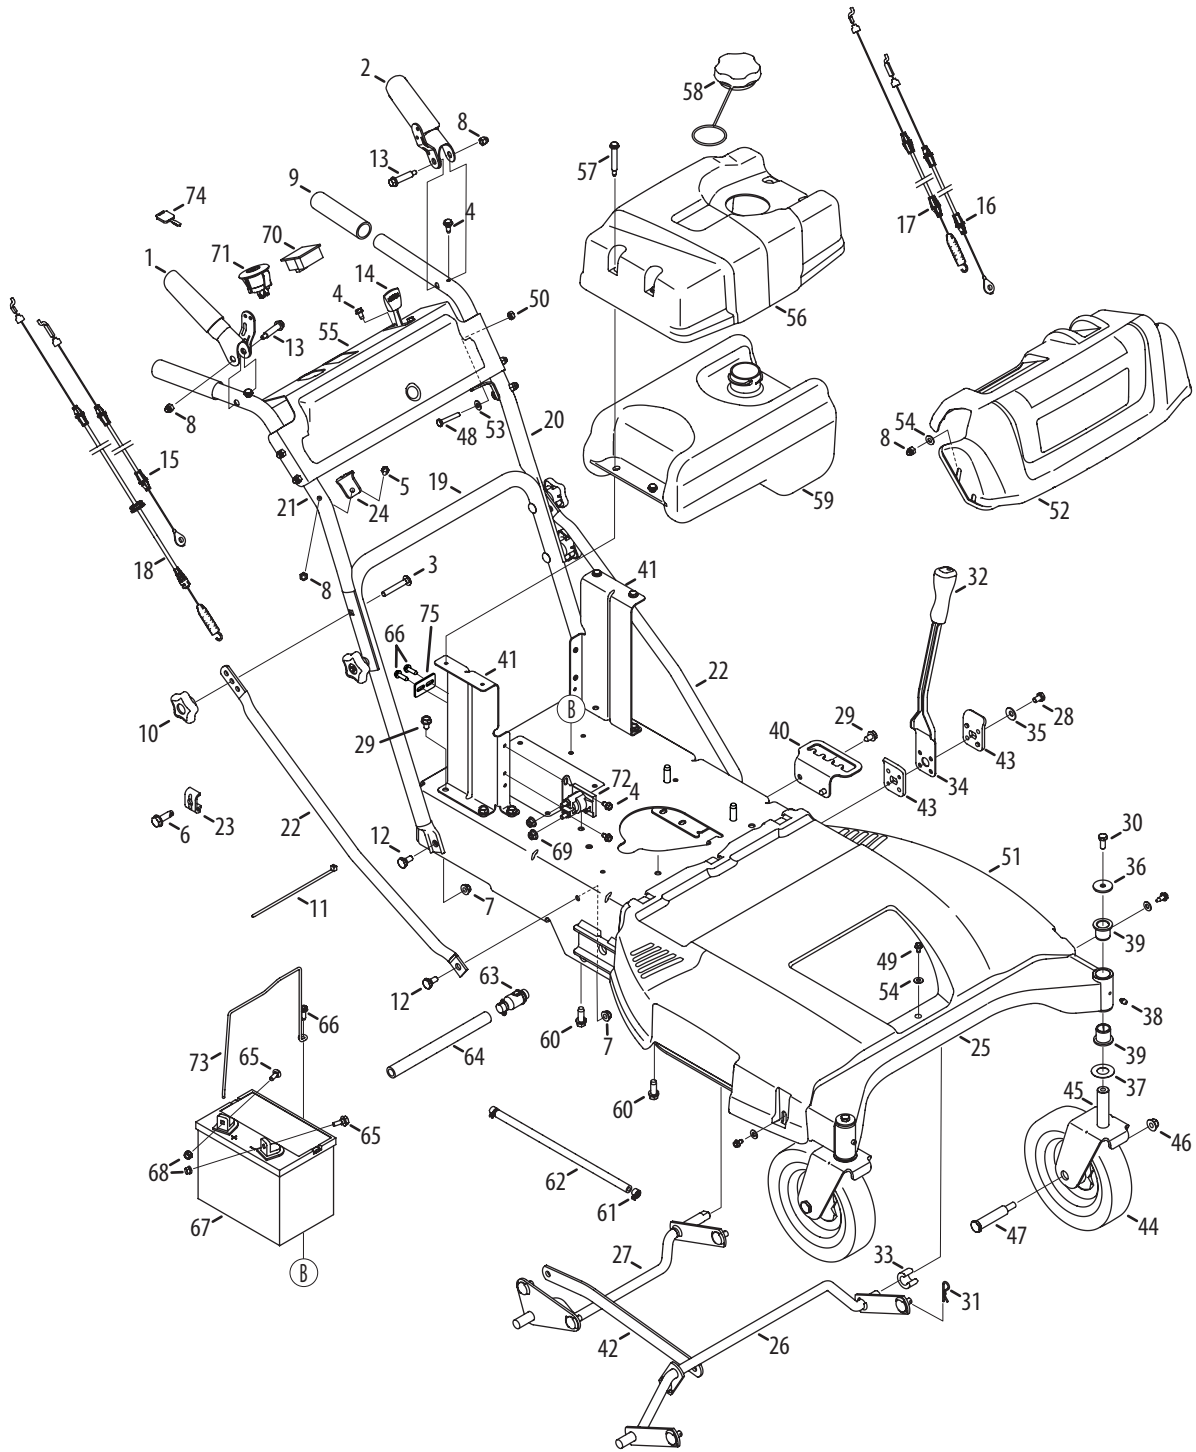

Ref.	Part Number	Description
1	687-02614	RH Lever Assembly Bracket
2	687-02615	LH Lever Assembly Bracket
3	710-0572	Screw, Carriage, 5/16-18 x 2.25
4	710-0599	Screw, 1/4-20 x 0.500
5	710-0606	Hex Screw, 1/4-20 x 1.50
6	710-1237	Screw, #10-32 x 0.625
7	712-04063	Nut, Flangelock, 5/16-18
8	912-0442	Lock Nut Cap, 1/4-20
9	720-04190	Grip, 1.0 ID x 5.0 LG
10	720-04072A	Star Knob, 5/16-18
11	725-0157	Cable Tie, 3/16 x .05 x 7.4
12	938-0140	Screw, Shoulder, .435 x .178-5/16 x .56
13	938-1226	Screw, Shoulder, .375 x 1.355 x 1/4-20
14	946-04604	Throttle/Choke Cable, 38.0 x 1.1 EXT
15	946-04606	RH Brake Cable, Tecumseh Trans.
16	946-04608	LH Brake Cable, Tecumseh Trans.
17	946-04609	Wheel Clutch Cable
18	946-04610	Deck Clutch Cable
19	749-04330	Lower Handle
20	749-04331	Upper LH Handle
21	749-04332	Upper RH Handle
22	749-04333	Adjustable Handle Brace
23	751B221535	Casing Clamp
24	787-01490A	RH Cable Mount Bracket
—	787-01491A	LH Cable Mount Bracket
25	687-02591	Frame Assembly
26	687-02265	Front Deck Lift Assembly
27	687-02419	Rear Deck Lift Assembly
28	710-04312	Hex Screw, 5/16-18 x .50
29	710-0604A	Screw, 5/16-18 x 0.625
30	710-0627	Hex Screw, 5/16-24 x .750
31	914-0145	Click Pin, .092 x 1.64 LG
32	720-04189	Grip Handle, 1/2
33	731-05791	Plastic Spacer, .63 ID x .75 LG
34	732-04418A	Deck Height Lever
35	736-0242	Washer, Bell, .340 x .872 x .060
36	736-0343	Washer, Flat, .330 x 1.25 x .120
37	936-0351	Washer, Flat, .760 ID x 1.50 OD
38	937-3000	Drive Lube Fitting, 3/16
39	741-0660A	Flange Bearing, .760 x .941 x 1.0
40	787-01496	Height Adjustment Bracket

Ref.	Part Number	Description
41	787-01507	Fuel Tank Mount Bracket
42	787-01510	Link Pivot Bracket
43	787-01521	Lever Pivot Bracket
44	734-04243	Caster, Wheel, 8 x 1.75
—	941-0706	Bearing, Flange w/ftg
45	687-02263	Wheel Caster Bracket
46	712-04065	Nut, Flangelock, 3/8-16
47	738-04216A	Bolt, Shoulder, .625 x 2.515 x 3/8-16
48	710-0136	Hex Screw, 1/4-20 x 1.75
49	710-0896	Screw, 1/4-14 x 0.625
50	712-3006	Nut, Hex, 1/4-20
51	931-05684	Belt Cover
52	731-05937A	Handle Panel, Black
53	736-0270	Washer, Bell, .265 x .75 x .062
54	936-0463	Washer, Flat, .25 x .630 x .0515
55	787-01548	Hour Meter and Key Handle Panel
56	931-06935A	Fuel Tank Cover
57	738-04282	Screw, Shoulder, 1/4-20 x .32 x 1.8
58	951-12182	Fuel Cap
59	951-04322	Fuel Tank
60	710-1315	Screw, 3/8-16 x 1.250
61	726-0205	Hose Clamp, .490 DIA.
62	751-10349	Fuel Hose, Low Permeation, 1/4
63	951-10517A	Oil Drain
64	751-3141-14	Extension Hose
65	710-04666	Hex Head Flange, 1/4-20 x .75
66	710-0642	Screw, 1/4-20 x 0.750
67	925-1707D	Battery, 155 CCA WET
68	712-0271	Sems Nut, 1/4-20
69	712-04064	Nut, Flangelock, 1/4-20
70	925-04022B	Hour Meter
71	925-04228	Key Switch
72	725-04439	Solenoid, 12V, 100 AMP
73	747-04657	Battery Hold Down Strap
74	925-1745A	Key
75	787-02009	Plate, Shift
—	925-05266	Wiring Harness (Not Shown)
—	725-04478	Starter Wire (Not Shown)
—	712-0266A	Nut, Jamlock, 3/8-16 (Not Shown)
—	751-12089-28	Vent Hose, 3/16 (not shown)