



Model 469

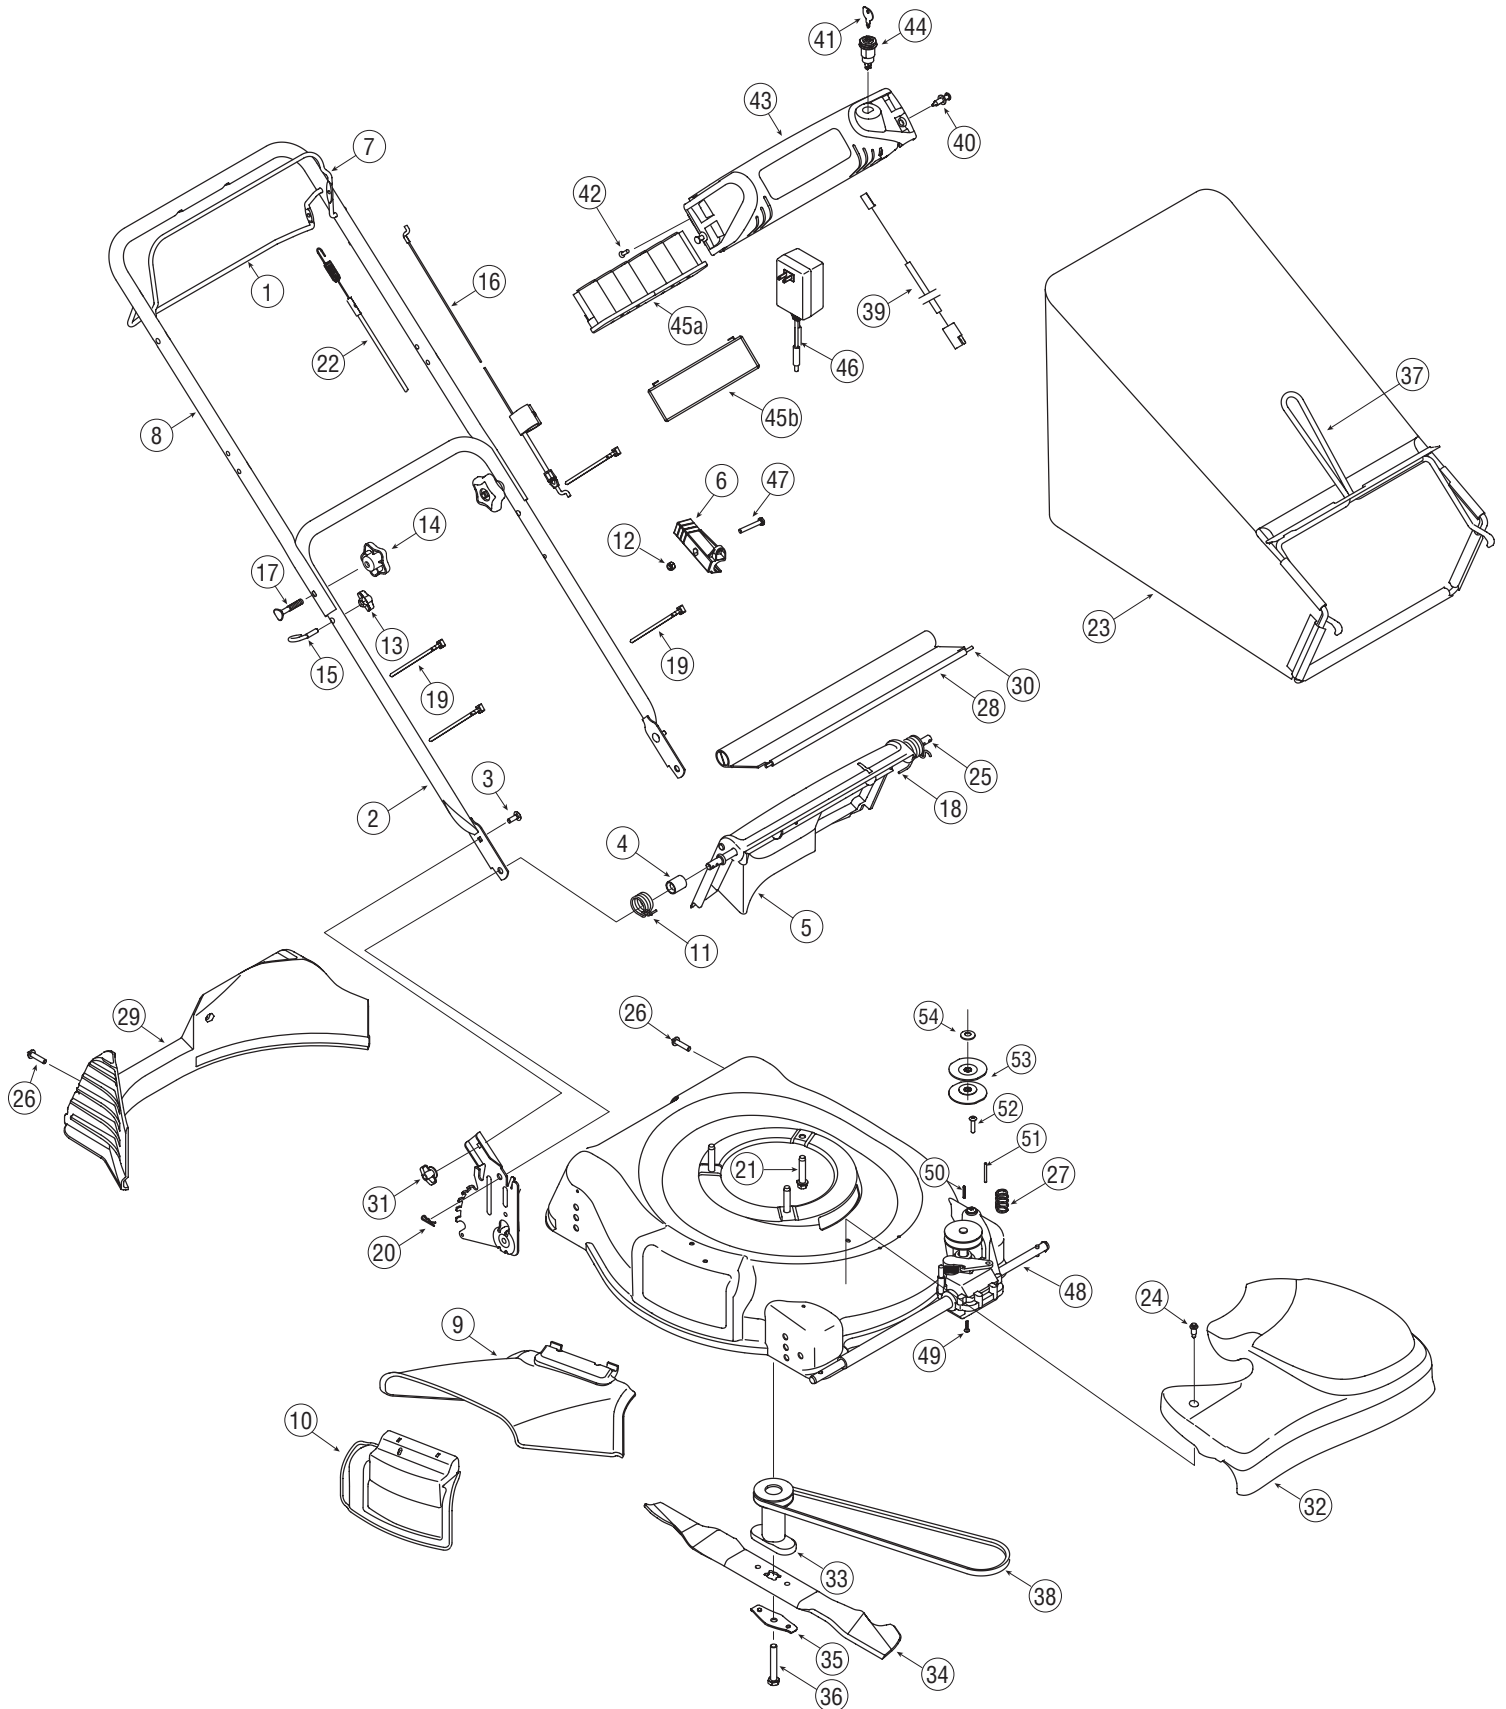

1	747-1214	Drive Control	29	731-04150C	Rear Baffle
2	749-0928A	Lower Handle	30	732-0700	Wire
3	710-0703	Carriage Bolt 1/4-20	31	712-0397	Wing Nut
4	750-04162	Spacer.375 x.50 x 1.02" Lg.	32	731-05021A	Transmission Cover
5	731-04134A	Rear Discharge Door	33	748-04015A	Blade Adapter
6	746-0883	ERS Housing	34	742-0741	21" Mulching Blade
7	747-1161A	Blade Control	35	736-0524B	Blade Bell Support
8	749-1233B	Upper Handle	36	710-1257	Hex Screw 3/8-24 x 2.50
9	731-04177	Chute Deflector	37	747-04080	Grass Bag Frame
10	687-02055	Mulch Plug Complete	38	754-04101	V-Belt
11	732-04090A	Torsion Spring - RH	39	725-04293	Electric Starter Harness
12	712-0324	Hex Lock Nut, 1/4-20	40	728-0199	Rivet
13	720-0279	Handle Knob	41	725-0201	Key
14	720-04072	Handle Knob	42	710-1667A	Screw, #10-16 x .75
15	710-1205	Eye Bolt	43	731-05505	Battery Hsg. (Used w/ Ref.# 45a)
16	746-04309	Control Cable - 39"		731-05459	Battery Hsg. (Used w/ Ref.# 45b)
17	710-1174	Carriage Bolt 5/16-18 x 2.0	44	725-04347	Key Switch
18	732-04089A	Torsion Spring - LH	45a	725-1276	12 Volt Battery
19	726-0240	Cable Tie	45b	725-04323	12 Volt Battery
20	714-0104	Cotter Pin	46	725-04329	Battery Charger
21	710-0654A	Self-Tapping Sems Screw	47	710-0136	Screw, 1/4-20 x 1.75
22	746-04282	Drive Cable - 48.75"	48	617-04376	Transmission Assembly
23	664-04027	Grassbag Assembly	49	710-04329	Torx Screw
24	710-1650	Shoulder Screw # 12 -24	50	715-0129	Spirol Pin
25	747-04035	Pivot Rod	51	715-04030	Dowel pin
26	710-04371	Screw, 1/4-15 x 1.25	52	710-0969	Screw, #12-16 x 1.00
27	732-1043	Belt Tension Spring	53	756-04132	Pulley, 3.82 x .313 x .68
28	731-04998	Rear Trailing Shield	54	736-0105	Bell Washer, .325 x .930 x .45

Model 469

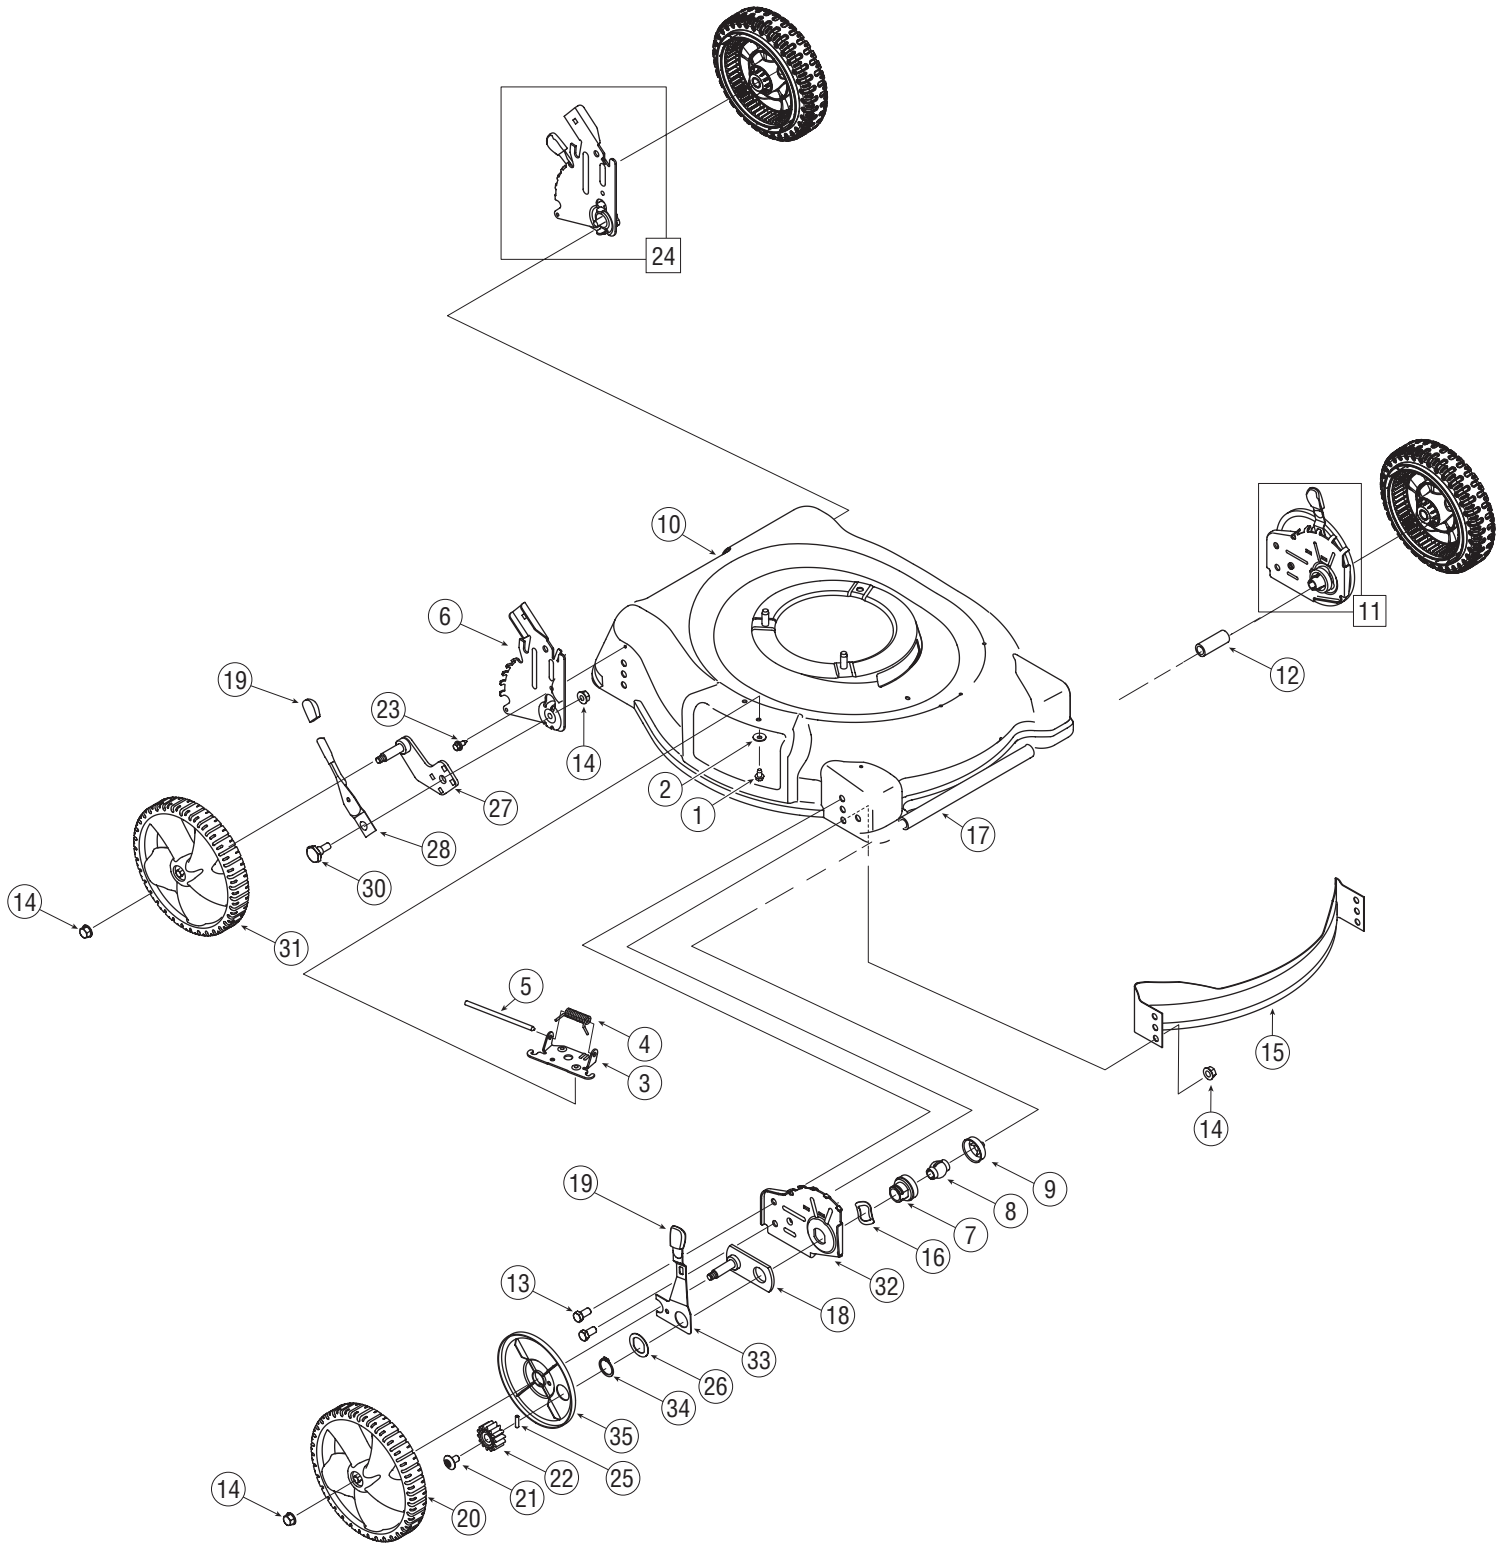

1	710-0599	TT Screw 1/4-20 x 0.5
2	736-0270	Bell Washer.265 x 0.75
3	17032A	Deflector Chute Adapter
4	732-1014	Torsion Spring
5	747-0710	Hinge Pin
6	787-01292	Handle Bracket - RH
	787-01291	Handle Bracket - LH
7	748-0355	Bearing Support
8	741-0604A	Bearing Sleeve
9	732-0708	Bearing Retainer
10	787-01278	21" Deck
11	687-02194	Height Adjustment Assembly - RH
	687-02193	Height Adjustment Assembly - LH
12	750-04595	Slev. Spacer 1.4" Lg.
13	710-0216	Hex Screw, 3/8-16 x.75
14	712-04065	Flange Lock Nut, 3/8-16
15	782-5002B	Front Baffle
16	736-0447	Wave Washer
17	750-04594	Sleeve Spacer 8.985" Lg.
18	687-02044	Pivot Plate Assembly
19	720-0426	Adjustment Knob

20	634-04100	Front Wheel 8 x 1.8
21	710-04531	Screw, 1/4-20 x .390
22	717-1762	Gear 14T RH FWD
	717-1761	Gear 14T LH FWD
23	710-1652	TT Scr. w/Washer 1/4-20 x.625
24	687-02068	Handle Bracket Assembly - RH
	687-02069	Handle Bracket Assembly - LH
25	715-0221	Dowel Pin
26	736-0474	Washer
27	687-02071A	Pivot Arm Assembly - RH
	687-02070A	Pivot Arm Assembly - LH
28	732-04175	Rear Spring Lever
29	712-0214	Hex Lock Nut, 3/8-24
30	738-04136	Shoulder Scr.500 Dia. x.434
31	734-04087	Rear Wheel, 8 x 1.8
32	787-01298	Height Adjuster Plate - RH
	787-01299	Height Adjuster Plate - LH
33	732-0706	Front Lever - RH
	732-0707	Front Lever - LH
34	716-0102	Snap Ring
35	782-7551A	Wheel Dust Cap