


Ref #	Part Number	Qty	Description
1	530094093		Body Cap
2	530094094		Throttle Spring
3	530094095		Retainer
4	530094097		Clip
5	530094096		Needle
6	530094098		Valve
7	530094120		Spring
8	530094121		Lever
9	530094123		Screw
10	530094122		Collar
11	530094119		Valve
12	530094106		Diaphragm
13	530094104	PP200 Gas Pump	Pump Cover
14	530094107	CARBURETOR	Screw
15	530094105		Gasket
16	530094112		Pin
17	530094114		Spring
18	530094115		Gasket
19	530094116		Diaphragm Ass'y.
20	530094117		Cover
21	530094118		Screw
22	530094111		Lever
23	530094113		Screw
24	530094109		Holder
25	530094108		Jet
26	530094110		Valve
27	530094101		Spring
28	530094100		O-Ring
29	530094099		Screw
30	530094102		Screw
31	530094103		Spring


**WARNING**

All repairs, adjustments and maintenance not described in the Operator's Manual must be performed by qualified service personnel.

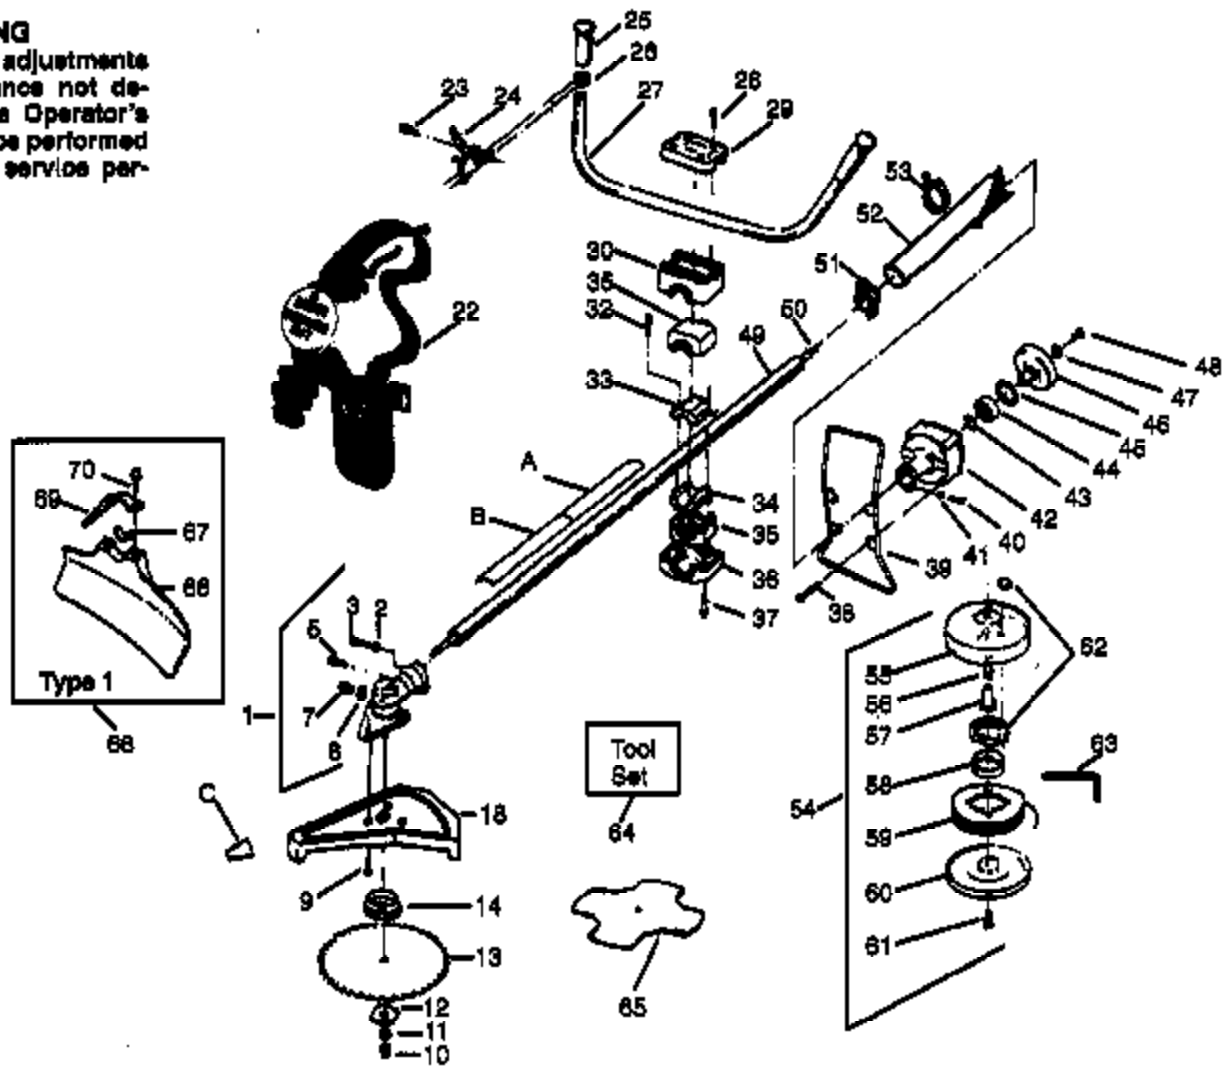

Ref #	Part Number	Qty	Description
1	530094141		Gear Case Ass'y.
2	530094449		Lockwasher
3	530094199		Screw
5	530094201		Screw
7	530094202		Screw
8	530094203		Washer
9	530094487		Screw
10	530091596		Nut
11	530091595		Nut
12	530094151		Lower Adaptor
13	952701547		Brush Blade-10"
14	530094150		Upper Adaptor
18	530094496		Shield Ass'y. XR-200 & YP200 Type II;PP200 Type 1
22	530092117		CUTTING HEAD & DRIVE S
23	530094204		Shoulder Strap
24	530093957		Screw
25	530094172		Throttle Control
26	530094173		Handlebar Grip
27	530093992		Throttle Collar
28	530094169		Handlebar Ass'y. (Inc. #25 & 26)
29	530094162		Screw
30	530094163		Handlebar Clamp
32	530094170		Handlebar Clamp
33	530094165		Screw
34	530094166		Metal Fitting
35	530094167		Metal Fitting
36	530094164		Isolator
37	530094168		Handlebar Clamp
38	530093999		Bolt
39	530093995		Bolt
40	530094153		Wire Stand
41	530094154		Screw
42	530094152		Lock Washer
43	530094161		Clutch Case
44	530094159		Snap Ring
45	530094160		Bearing
46	530094156		Snap Ring
47	530094036		Clutch Drum
48	530094158		Washer
49	530094198		Bolt
50	530094144		Drive Shaft Hsg.
51	530094146		Drive Shaft
52	530093993		Bracket Ass'y.
53	530091426		Hip Pad
54	530093954		Tie Strap
55	530091656		Cutting Head Ass'y. (Inc. #55-63)
56	530091425		Hub
57	530091423		Line Saver
58	530091657		Drive Adaptor
59	952701526		Spring
60	530091424		Spool w/Line
61	530091662		Cover
62	530093602		Screw
63	530091663		Release Button (Inc. Lock Ring)
64	530093994		Hex Wrench
65	952701546		Tool Set
			Weed Blade-Optional

Ref #	Part Number	Qty	Description
66	530094174		Shield
67	530094175		Spacer
68	530093996		Shield Ass'y.
69	530094187		Bracket
70	530094176		Screw
A	530029162		Shaft Warning Decal (Upper)
B	530029163		Shaft Warning Decal (Lower)
C	530027348		Shield Warning Decal
C			, Operator's Manual Not Shown.
	530066869		YP200 Not Shown.
	530066870		XR-200 Not Shown.
	530067447		PP200 Not Shown.
			PP200 Gas Trim Page 5 of 10 Carton Not Shown.
	530060857		CUTTING HEAD & DRIVE SL PP200 Carton (Not a serviceable part) Not Shown.
	530060865		XR-200 Not Shown.
	530061161		PP200 Carton (Not a serviceable part) Not Shown.

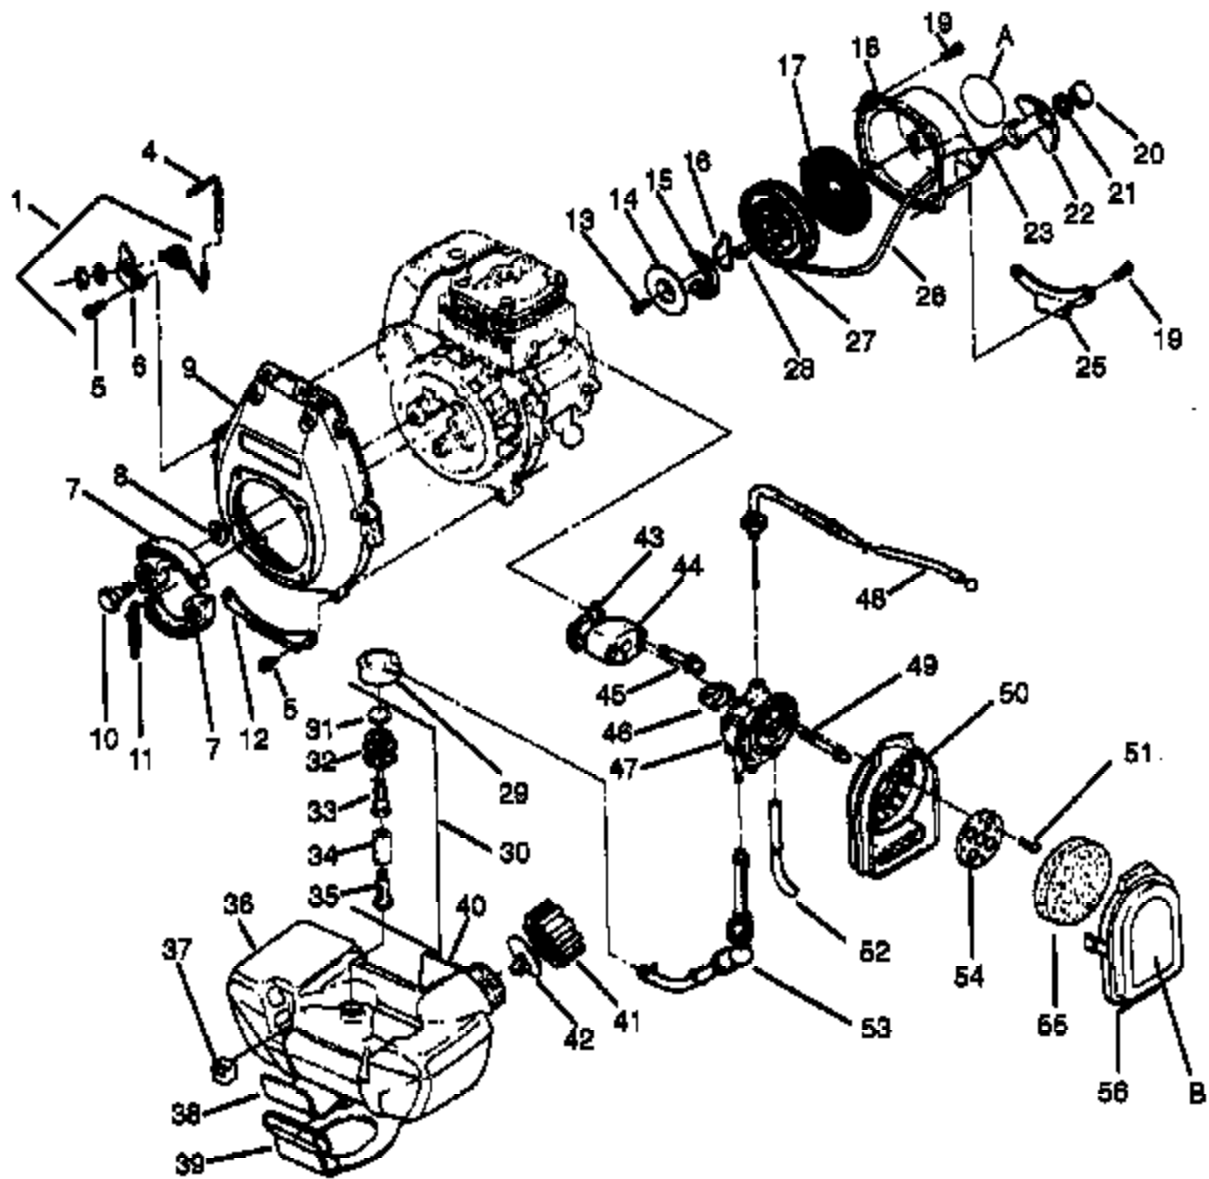

Ref #	Part Number	Qty	Description
1	530094087		Switch Stop
4	530094089		Lead Wire Switch
5	530094047		Screw
6	530094088		Bracket
7	530094038		Clutch Shoe
8	530094040		Washer
9	530094041		Crankcase./Fan Hsg. Ass'y. on Page 3)
10	530094037		Clutch Pin
11	530094039		Spring
12	530094064		Bracket
13	530094128		Screw
14	530094129		Cover
15	530094130		Recoil Pawl
16	530094131		Recoil Spring
17	530094134		Recoil Spring
18	530094032		Recoil Starter Ass'y. (Inc.13-17,23,26-28)
19	530094034		Screw
20	530094138		Cap
21	530094206		Washer
22	530094136		Handle
23	530094139		Guide
25	530094063		Bracket
26	530069232		Rope Kit
27	530094133		Recoil Reel
28	530094132		Spring
29	530094183		Tank Cap Strainer
30	530094061		Fuel Strainer Ass'y. (Inc. #31-35)
31	530094179		Filter
32	530094182		Tube
33	530094181		Clip
34	530094178		Element
35	530094180		Weight
36	530094058		Fuel Tank Ass'y. (Inc. #41 & 42)
37	530094065		Fuel Tank Damper
38	530094067		Fuel Tank Damper
39	530094066		Fuel Tank Band
40	530094068		Fuel Tank Damper
41	530094059		Tank Cap
42	530094060		Breather Cap
43	530094055		Gasket
44	530094054		Insulator
45	530094057		Screw
46	530094056		Gasket
47	530094053		Carb. Ass'y.
48	530094052		Throttle Cable
49	530094125		Screw
50	530094006		Air Cleaner Case
51	530094010		Screw
52	530094126		Line
53	530094196		Pump
54	530094009		Plate
55	530094008		Air Cleaner
56	530094007		Cap
A	530027046		YP200
A	530027152		XR-200 (Not a serviceable part)
A	530029147		PP200

PP200 Gas Engine, 7 of 10  
EXTERIOR POWER UNIT


---

Ref #	Part Number	Qty	Description
B	530026678		YP200 & XR-200-Type 1
B	530027383		YP200 & XR-200-Type II; PP200 Type 1

---

PP200 Gas Trim Page 8 of 10  
EXTERIOR POWER UNIT



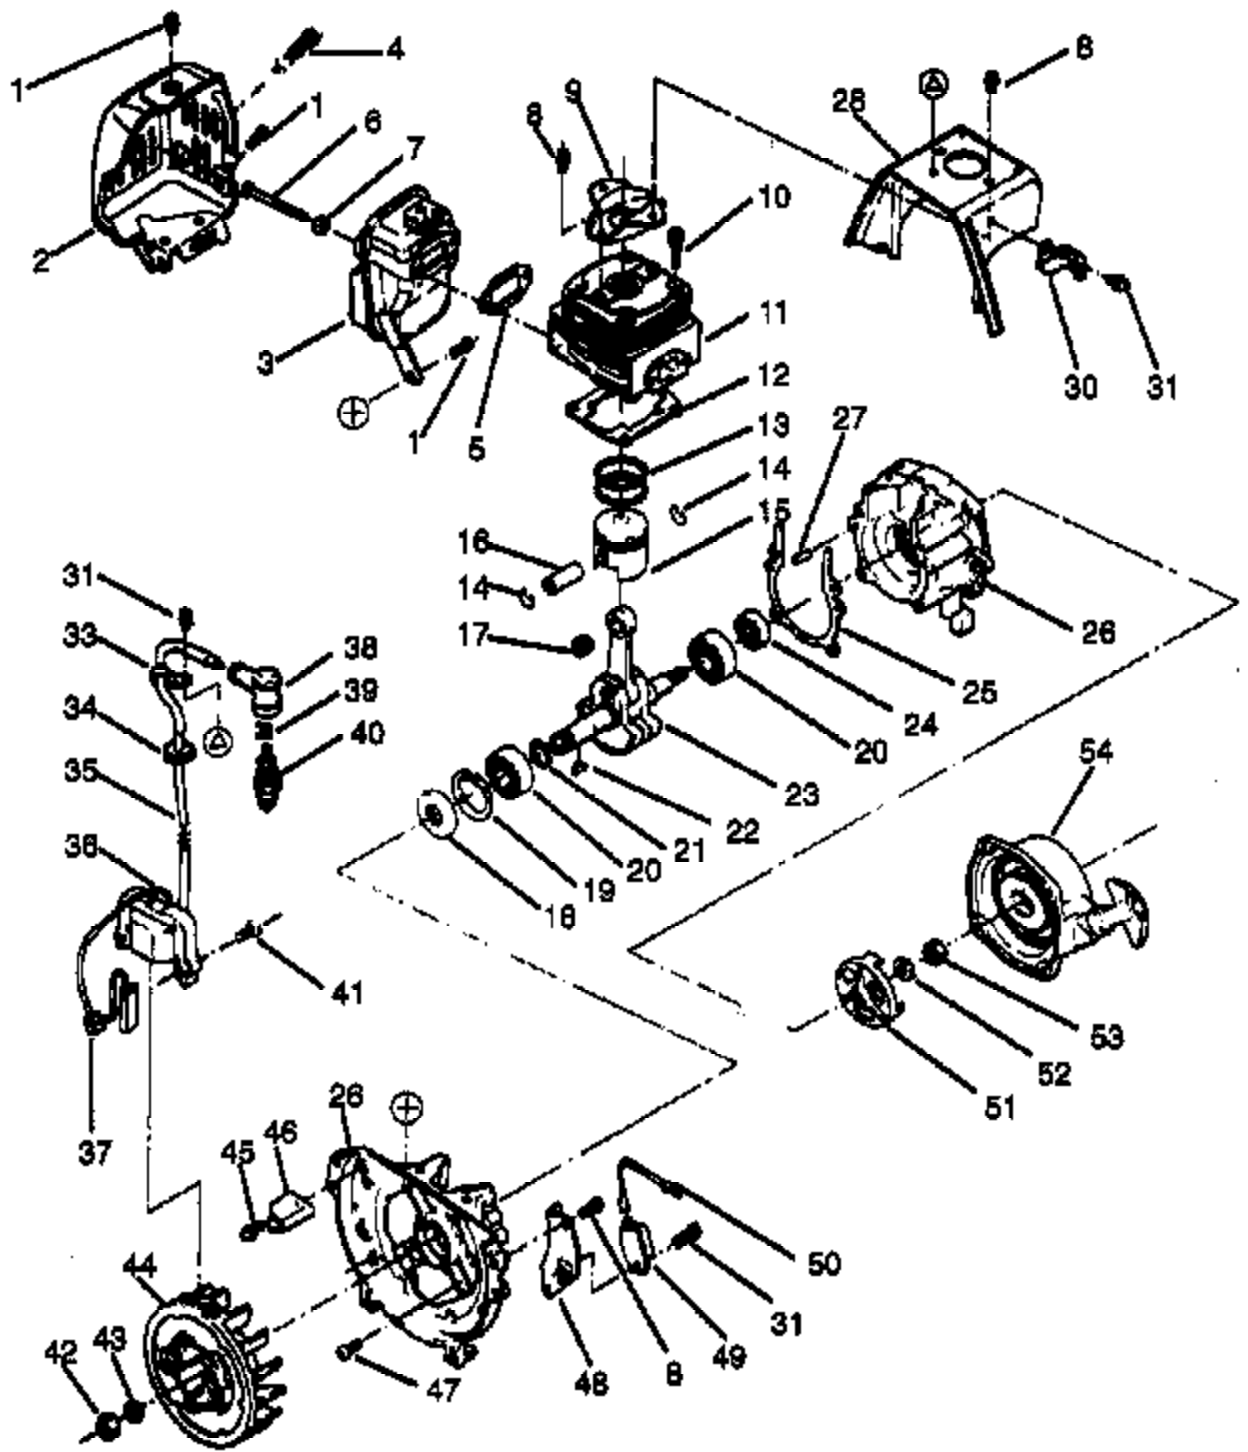

Ref #	Part Number	Qty	Description
1	530094014		Screw
2	530094124		Muffler Cover
3	530094011		Muffler Ass'y.
4	530094428		Spark Arrestor
5	530094012		Gasket
6	530094013		Bolt
7	530015181		Washer
8	530094020		Screw
9	530094019		Bracket
10	530094005		Bolt
11	530094003		Cylinder
12	530094004		Gasket
13	530094023	PP200 Gas Engine 10 of 10	Piston Ring Set
14	530094025	INTERIOR POWER UNIT	Snap Ring
15	530094022		Piston
16	530094024		Piston Pin
17	530094027		Bearing
18	530094045		Seal
19	530094049		Snap Ring
20	530094044		Bearing
21	530094028		Shim(0.1mm)
21	530094029		Shim(0.2mm)
21	530094030		Shim((0.4mm)
21	530094031		Shim(0.6mm)
22	530094083		Crankshaft Key
23	530094026		Crankshaft Ass'y. (Inc. #17)
24	530094046		Seal
25	530094043		Gasket
26	530094041		Crankcase/Fan Hsg. Ass'y.
27	530094042		Pin
28	530094018		Cylinder Cover
30	530094075		Clamp
31	530094081		Screw
33	530094076		Clamp
34	530094078		Grommet
35	530094079		High Tension Wire
36	530094072		Coil
37	530094077		Grommet
38	530094085		Cap
39	530094086		Spring
40	530094084		Spark Plug
41	530094080		Bolt
42	530094082		Nut
43	530094074		Washer
44	530094071		Flywheel
45	530094021		Screw
46	530094017		Plate
47	530094048		Screw
48	530094016		Igniter Cover
49	530094073		Igniter
50	530094184		Lead Wire Switch
51	530094033		Pulley
52	530094036		Washer
53	530094035		Nut
54	530094032		Recoil Starter Ass'y.