


Models 556 & 586

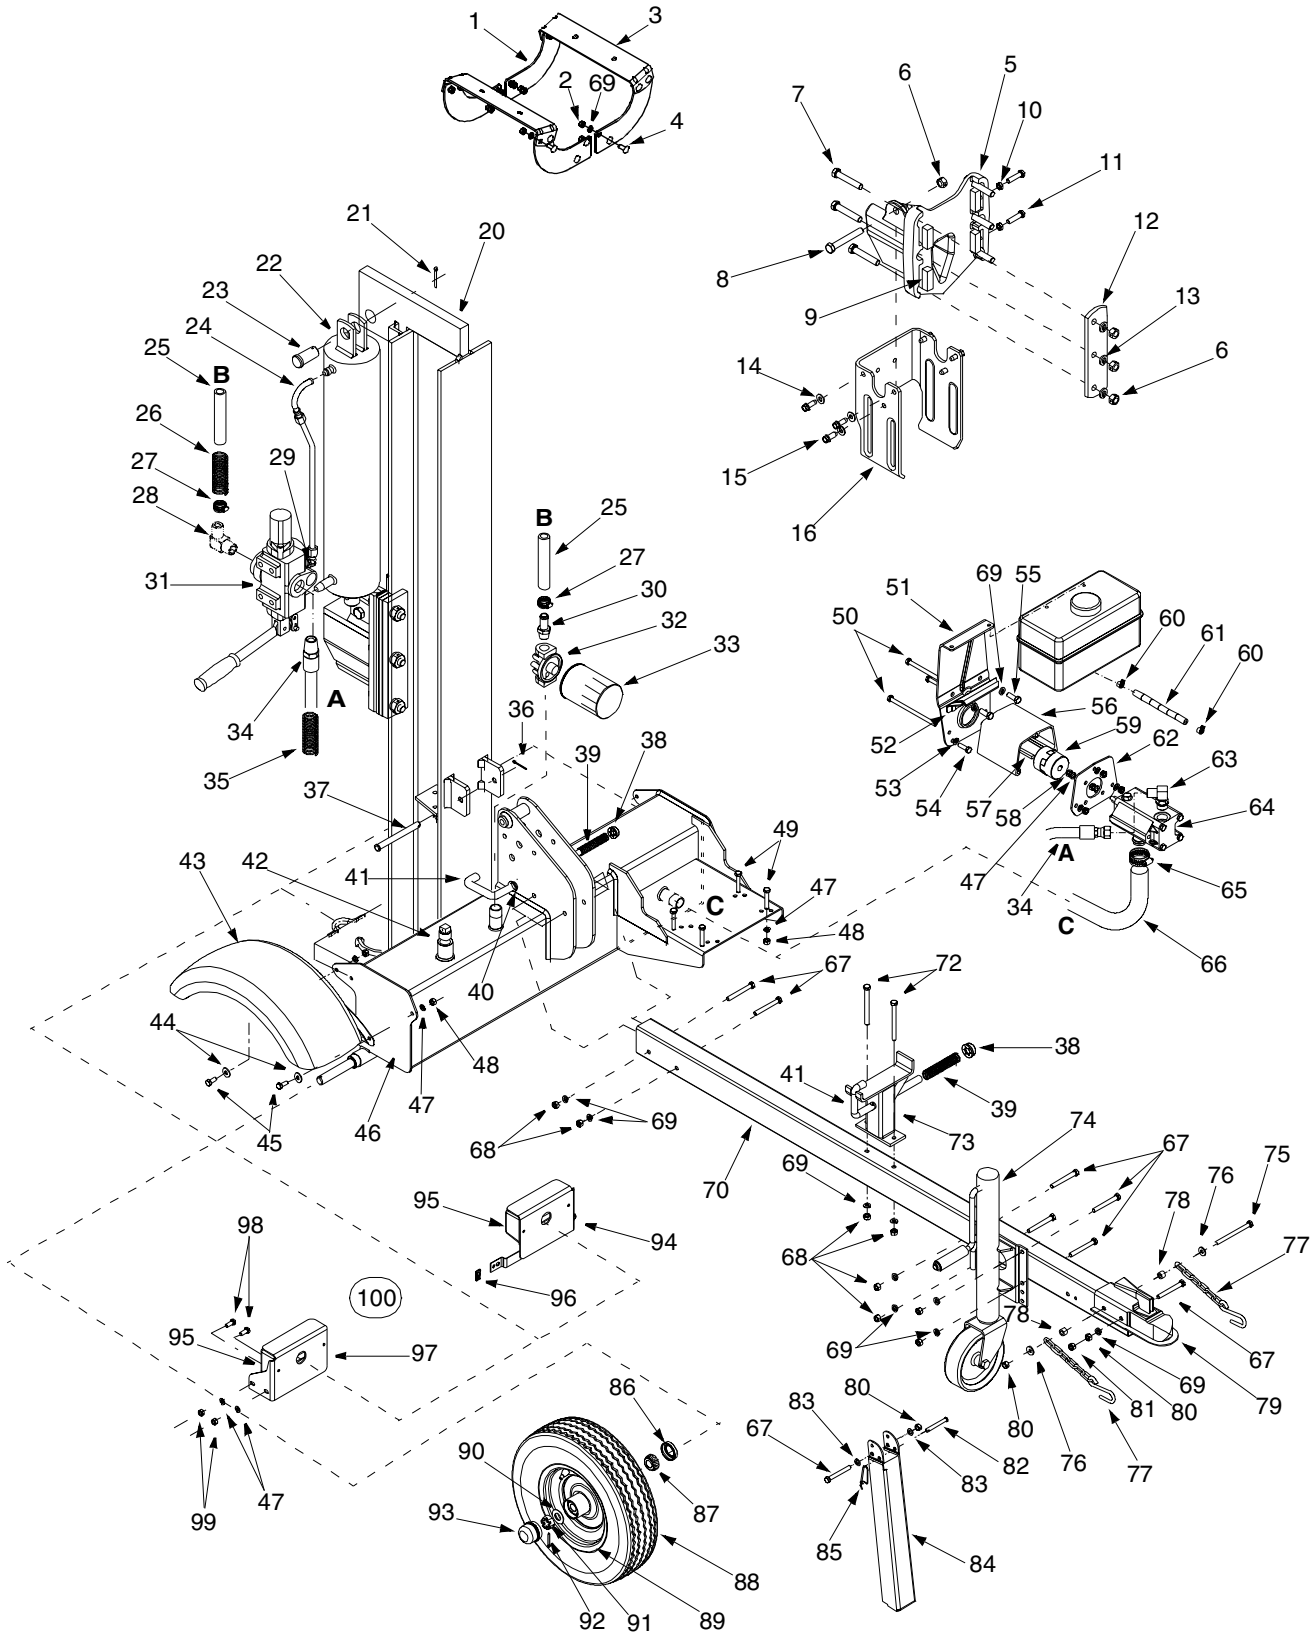

Models 556 & 586

Ref. No.	Part No.	Part Description	Ref. No.	Part No.	Part Description
1.	781-0686	Log Tray Bracket	54.	710-0117	Hex Cap Screw 5/16-24 x 1.0
2.	712-0431	Flanged Lock Nut 3/8-16	55.	710-0514	Hex Cap Screw 3/8-16 x 1.0
3.	781-0682	Log Tray	56.	719-0315	Shoulder Spacer
4.	710-3097	Carriage Bolt 3/8-16 x 1.0	57.	714-0114	Key
5.	719-0550	Wedge Assembly	58.	712-0123	Hex Screw 5/16
6.	712-0239	Lock Nut 1/2-20	59.	718-0685	Flex Coupling
7.	710-1018	Hex Cap Screw 1/2-20 x 2.75	60.	726-0205	Hose Clamp
8.	710-0515	Hex Cap Screw 1/2-20 x 3.50	61.	751-0535	Fuel Line Hose
9.	781-0351	Adjustable Gib	62.	781-0097	Rear Coupling Support Bracket
10.	712-0711	Hex Jam Nut 3/8-24	63.	737-0264	Adapter 7/8-14
11.	710-0459A	Hex Cap Screw 3/8-24 x 1.5	64.	718-0684	Pump (16 gmp)
12.	781-0790	Back Plate	65.	726-0174	Hose Clamp
13.	736-0921	Lock Washer 1/2	66.	727-0451	Suction Hose
14.	736-0300	Flat Washer .406 ID x .875 OD	67.	710-0521	Hex Cap Screw 3/8-16 x 3.0
15.	710-0654A	Hex Washer Screw 3/8-16 x 1.0	68.	712-0798	Hex Nut 3/8-16
16.	781-1048	Dislodger	69.	736-0169	Lock Washer 3/8
20.	681-0129A	Beam Assembly	70.	781-0680A	Tube
21.	714-0211	Cotter Pin	72.	710-0411	Hex Cap Screw 3/8-16 x 4.0
22.	718-0313	Hydraulic Cylinder	73.	681-0110	Support Beam Assembly
23.	711-1135	Clevis Pin	74.	681-0006	Adjustable Jack Stand †
24.	727-0471	Hydraulic Tube	75.	710-0944	Hex Cap Screw 3/8-16 x 4.25
25.	727-0443	Return Hose 3/4" ID x 44" Lg.	76.	736-0262	Flat Washer .385 ID x .870 OD
26.	781-0526	Hose Guard †	77.	713-0433	Chain
27.	726-0132	Hose Clamp 5/8"	78.	750-0497	Spacer
28.	737-0153	Return Elbow	79.	727-0311	Hitch Coupler
29.	737-0192	90 Degree Solid Male Adapter	80.	712-0375	Lock Nut 3/8-16
30.	737-0235	3/4" Hose Adapter	81.	712-0169	Hex Jam Nut 3/8-16
31.	718-0481	Control Valve	82.	711-0813	Clevis Pin
32.	737-0316	Filter Housing	83.	736-0185	Flat Washer
33.	723-0405	Oil Filter	84.	781-0162	Jack Stand
34.	727-0502	High Pressure Hydraulic Hose	85.	732-0194	Spring Pin
35.	781-0538	Hose Guard †	86.	721-0168	Bearing Seal
36.	714-0470	Cotter Pin 1/8"	87.	741-0987	Bearing Cone
37.	738-0805	Hinge Pin 1/2 x 4.8" Lg.	88.	634-0186	Wheel Assembly
38.	726-0214	Push Cap	89.	634-0180	Rim Assembly
39.	732-0583	Compression Spring 4"	90.	736-0351	Flat Washer .76" ID x 1.5" OD
40.	736-0116	Flat Washer .635 ID x .93 OD	91.	712-0359	Slotted Nut 3/4-16
41.	781-0690	Locking Rod	92.	714-0162	Cotter Pin 5/32" x 1-1/4" Lg.
42.	737-0348	Vented Dipstick	93.	734-0873	Hub Cap
	737-0236	Pipe Plug	94.	681-0074	Light Bracket Assembly LH †
43.	781-04000	Fender Assembly	95.	625-0009	Tail Light Assembly †
44.	736-0159	Washer 5/16	96.	712-0292	Nut 1/4-20
45.	710-0157	Hex Cap Screw 5/16-24 x .75	97.	781-0624	Light Bracket Assembly RH †
46.	681-0178	Frame Assembly 7.0 Gal	98.	710-0157	Hex Cap Screw 5/16-24 x .75
47.	736-0119	Lock Washer 5/16	99.	712-0123	Hex Nut 5/16-24
48.	712-0123	Hex Nut 5/16-24	100.	OEM-290-004	Taillight Kit †
49.	710-0409	Hex Cap Screw 5/16-24 x 1.75		725-2061	RH Taillight Assembly
50.	710-1253	Hex Cap Screw 5/16-24 x 5.25		725-2062	LH Taillight Assembly
51.	781-0535	Fuel Tank Mounting Bracket		725-2063	Wiring Harness
52.	781-0536	Fuel Tank Mounting Bracket			

† If equipped